

# Windows Driver Install

## NOTE

- The dedicated driver must be installed in the computer before this unit is connected to a computer. Operation will not occur correctly if connected to the computer before the dedicated driver has been installed. Moreover, if the computer is running Windows XP as its OS, the computer's speed will decrease significantly,
- Operation may fail in some computer hardware and software configurations.


\* For MAC, the provided standard driver works.  
You do not have to install a dedicated driver.

In the following procedures, images on Windows7 are shown as an example.

1. Check your computer specifications (32bit / 64bit) and double-click the appropriate installer.  
The installation starts.



2. The language selection menu is displayed. Select the desired language and click [OK].

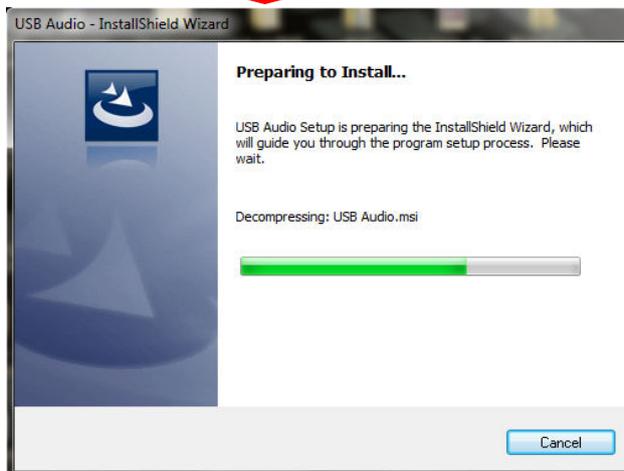


3. The wizard menu is displayed. Click [Next].




4. The software license agreement menu is displayed.  
Select [I accept the terms in the license agreement] and click [Next]




5. The installation start menu is displayed.  
Click [Install].

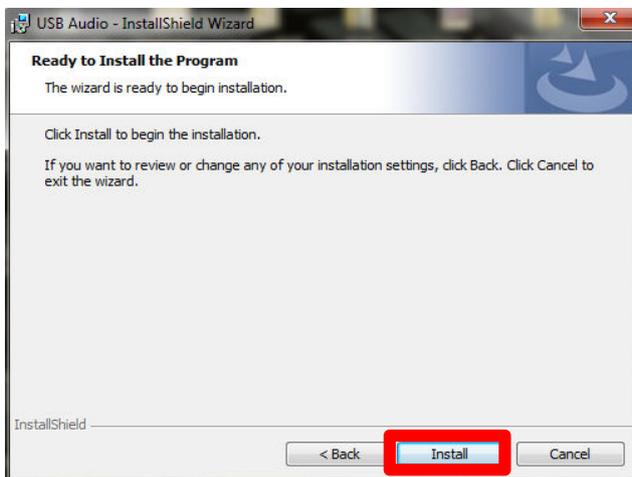

6. The installation starts. Do not perform any operation on the computer until the installation is completed.

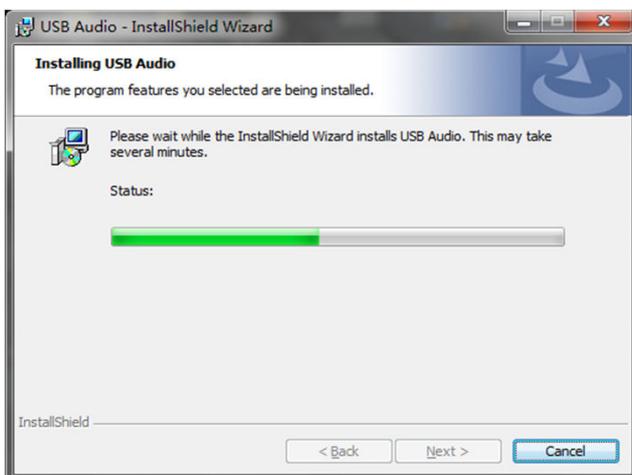

7. When the installation is completed, click [Finish]. The driver is now installed.

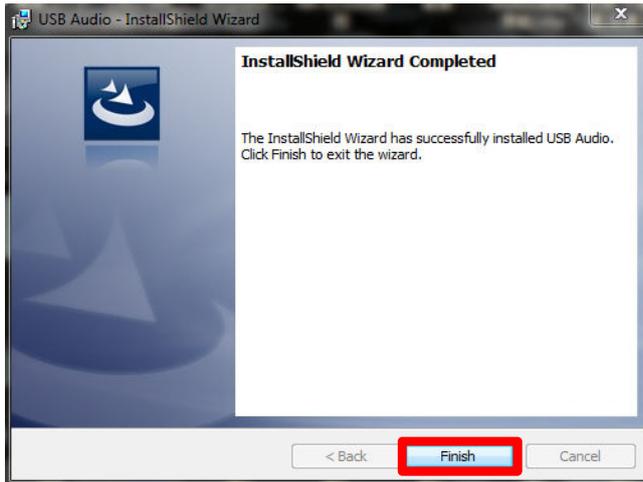


8. According to "Connecting and playing back from a computer (USB)" in the Owner's Manual, connect the computer to this unit. The driver is automatically installed.


9. Check that they are properly connected and perform setup. (Operation check and setup)

1) Check the connection. (Connection check)


① Click the [Start] button and click [Control Panel].

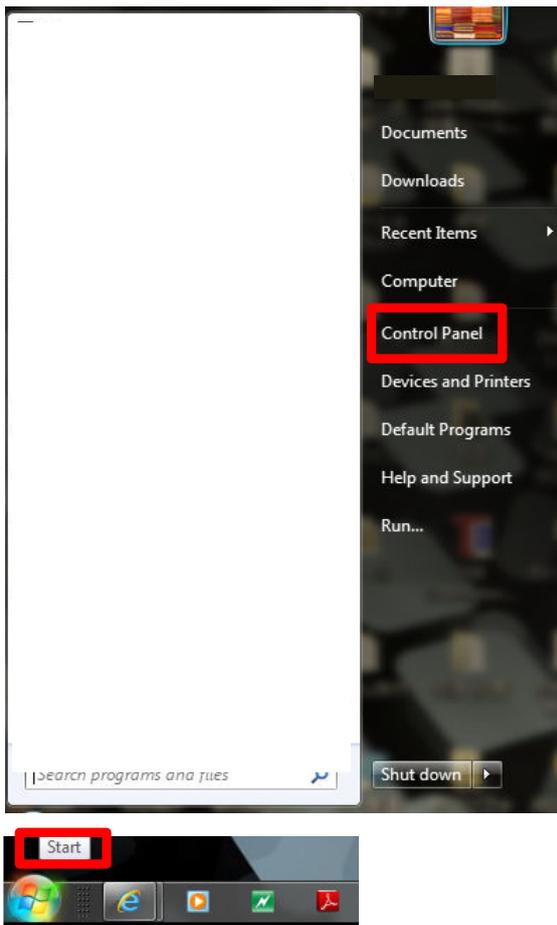

②Click the [Sound] icon.

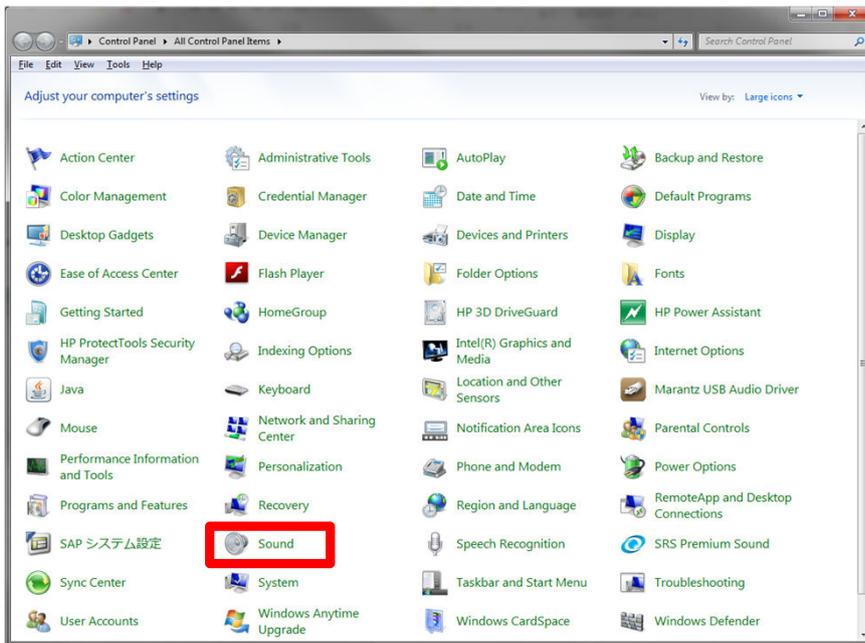


③Check that there is a checkmark next to [Default Device] under [Marantz USB Audio] in [Speakers] of the [Playback] tab.  
When there is a checkmark for a different device, click [Marantz USB Audio] and [Set Default].

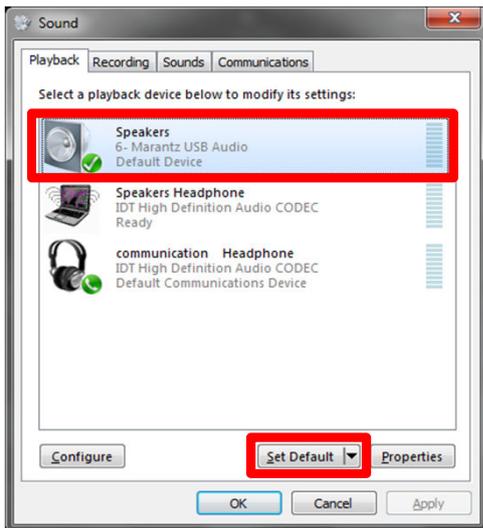


2) Make changes for optimal settings. (Sample rate and bit depth settings)

①Select [Speakers] and click [Properties].

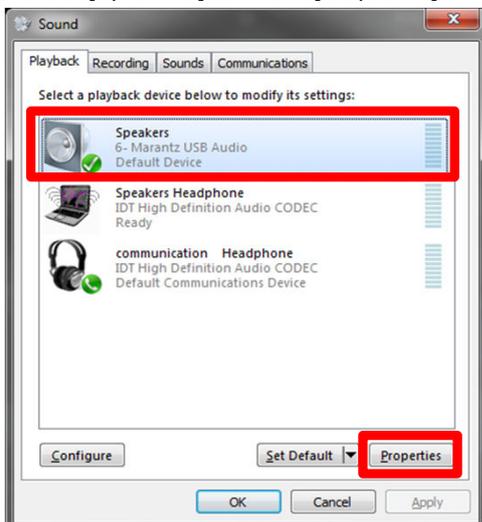

- ② Select the [Advanced] tab and set the desired sample rate and bit depth from the [Default Format] pulldown menu. Then, click [Apply].  
\* The audio is resampled and output according to the sample rate and bit depth set for this item.

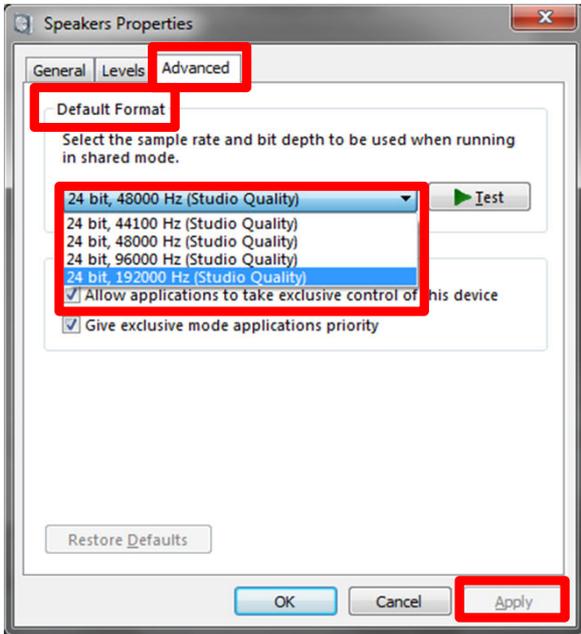

- ③ Click [Test]. If the audio is output from the set, the setup is completed.

