

marantz®

Model MOUNT20 User Guide

For VP-11/12/15 Series Projector

IMPORTANT SAFETY INSTRUCTIONS READ BEFORE INSTALLING EQUIPMENT

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

1. Read instructions - All the safety and operating instructions should be read before the product is operated.
2. Retain instructions - The safety and operating instructions should be retained for future reference.
3. Heed warnings - All warnings on the product and in the operating instructions should be adhered to.
4. Follow instructions - All installation instructions should be followed.
5. Use only the parts provided with the mount, along with any parts (commercially available) that are specified in this manual.
6. Do not modify the mount or the parts provided with the mount.
7. Do not use damaged parts. If any parts become damaged, contact your dealer.
8. All bolts and screws must be tightened securely.
9. Make sure not to block any ventilation openings when installing the projector.
10. Special techniques and experience are required when installing the projector with this mount. Contact your dealer to install the projector for you.
11. Once the projector is installed, safety checks should be conducted on a regular basis.

Warning

The ceiling should be capable of supporting a weight of at least five (5) times the projector(s) weight. If it cannot, the ceiling must be reinforced. Proper installation procedure by qualified personnel as outlined in the installation instructions must be adhered to. Failure to do so could result in serious personal injury.

Hardware List

- | | |
|-------------------------------------|-------------------------------------|
| 1. Four (4) 3/8 (inch) nuts | 6. One (1) Ceiling Mount #1 |
| 2. Four (4) 3/8 (inch) flat washers | 7. Two (2) Base Plate Connectors |
| 3. Two (2) 8 (mm) screws | 8. One (1) Horizontal Tilt Plate #2 |
| 4. Eleven (11) 6 (mm) screws | 9. One (1) Horizontal Tilt Plate #3 |
| 5. Eight (8) 6 (mm) rubber washers | 10. One (1) Projector Plate #4 |

Adjustment Ranges and Load Allowances

Horizontal Tilt (yaw)	+/- 10 degrees
Vertical Tilt (tilt)	+/- 20 degrees
Rotation	+/- 15 degrees
Lateral Shift	+/- 2 1/4 inches
Maximum Load Allowance	450 Lbs.

PROJECTOR MOUNT INSTALLATION INSTRUCTIONS

Step 1

Base Plate Connectors #1 and Projector Mount Ceiling Plate 1 with ceiling mounting holes #2.

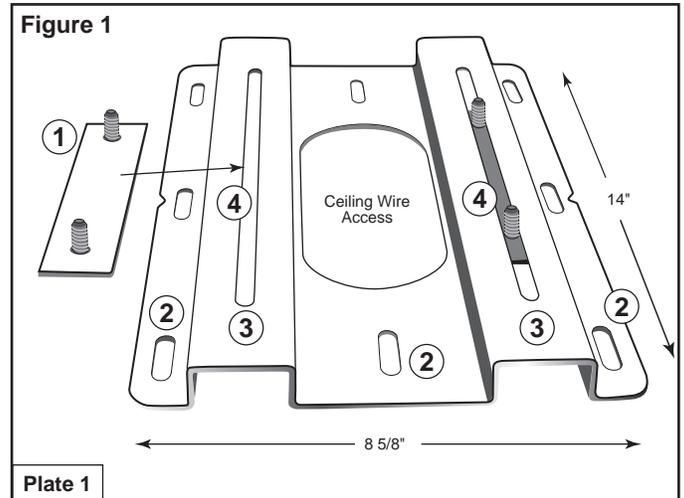


Figure 1
Base Plate Connectors #1
Projector Mount Ceiling Plate 1

Insert Base Plate connectors #1 into the lateral positioning slots #3 as shown in #4 from the underside of Plate 1. The lateral positioning slots will give you 2 1/4" inches of lateral adjustment for projector alignment.

Step 2

Horizontal Adjustment Plate 2 (Base Plate Connector Holes #3).


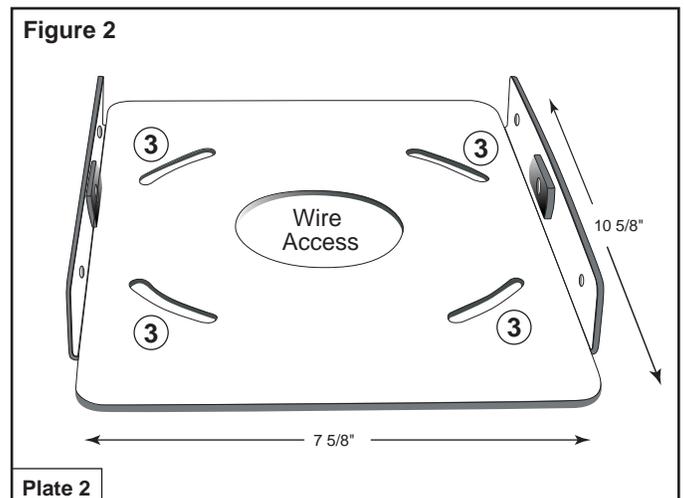


Figure 2
Plate 2

Base plate connector holes #3 provide 15 degrees of horizontal rotation adjustment. Attach horizontal adjustment Plate 2 to projector mount ceiling Plate 1 using the four (4) 3/8" (inch) nuts and washers provided.

Step 2 B

Horizontal Adjustment Plate 2 (Figure 2) attached to Projector Mount Ceiling Plate 1.

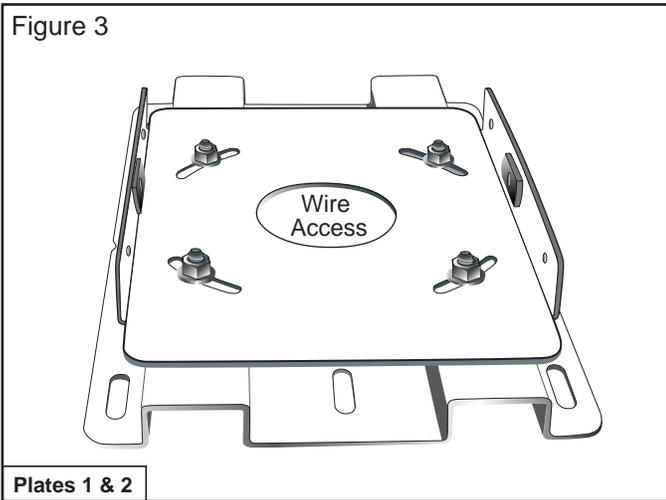


Install the combined plates (above) securely to the ceiling structure in accordance with local commercial building standards.

Use suitable hardware in adequate quantity and size depending on the installation requirements. (Please note that Projector VP-12SX weighs 28.6 lbs. (13 kgs).

Step 3 B


Horizontal Tilting Plate 3 Attached to Plates 1 and 2.

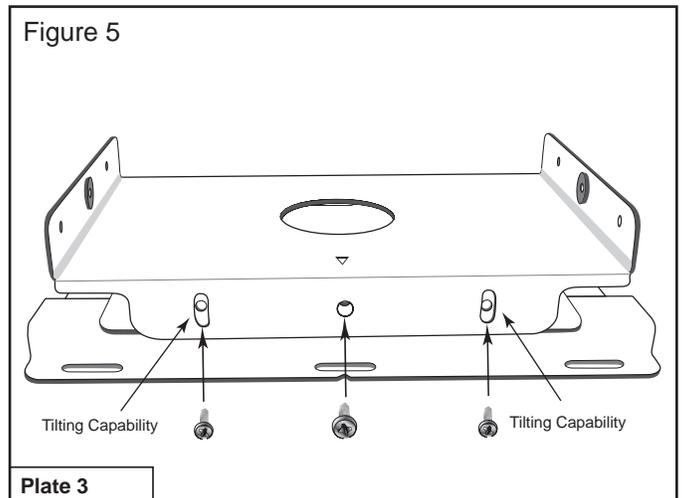

The newly combined Plate 3 provides 10° degrees of horizontal tilt. When positioned, tighten with screws provided.

Step 3


Horizontal Tilting Plate 3

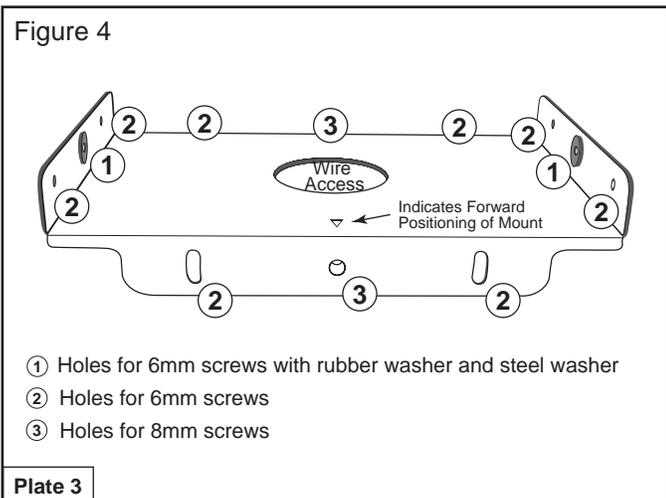

Attach Horizontal Tilting Plate 3 to the previously combined plates (already installed on ceiling) using the two (2) 8 (mm) screws and four (4) 6 (mm) screws provided, as indicated in Figure 4. Install two (2) 6 (mm) screws with rubber spacers and metal washers into the welded metal studs (indicated #1).


Step 4

Projector Mounting Plate 4

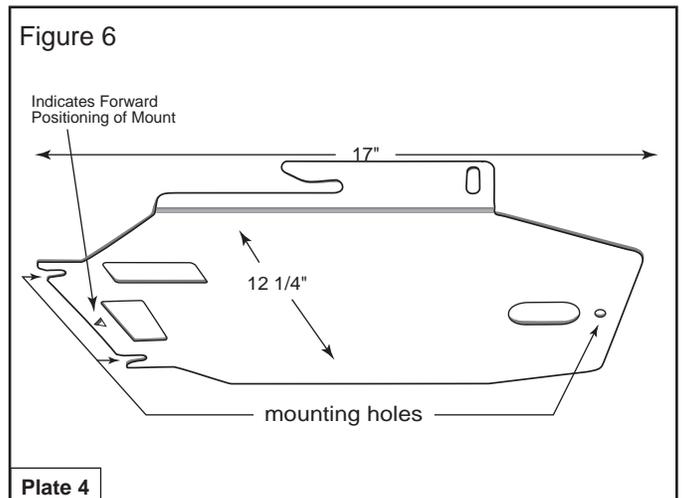


Invert the projector and place it on a soft and flat surface. Align the three (3) rubber spacers provided with the three (3) 6(mm) mounting holes on the projector and secure with three (3) 6(mm) screws provided.

Step 4 B
Projector Mounting Plate 4 (continued)

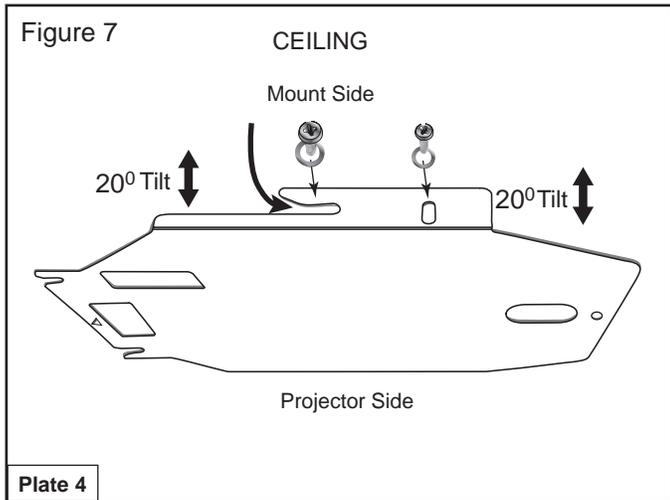


Projector Mounting Plate 4 connected to Mounting Plate 3

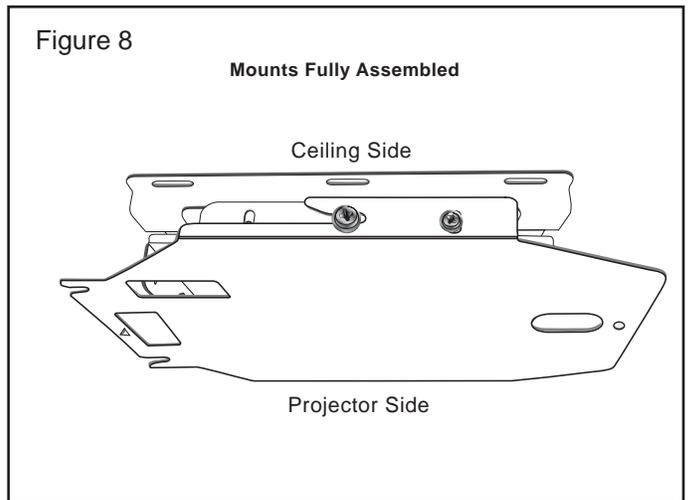

Work in a group of 2 or more to carry the projector and follow manufacturer's guidelines for relocating as stated in the VP-12SX owner's manual.

Lift and slide the projector onto the 6 (mm) screws previously installed in the metal studs of the plate on the ceiling (see arrow in Figure 7). Tighten the 6 (mm) screws on both sides of the mount and install four (4) 6 (mm) screws and washers into the side of the projector Mounting Plate 4.

Sequence of Assembly of Projector Mounting Plates

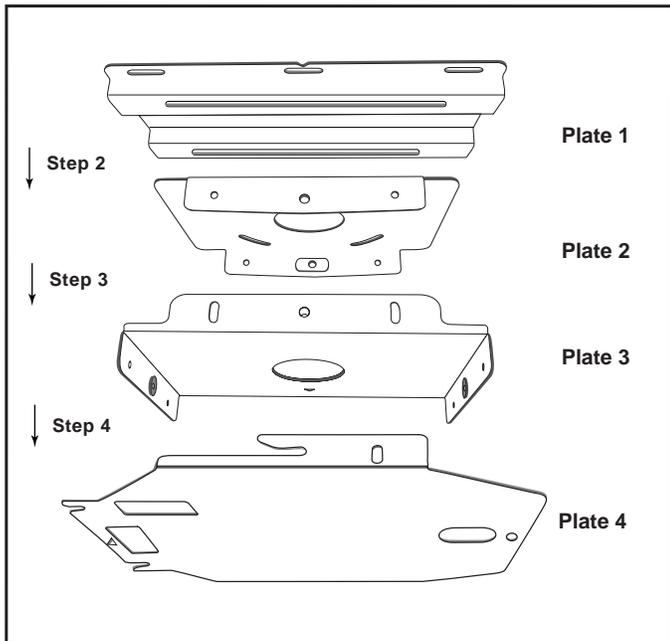


marantz®


100 Corporate Drive
 Mahwah, NJ 07430
 Phone: 201 762-6500

You can find your nearest authorized distributor or dealer
 on our website at: www.marantz.com

 
Base Plate Connectors



TOP VIEW
PLATE #1

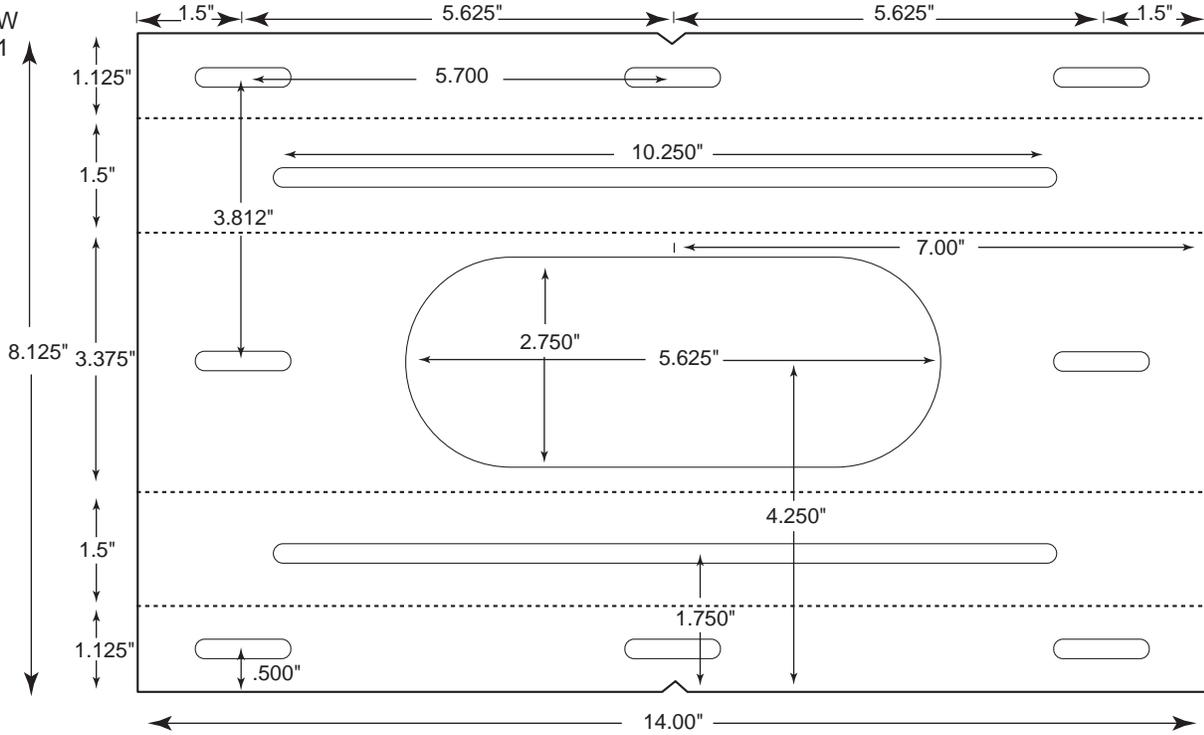

END VIEW
PLATE #1

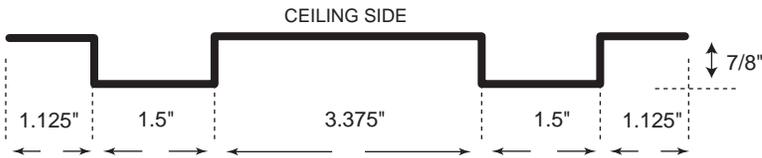

marantz

100 Corporate Drive,
Mahwah, NJ 07430
Phone: 201 762-6500

You can find your nearest authorized distributor or dealer
on our website at: www.marantz.com

MOUNT20 Dimensions

