



marantz®

CD Player
CD6005

Getting Started

Mise en route

Antes de empezar

ENGLISH

FRANÇAIS

ESPAÑOL

Welcome

Thank you for choosing a Marantz CD player. This guide provides step-by-step instructions for setting up your CD player.

If you have setup problems:

If you need additional help in solving problems, contact Marantz customer service in your area.

For details, see the Marantz homepage. www.marantz.com

1-855-ONE-MARANTZ

1-855-663-6272

 
 
 
Call for Assistance: 9:00AM to 8:00PM M-F E.S.T.

For frequency asked questions please visit
<http://marantz.custhelp.com/app/answers/list>

For US and Canada only

Before You Begin

What's In the Box

 Getting Started	 Owner's Manual	 Safety Instructions
 CD player	 Power cord	
 Audio cable	 Remote connector cable	
 Remote control unit	 R03/AAA batteries	 Warranty (for USA) (for CANADA)


Setup

There are five steps to the setup process.


- 1** Install batteries in the remote control unit
- 2** Connect the CD player to the amplifier
- 3** Plug the power cord into a power outlet
- 4** Turn the CD player's power on
- 5** Begin music playback
 - ▶ Play a CD
 - ▶ Play an iPod
 - ▶ Play from a USB memory device

1


Install batteries in the remote control unit

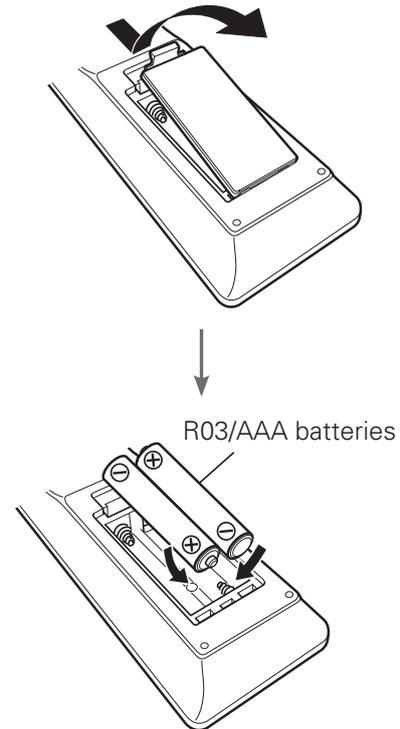


2 Connect the CD player to the amplifier

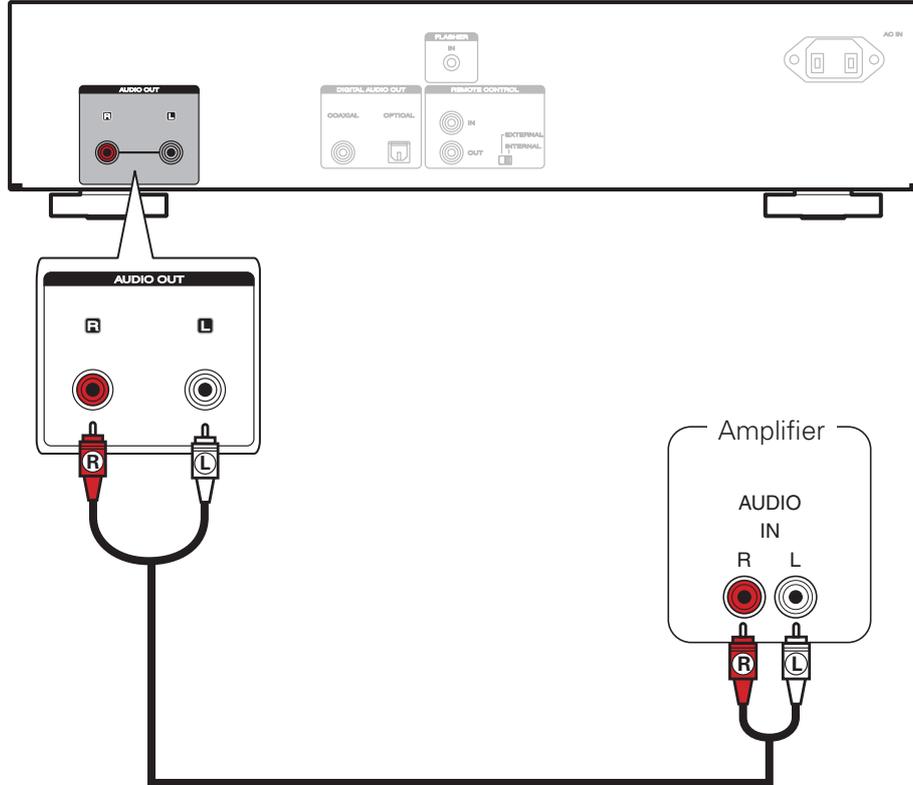

3 Plug the power cord into a power outlet

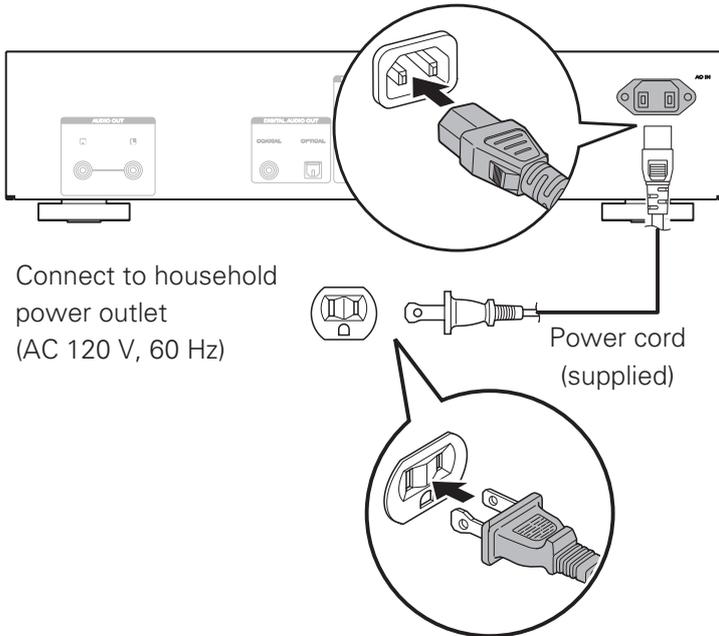


4 Turn the CD player's power on

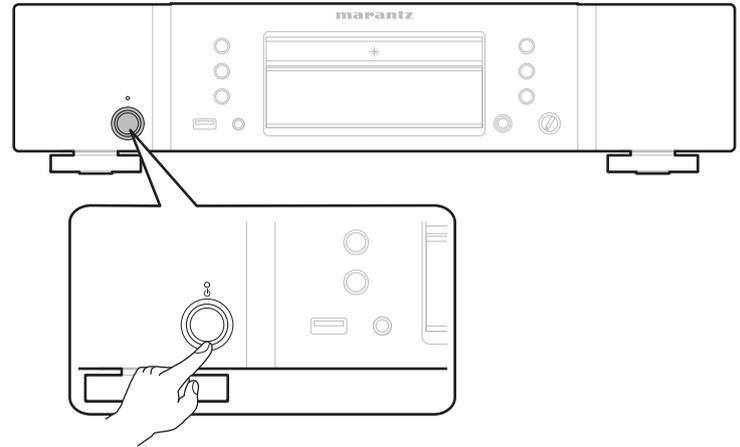


5 Begin music playback

▶ Play a CD

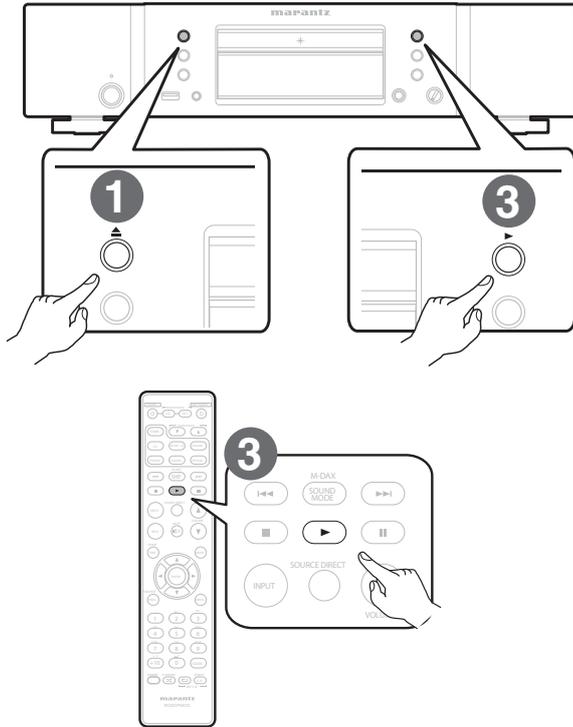



1 Press  to open the disc tray.


2 Place CD in the disc tray.

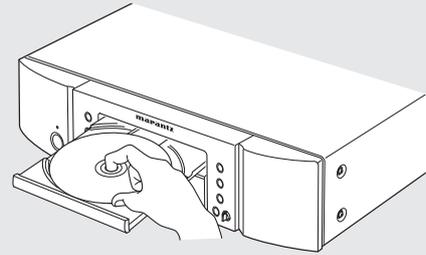

3 Press .
Playback starts.




► Play an iPod

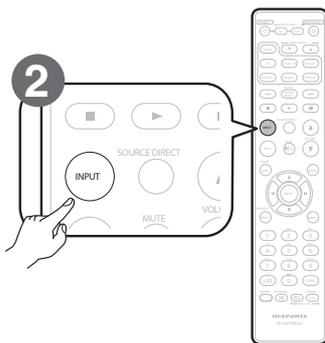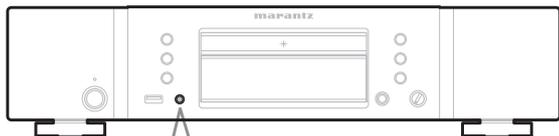


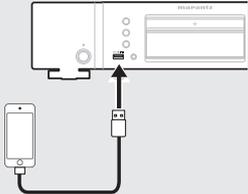- 1** **Connect the iPod to the USB port.**
- 2** **Press INPUT to select the playback media mode to “USB”.**
 -  You can also select the playback media mode by pressing DISC/INPUT on the unit.
- 3** **Operate iPod itself directly while seeing the iPod screen to play back music.**

Playback starts.

▶ Play from a USB memory device

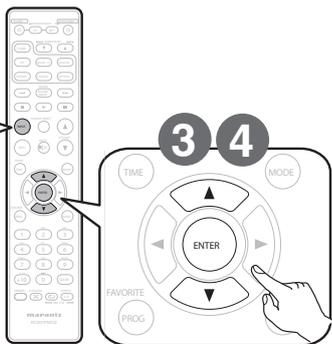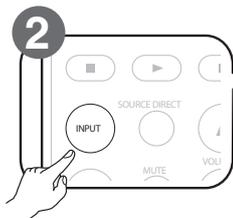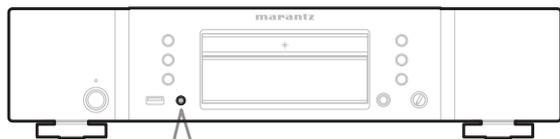


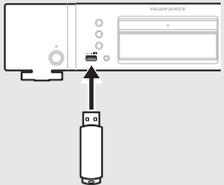- 1** Connect the USB memory device to the USB port. 
- 2** Press **INPUT** to select the playback media mode to “USB”.
 -  You can also select the playback media mode by pressing DISC/INPUT on the unit.
- 3** Use Δ / ∇ to select the folder, then press **ENTER**.
- 4** Use Δ / ∇ to select the file, then press **ENTER**.
Playback starts.


Owner's Manual

The included CD-ROM contains an Adobe PDF version of the full owner's manual for the CD player.
Please reference this manual for more details about the setup and operation of the CD player and its features.

1 Insert the disc into your PC.

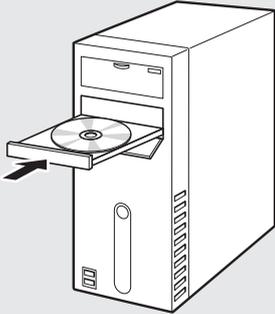

2 Follow the screen or double click on the PDF file.

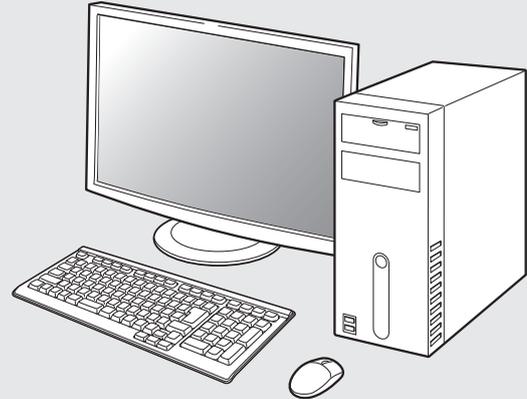

www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

marantz[®] is a registered trademark.

D&M Holdings Inc.
Printed in China 5411 11116 00AM