



marantz[®] AV Surround Receiver
NR1601

User Guide

SAFETY PRECAUTIONS



CAUTION



RISK OF ELECTRIC SHOCK

DO NOT OPEN

CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



CAUTION:

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.

The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

PRECAUTION:

Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale.

La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement.

PRECAUCIÓN:

Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared.

El enchufe de la alimentación eléctrica se utiliza para interrumpir por completo el suministro de alimentación eléctrica a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso.

FCC INFORMATION (For US customers)

1. PRODUCT

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by Marantz may void your authority, granted by the FCC, to use the product.

3. NOTE

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

For Canadian customers:


This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

□ NOTES ON USE / OBSERVATIONS RELATIVES A L'UTILISATION / NOTAS SOBRE EL USO

WARNINGS	AVERTISSEMENTS	ADVERTENCIAS
<ul style="list-style-type: none"> • Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack. • Handle the power cord carefully. Hold the plug when unplugging the cord. • Keep the unit free from moisture, water, and dust. • Unplug the power cord when not using the unit for long periods of time. • Do not obstruct the ventilation holes. • Do not let foreign objects into the unit. • Do not let insecticides, benzene, and thinner come in contact with the unit. • Never disassemble or modify the unit in any way. • Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths or curtains. • Naked flame sources such as lighted candles should not be placed on the unit. • Observe and follow local regulations regarding battery disposal. • Do not expose the unit to dripping or splashing fluids. • Do not place objects filled with liquids, such as vases, on the unit. • Do not handle the mains cord with wet hands. • When the switch is in the OFF position, the equipment is not completely switched off from MAINS. • The equipment shall be installed near the power supply so that the power supply is easily accessible. 	<ul style="list-style-type: none"> • Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère. • Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon. • Protéger l'appareil contre l'humidité, l'eau et la poussière. • Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes. • Ne pas obstruer les trous d'aération. • Ne pas laisser des objets étrangers dans l'appareil. • Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil. • Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre. • Ne pas recouvrir les orifices de ventilation avec des objets tels que des journaux, nappes ou rideaux. Cela entraverait la ventilation. • Ne jamais placer de flamme nue sur l'appareil, notamment des bougies allumées. • Veillez à respecter les lois en vigueur lorsque vous jetez les piles usagées. • L'appareil ne doit pas être exposé à l'eau ou à l'humidité. • Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil. • Ne pas manipuler le cordon d'alimentation avec les mains mouillées. • Lorsque l'interrupteur est sur la position OFF, l'appareil n'est pas complètement déconnecté du SECTEUR (MAINS). • L'appareil sera installé près de la source d'alimentation, de sorte que cette dernière soit facilement accessible. 	<ul style="list-style-type: none"> • Evite altas temperaturas. Permite la suficiente dispersión del calor cuando está instalado en la consola. • Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía. • Mantenga el equipo libre de humedad, agua y polvo. • Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo. • No obstruya los orificios de ventilación. • No deje objetos extraños dentro del equipo. • No permita el contacto de insecticidas, gasolina y diluyentes con el equipo. • Nunca desarme o modifique el equipo de ninguna manera. • La ventilación no debe quedar obstruida por haberse cubierto las aperturas con objetos como periódicos, manteles o cortinas. • No deberán colocarse sobre el aparato fuentes inflamables sin protección, como velas encendidas. • A la hora de deshacerse de las pilas, respete la normativa para el cuidado del medio ambiente. • No exponer el aparato al goteo o salpicaduras cuando se utilice. • No colocar sobre el aparato objetos llenos de líquido, como jarros. • No maneje el cable de alimentación con las manos mojadas. • Cuando el interruptor está en la posición OFF, el equipo no está completamente desconectado de la alimentación MAINS. • El equipo se instalará cerca de la fuente de alimentación de manera que resulte fácil acceder a ella.

□ CAUTIONS ON INSTALLATION PRÉCAUTIONS D'INSTALLATION EMPLAZAMIENTO DE LA INSTALACIÓN

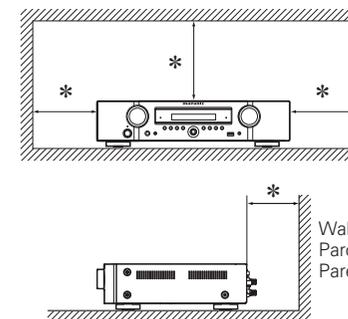

* **For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.**

- More than 0.3 m is recommended.
- Do not place any other equipment on this unit.

* **Pour permettre la dissipation de chaleur requise, n'installez pas cette unité dans un espace confiné tel qu'une bibliothèque ou un endroit similaire.**

- Une distance de plus de 0,3 m est recommandée.
- Ne placez aucun matériel sur cet appareil.

* **Para la dispersión del calor adecuadamente, no instale este equipo en un lugar confinado tal como una librería o unidad similar.**

- Se recomienda dejar más de 0,3 m alrededor.
- No coloque ningún otro equipo sobre la unidad.

Getting started

Thank you for purchasing this Marantz product. To ensure proper operation, please read this user guide carefully before using the product. After reading them, be sure to keep them for future reference.

Contents

Getting started	1
Accessories	1
About this manual	1
Features	2
Cautions on handling	2

Simple version (Simple setup guide)

Basic version

Connections	13
Important information	13
Connecting an HDMI-compatible device	14
Connecting a TV	16
Connecting a Blu-ray Disc player / DVD player	16
Connecting a set-top box (Satellite tuner/cable TV)	17
Connecting a portable audio player	17
Connecting an iPod or USB memory device to the USB Port	18
Connecting a CD player	19
Connecting other audio devices	19
Connecting an antenna	20
Connecting a wireless receiver (RX101)	20
Playback (Basic operation)	21
Important information	21
Playing a Blu-ray Disc player/DVD player	22
Playing a CD player	22
Playing an iPod®	22
Playing a USB memory device	23
Tuning in radio stations	24
Selecting a listening mode (Surround mode)	26
Multi-channel playback	26
Stereo playback	28
Direct playback	28
Dolby Virtual Speaker/Dolby Headphone playback	28

Advanced version

Speaker installation/connection (Other than 7.1-channel system with surround back speakers)	30
Install	30
Connect	31
Set up speakers	33
Connections (Advanced connection)	34
Connecting the remote control jacks	34
Playback (Advanced operation)	35
Convenient functions	35
How to make detailed settings	37
Menu map	37
Examples of on-screen display and front display	38
Inputting characters	39
Input Setup	40
Audio Adjust	45
Manual Setup	49
Information	53
Other settings	54
Remote control settings	54
Switching the on-screen display output mode	54
Operating the connected devices by remote control unit	55
Operating AV equipment	55
Registering preset codes	55
Operating components	57
Operating learn mode	58
Setting the back light	59

Information

Part names and functions	61
Front panel	61
Display	61
Rear panel	62
Remote control unit	63
Other information	65
Trademark information	65
Surround	66
Explanation of terms	70
Troubleshooting	72
Resetting the microprocessor	74
Specifications	74


List of preset codes

End of this manual

Accessories

Check that the following parts are supplied with the product.

① User guide	1
② Power cord (Cord length: Approx. 1.7 m)	1
③ Remote control unit (RC010SR)	1
④ R03/AAA batteries	2
⑤ Setup microphone (ACM1H, Cord length: Approx. 6.0 m)	1
⑥ AM loop antenna	1
⑦ FM indoor antenna	1

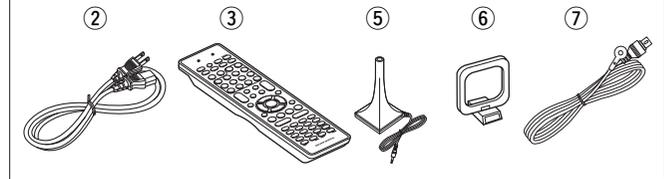

About this manual

❑ Operation buttons

The operations described in this manual are based mainly on remote control operation.

❑ Symbols



This symbol indicates a reference page on which related information is described.



This symbol indicates a supplementary information and tips for operations.

NOTE

This symbol indicates points to remember operations or function limitations.

❑ Illustrations

Note that the illustrations in these instructions are for explanation purposes and may differ from the actual unit.

Features

Fully Discrete, identical quality and power for all 7 channels (50 W x 7ch, 8Ω)

The unit is equipped with a power amplifier that plays back high-fidelity sound in surround mode with equal quality and power for all channels, true to the original sound.

The power amplifier circuit adopts a discrete-circuit configuration that achieves high-quality surround sound play back.

Supports HDMI 1.4a with 3D, ARC, Deep Color, x.v.Color, Auto Lipsync and HDMI control function

This unit can output 3D video signals input from a Blu-ray Disc player to a TV that supports a 3D system. This unit also supports the ARC (Audio Return Channel) function, which plays back TV sound with this unit via an HDMI cable used for connecting the unit and a TV*.

* The TV should support the ARC function.

4-HDMI inputs and 1-output

The unit is equipped with 4 HDMI input connectors for connecting devices with HDMI connectors, such as a Blu-ray Disc player, game machine, HD video camera, etc.

High Definition Audio Support

The unit is equipped with a decoder which supports high-quality digital audio format for Blu-ray Disc players such as Dolby TrueHD, DTS-HD Master Audio, etc.

Dolby Pro Logic IIz

The unit is provided with a Dolby Pro Logic IIz decoder. When you play back the sound in Dolby Pro Logic IIz playback with front height speakers connected to the unit, you can enjoy playback sound with rich spacial expression.

Easy to use, On-Screen Display

Simple settings are enabled with the setting menus displayed on the TV screen. When you control the sound volume, the volume level is displayed on the screen, and when you switch the input source, the name of the input source is displayed.

Auto setup function

The unit is provided with an "Auto setup function" which automatically makes speaker settings best suited for the listening environment. The sound from the speakers is picked up with the supplied microphone. Reflecting sound and audio characteristics of speakers are measured, and settings for an optimum sound field are automatically made.

Upconverting of all types of source video signals to HDMI signals

This unit is provided with functions for automatic conversion of various video signals (component video, video) that are input to this unit into HDMI signals for output to a monitor, allowing connection between this unit and a TV to be made with a single HDMI cable.

Direct Play for iPod® and iPhone® via USB

Music data from an iPod can be played back if you connect the USB cable supplied with the iPod via the USB port of this unit, and also an iPod can be controlled with the remote control unit for this unit.

M-XPort (Marantz-eXtension Port)

This unit is equipped with the M-Xport, a Marantz original innovation that provides outstanding expandability. You can connect the Wireless Receiver RX101 (sold separately) to this port.

Speaker terminal for front height channel

The unit is equipped with dedicated front height channel speaker terminals on the rear panel. You can enjoy 7.1-channel playback using the front height channel and 7.1-channel playback using the surround back channel, without having to reconnect the speakers.

Other features

- Dolby Virtual Speaker (👉 page 28)
- Dolby Headphone (👉 page 28)
- DTS Neural Surround (👉 page 26)

Cautions on handling

• Before turning the power switch on

Check once again that all connections are correct and that there are no problems with the connection cables.

- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When going on vacation or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

• About Condensation

If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

• Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If that occurs, move the mobile phone away from this unit when it is in use.

• Moving the unit

Turn off the power and unplug the power cord from the power outlet. Next, disconnect the connection cables to other system units before moving the unit.

• About Care


- Wipe the cabinet and control panel clean with a soft cloth.
- Follow the instructions when using a chemical cleaner.
- Benzene, paint thinner or other organic solvents as well as insecticide may cause material changes and discoloration if brought into contact with the unit, and should therefore not be used.

Simple version (Simple setup guide)

Here, we explain the entire setup procedure, from unboxing the unit to using it in a home theater.

The "Simple version" section provides the speaker installation, connection, and setup methods for the 7.1-channel system with surround back speakers. For the installing, connecting, and setup methods of speakers other than the 7.1-channel system (with surround back speakers), see page 30.

- ❑ Before connecting the unit, turn off the power to all devices.
- ❑ For operation of the connected devices, refer to the user manuals for each device.

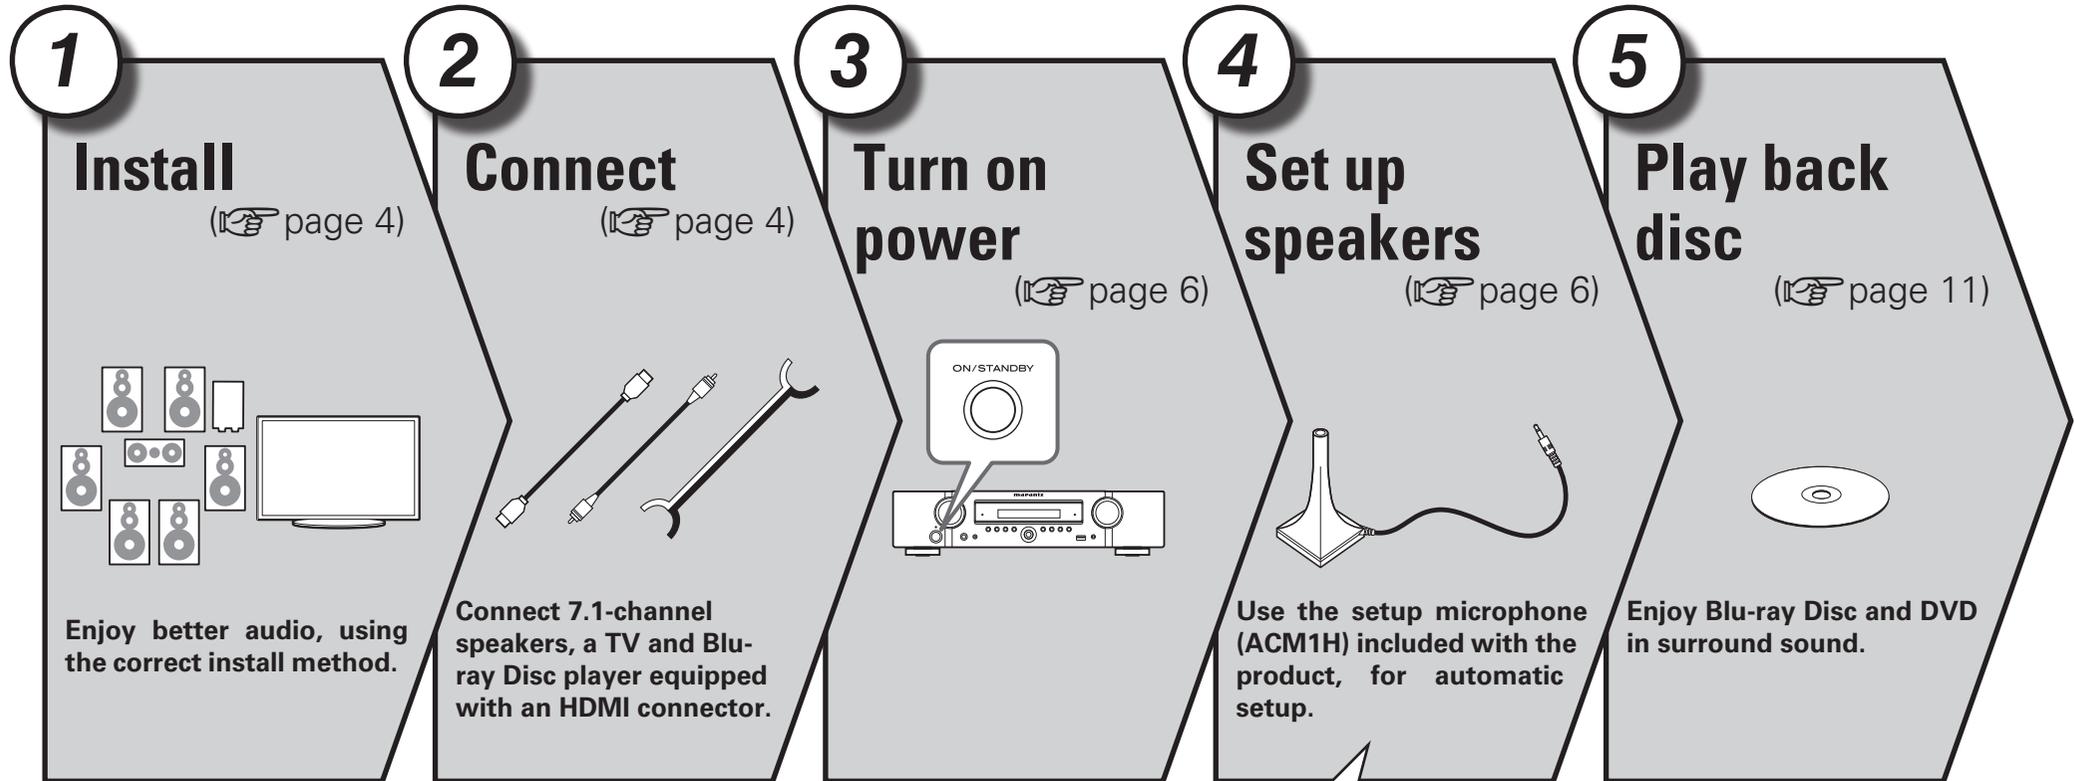

Set up speakers (Audyssey® Auto Setup)

Preparation

Step 1
Speaker
DetectionStep 2
MeasurementStep 3
CalculatingStep 4
CheckStep 5
Store


Finish

1 Install




This unit can perform 2.0/2.1 to 7.1-channel surround playback. This page provides the speaker installation procedure for the 7.1-channel playback using surround back speakers as an example.

The default setting is 7.1-channel. You can also perform 5.1-channel playback. To perform 5.1-channel playback, connect 5.1-channel speakers only. Use the Audyssey Auto Setup function of this unit to automatically detect the number of connected speakers and perform optimal settings for the speakers to be used.

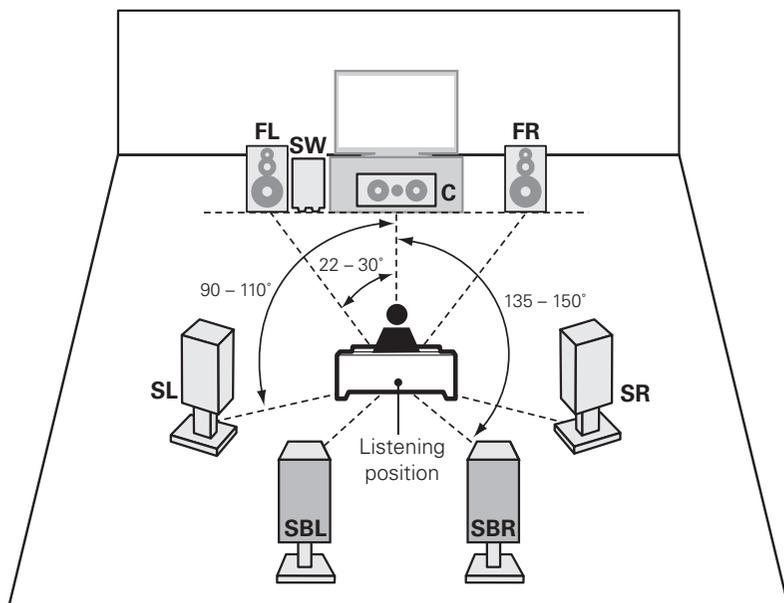

- FL** Front speaker (L)
- FR** Front speaker (R)
- C** Center speaker
- SW** Subwoofer
- SL** Surround speaker (L)
- SR** Surround speaker (R)
- SBL** Surround back speaker (L)
- SBR** Surround back speaker (R)

- Install the surround speakers in a position 60 to 90 cm higher than ear level.

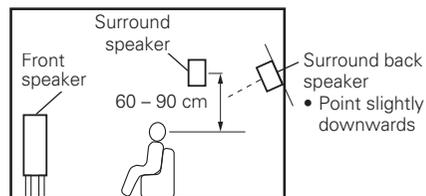

[Viewed from the side]

2 Connect



Speakers


Carefully check the left (L) and right (R) channels and + (red) and - (black) polarities on the speakers being connected to the this unit, and be sure to interconnect the channels and polarities correctly.

NOTE

- Connect so that the speaker cable core wires do not protrude from the speaker terminal. The protection circuit may be activated if the core wires touch the rear panel or if the + and - sides touch each other (see page 71 "Protection Circuit").
- Never touch the speaker terminals while the power supply is connected. Doing so could result in electric shock.
- Use speakers with the speaker impedances shown below.


Connecting the speaker cables

Peel off about 10 mm of sheathing from the tip of the speaker cable, then either twist the core wire tightly or terminate it.

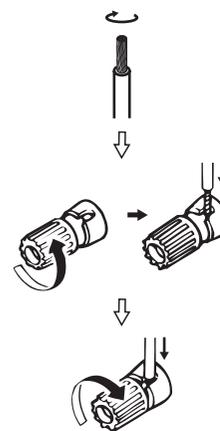


Speaker terminals	Speaker impedance
FRONT A	6 - 8 Ω
CENTER	
SURROUND	
SURR. BACK/SPEAKER C	
FRONT B/HEIGHT	

The "Simple version" section provides the speaker installation, connection, and setup methods for the 7.1-channel system with surround back speakers. For the installing, connecting, and setup methods of speakers other than the 7.1-channel system (with surround back speakers), see page 30.

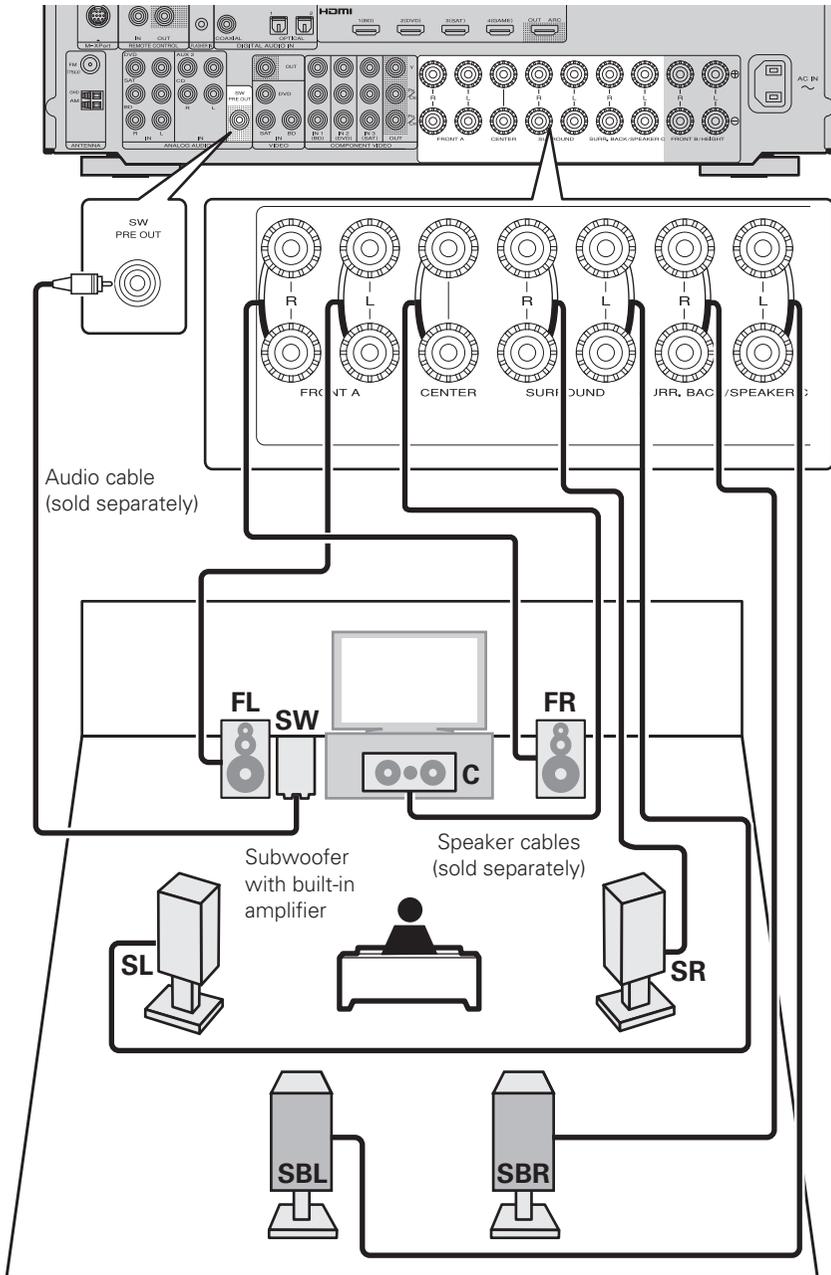

Blu-ray Disc player and TV

Use only an HDMI (High-Definition Multimedia Interface) cable that bears the HDMI logo (a certified HDMI product). Using a cable without the HDMI logo (an uncertified HDMI product) may result in abnormal playback. When outputting Deep Color or 1080p, etc., we recommend you use a “High Speed HDMI cable” or a “High Speed HDMI cable with Ethernet” for enhanced high-quality playback.

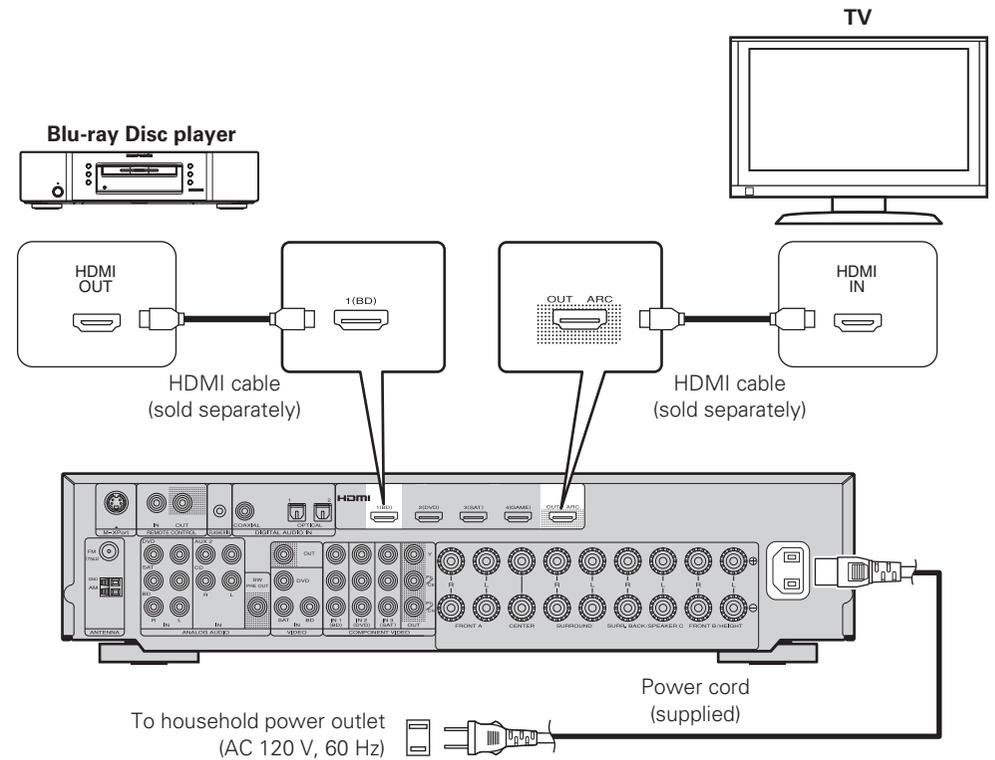

NOTE


- Do not plug in the power cord until all connections have been completed.
- Do not bundle power cords together with connection cables. Doing so can result in humming or noise.

The “Simple version” section provides the speaker installation, connection, and setup methods for the 7.1-channel system with surround back speakers. For the installing, connecting, and setup methods of speakers other than the 7.1-channel system (with surround back speakers), see page 30.

3 Turn on power




- 1** Turn on the TV and subwoofer power.

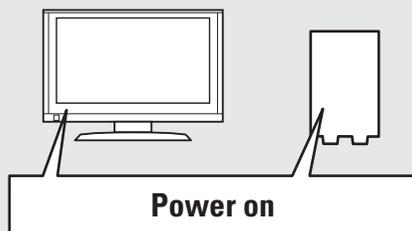

- 2** Change the TV input to the input of this unit.

- 3** Press **ON** to turn on power to the unit.
The power indicator switches off, and power is supplied to the unit.

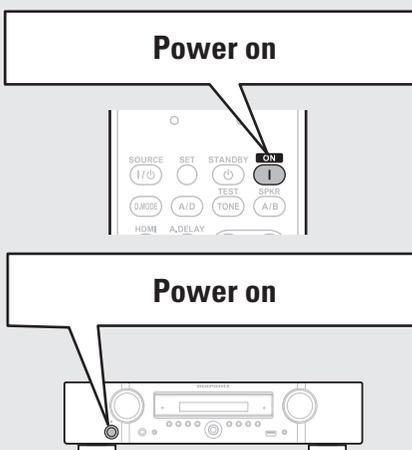

6

The "Simple version" section provides the speaker installation, connection, and setup methods for the 7.1-channel system with surround back speakers. For the installing, connecting, and setup methods of speakers other than the 7.1-channel system (with surround back speakers), see page 30.

4 Set up speakers (Audyssey® Auto Setup)




The acoustic characteristics of the connected speakers and listening room are measured and the optimum settings are made automatically. This is called "Audyssey Auto Setup".

To perform measurement, place the setup microphone in multiple locations all around the listening area. For best results, we recommend you measure in six positions, as shown in the illustration (up to six positions).

- When performing Audyssey Auto Setup, MultEQ®/Dynamic EQ®/Dynamic Volume® functions become active (☞ page 46, 47).
- To set up the speakers manually, use "Speaker Setup" (☞ page 49) on the menu.


NOTE

- Make the room as quiet as possible. Background noise can disrupt the room measurements. Close windows, silence cell phones, televisions, radios, air conditioners, fluorescent lights, home appliances, light dimmers, or other devices as measurements may be affected by these sounds.
- Cell phones should be placed away from all audio electronics during the measurement process as Radio Frequency Interference (RFI) may cause measurement disruptions (even if the cell phone is not in use).
- Do not unplug the setup microphone from the main unit until Audyssey Auto Setup is completed.
- Do not stand between the speakers and setup microphone or allow obstacles in the path while the measurements are being made. This will cause inaccurate readings.
- Loud test sounds may be played during Audyssey Auto setup. This is part of normal operation. If there is background noise in room, these test signals will increase in volume.
- Operating **VOLUME + -** during the measurements will cancel the measurements.
- Measurement cannot be performed when headphones are connected.

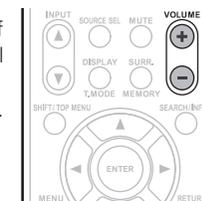

About setup microphone placement

- Measurements are performed by placing the setup microphone successively at multiple positions throughout the entire listening area, as shown in **[Example ①]**. For best results, we recommend you measure in six positions, as shown in the illustration (up to six positions).
- Even if the listening environment is small as shown in **[Example ②]**, measuring at multiple points throughout the listening environment results in more effective correction.

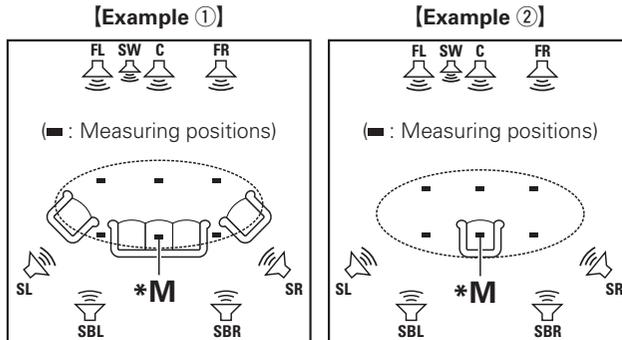

FL Front speaker (L)
FR Front speaker (R)
C Center speaker
SW Subwoofer

SL Surround speaker (L)
SR Surround speaker (R)
SBL Surround back speaker (L)
SBR Surround back speaker (R)


About the main listening position (*M)

The main listening position is the position where listeners would normally sit or where one would normally sit alone within the listening environment. Before starting Audyssey Auto Setup, place the setup microphone in the main listening position. Audyssey MultEQ® uses the measurements from this position to calculate speaker distance, level, polarity, and the optimum crossover value for the subwoofer.

1 Set up the microphone

Mount the setup microphone on a tripod or stand and place it in the main listening position.

When placing the setup microphone, adjust the height of the sound receptor to the level of the listener's ear.

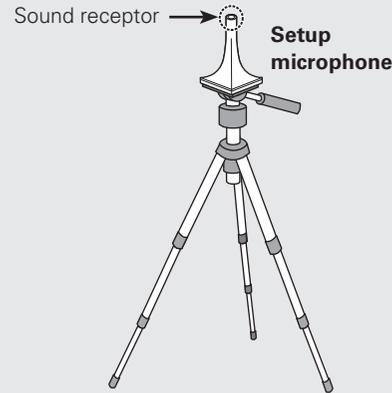

NOTE

- Do not hold the setup microphone in your hand during measurements.
- Avoid placing the setup microphone close to a seat back or wall as sound reflections may give inaccurate results.

2 Set up the subwoofer

If using a subwoofer capable of the following adjustments, set up the subwoofer as shown below.

- When using a subwoofer with a direct mode**
Set the direct mode to "On" and disable the volume adjustment and crossover frequency setting.
- When using a subwoofer without a direct mode**
Make the following settings:
 - **Volume** : "12 o'clock position"
 - **Crossover frequency** : "Maximum/Highest Frequency"
 - **Low pass filter** : "Off"
 - **Standby mode** : "Off"

3 Set up the remote control unit

- Set up the operation mode**
Press **AMP** to set the remote control unit to amplifier operation mode.




Press AMP

Set up speakers (Audyssey® Auto Setup)

Preparation

4 Connect the setup microphone to the SETUP MIC jack of this unit.

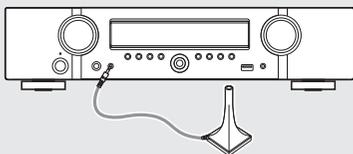

When the setup microphone is connected, the following screen is displayed.

```

3-1. Audyssey Auto Setup
                               MultEQ
Please place microphone
at ear height at
main listening position.
F. Height : Measure
Front Sp. : A
Amp Assign: Normal
Start
Cancel
[ENT]:Select [RTN]:Back
  
```

The setting method for 7.1-channel playback using the surround back speakers is described here.

For the method of setting up speakers other than the 7.1-channel system, select "Amp Assign" and perform steps 3 and 4 of "Set up speakers" (page 33).

5 Use Δ / ∇ to select "Start" and then press ENTER.

When measuring begins, a test tone is output from each speaker.

- Measurement requires several minutes.

If "Cancel" is selected

"Cancel Auto Setup?" is displayed on the TV screen. If "Yes" is selected, "Audyssey Auto Setup" closes.

Step 1
Speaker Detection

- In step 1, you will perform measurements at the main listening position.
- This step automatically checks the speaker configuration and speaker size, and calculates the channel level, distance, and crossover frequency. It also corrects distortion in the listening area.

6 The detected speakers are displayed.

```

Step1:Speaker Detection
                               MultEQ
Front Sp.      :Yes
Center Sp.    :Yes
Subwoofer     :Yes
Surround Sp. :Yes
S.Back Sp.   :Yes
Next
Retry
[ENT]:Next
  
```

NOTE

If a connected speaker is not displayed, the speaker may not be connected correctly. Check the speaker connection.

7 Use Δ / ∇ to select "Next" and then press ENTER.

NOTE

If "Caution" is displayed:

Go to "Error messages" (page 10), check any related items, and perform the necessary procedures.

If the problem is resolved, return and restart "Audyssey Auto Setup".

When performing Audyssey Auto Setup over again

Press Δ / ∇ to select "Retry", and then press ENTER.

When measuring has stopped

Press Δ / ∇ to select "Cancel", then press ENTER. Press \triangleleft / \triangleright to select "Yes", then press ENTER.

Setting up the speakers again

Repeat the operation from step 4 of Preparation.

Step 2
Measurement

- In step 2, you will perform measurements at multiple positions (two to six positions) other than the main listening position.
- You can achieve a more effective correction of distortion within the listening area by performing measurements at multiple positions.

8 Move the setup microphone to position 2, use Δ / ∇ to select "Next", and then press ENTER.

The measurement of the second position starts. Measurements can be made in up to six positions.

```

Step2:Measurement
                               MultEQ
Please place microphone
at ear height at
2nd listening position.
Next
Calculate
Cancel
[ENT]:Next
  
```



If you want to omit measurements from the next position onward, select "Calculate". (Go to Step 3 Calculating)

9 Repeat step 8, measuring positions 3 to 6.

When measurement of position 6 is completed, a "All the measurements were finished." message is displayed.

```


Step2:Measurement
                               MultEQ
All the measurements
were finished.
Calculate
Retry
Cancel
[ENT]:Calculate
  
```



Step 3 Calculating

10 On the **Step 2** screen, use Δ / ∇ to select “Calculate”, and then press **ENTER**.


Measuring results are analyzed, and the frequency response of each speaker in the listening room is determined.

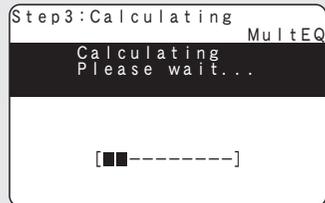

- Analysis takes several minutes to complete. The time required for this analysis depends on the number of speakers connected. The more connected speakers there are, the longer it takes to perform analysis.

Step 4 Check

11 Use Δ / ∇ to select the item you want to check, and then press **ENTER**.

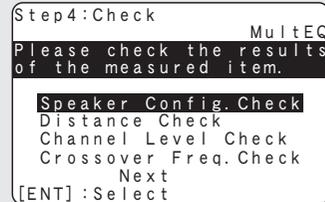

- Subwoofers may measure a greater reported distance than the actual distance due to added electrical delay common in subwoofers.
- If you want to check another item, press **RETURN**.

12 Use Δ / ∇ to select “Next” and then press **ENTER**.



NOTE

- If the result differs from the actual connection status, or if “Caution!” is displayed, see “Error messages” (page 10). Then carry out Audyssey Auto Setup again.
- If the result still differs from the actual connection status after remeasurement or the error message still appears, it is possible that the speakers are not connected properly. Turn this unit off, check the speaker connections and repeat the measurement process from the beginning.
- If you change speaker positions or orientation, perform Audyssey Auto Setup again to find the optimal equalizer settings.

Step 5 Store

13 Use Δ / ∇ to select “Store” and then press **ENTER**.

Save the measurement results.

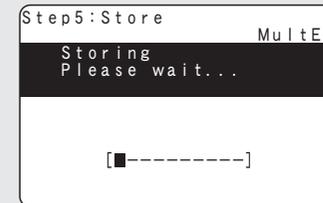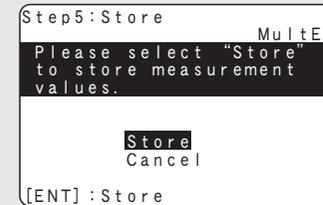

- Saving the results requires about 10 seconds.
- If you do not want to save the measurement results, use Δ / ∇ to select “Cancel”, then select “Yes” using \triangleleft / \triangleright . All the measured Audyssey Auto Setup data will be erased.


NOTE

During saving of measurement results, be sure not to turn off the power.

Finish

14 Unplug the setup microphone from the unit’s SETUP MIC jack.

15 Set Dynamic Volume®.

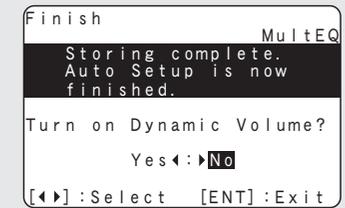

- For details of Dynamic Volume settings, see page 47.

- When turning Dynamic Volume on**
 - Use \triangleleft to select “Yes”, and then press **ENTER**. The unit automatically enters “Evening” mode.
- When turning Dynamic Volume off**
 - Use \triangleright to select “No”, and then press **ENTER**.

NOTE

After performing Audyssey Auto Setup, do not change the speaker connections or subwoofer volume. In event of a change, perform Audyssey Auto Setup again.

Remote control operation buttons



Move the cursor (Up/Down/Left/Right)



ENTER Confirm the setting

RETURN



RETURN Return to previous menu

Error messages

An error message is displayed if Audyssey® Auto Setup could not be completed due to speaker placement, the measurement environment, etc. If this happens, check the relevant items, be sure to take the necessary measures, then perform Audyssey Auto Setup over again.

NOTE

Be sure to turn off the power before checking speaker connections.

Examples	Error details	Measures
	<ul style="list-style-type: none"> The connected setup microphone is broken, or a device other than the supplied setup microphone is connected. Not all speakers could be detected. The front L speaker was not properly detected. 	<ul style="list-style-type: none"> Connect the included setup microphone to the SETUP MIC jack of this unit. Check the speaker connections.
	<ul style="list-style-type: none"> There is too much noise in the room for accurate measurements to be made. Speaker or subwoofer sound is too low for accurate measurements to be made. 	<ul style="list-style-type: none"> Either turn off any device generating noise or move it away. Perform again when the surroundings are quieter. Check the speaker installation and the direction in which the speakers are facing. Adjust the subwoofer's volume.
	<ul style="list-style-type: none"> The displayed speaker could not be detected. 	<ul style="list-style-type: none"> Check the connections of the displayed speaker.
	<ul style="list-style-type: none"> The displayed is connected with the polarities reversed. 	<ul style="list-style-type: none"> Check the polarities of the displayed speaker. For some speakers, this error message may be displayed even if the speaker is properly connected. If you are sure the connection is correct, press $\Delta\nabla$ to select "Skip", then press ENTER.

Parameter Check

This function enables you to check the measurement results and equalizer characteristics after Audyssey Auto Setup.

1 Use $\Delta\nabla$ to select "Parameter Check" and then press **ENTER**.

2 Use $\Delta\nabla$ to select the item you want to check, then press **ENTER**.

Speaker Config. Check Check the speaker configuration.

Distance Check Check the distance.

Channel Level Check Check the channel level.

Crossover Freq. Check Check the crossover frequency.

EQ Check Check the equalizer.

- If "EQ Check" is selected, press $\Delta\nabla$ to select equalizing curve ("Audyssey" or "Audyssey Flat") to be checked. Use $\triangleleft\triangleright$ to switch the display between the different speakers.

3 Press **RETURN**.

The confirmation screen reappears. Repeat step 2.

Retrieving Audyssey Auto Setup settings

If you set "Restore" to "Yes", you can return to Audyssey Auto Setup measurement result (value calculated at the start by MultEQ®) even when you have changed each setting manually.



5 Play back disc



- 1 Press BD two times in a row to switch an input source for a player used for playback.**
- 2 Play the component connected to this unit.**
Make the necessary settings on the player (language setting, subtitles setting, etc.) beforehand.
- 3 Adjust the sound volume.**
VOLUME + Volume up
VOLUME - Volume down
MUTE Muting
- 4 Set the listening mode.**
Set the listening mode according to the playback contents (cinema, music, etc.) or according to your liking (see page 26 "Selecting a listening mode (Surround mode)").




When power is switched to standby


Press **STANDBY**.

[Power indicator status in standby mode]

- Normal standby : Red
- When "HDMI Control" is set to "ON" : Orange

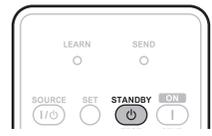

You can also switch the power to standby by pressing **ON/STANDBY** on the main unit.

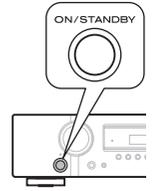

NOTE

During power standby, a minimal amount of power is consumed. To totally cut off the power, remove the power cord from the power outlet.

Simple version

Basic version

Advanced version

Information

Remote control operation buttons		Move the cursor (Up/Down/Left/Right)		Confirm the setting		Return to previous menu
----------------------------------	--	--------------------------------------	--	---------------------	--	-------------------------

Basic version

Here, we explain the connections and basic operation methods for this unit.

- **Connections**  page 13
- **Playback (Basic operation)**  page 21
- **Selecting a listening mode (Surround mode)**  page 26

Refer to the pages indicated below for information on connecting and playing back the various media and external devices.

Audio and video	Connection	Playback
TV	 page 14, 16	-
Blu-ray Disc player	 page 14, 16	 page 22
DVD player	 page 14, 16	 page 22
Set-top box (Satellite tuner or cable TV)	 page 14, 17	-
Game console	 page 14	-
Audio	Connection	Playback
Portable audio player	 page 17	-
iPod®	 page 18	 page 22
USB memory device	 page 18	 page 23
CD player	 page 19	 page 22
Other audio devices	 page 19	-
Radio	 page 20	 page 24
Wireless receiver (RX101)	 page 20	-

For speaker connections, see page 4.

Connections

Important information

- Make connections as follows before using this unit. Select an appropriate connection type according to the components to be connected.
- You may need to make some settings on this unit depending on the connection method. Refer to each description for more information.
- Select the cables (sold separately) according to the components being connected.

NOTE

- Do not plug in the power cord until all connections have been completed.
- When making connections, also refer to the operating instructions of the other components being connected.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Do not bundle power cords together with connection cables. Doing so can result in noise.


Converting input video signals for output (Video conversion function)

This unit is equipped with three types of video input connector (HDMI, Component video and video) and three types of video output connector (HDMI, Component video and video).

Use the connectors corresponding to the components to be connected.

This function automatically converts various formats of video signals input to this unit into the formats used to output the video signals from this unit to a monitor.

[Flow of video signals]

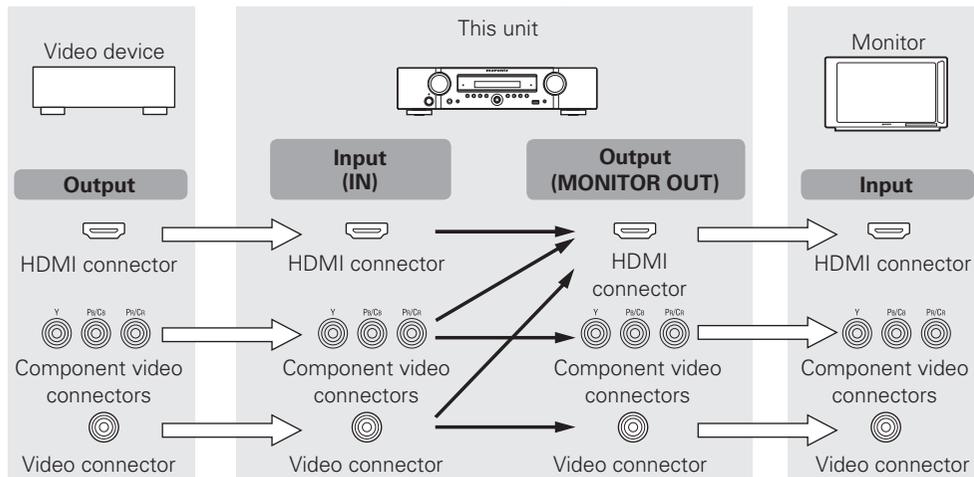

- The video conversion function supports the NTSC, PAL, SECAM, NTSC 4.43, PAL-N, PAL-M and PAL-60 formats.
- Resolutions of HDMI-compatible TVs can be checked at "HDMI Monitor Information" (📖 page 53).

NOTE

- HDMI signals cannot be converted into analog signals.
- When a non-standard video signal from a game machine or some other source is input, the video conversion function might not operate.
- Component video input signals cannot be converted into Video format.

How the on-screen display appears in accordance with the video input signal

The way the on-screen display of the menus, status, etc., is displayed differs according to the type of video signal input to this unit.

□ When video signals are input from the HDMI or component video connector

- **Menu:** Switches to a screen with a black background and the menu is superimposed*.
- **Status display:** Not displayed.

* If you want to display the menus superimposed on the background image, input the same video signals to the video connectors. When a menu is displayed, the picture switches to the one being input from the video connectors and the menu is displayed superimposed over this picture.

NOTE

The menus and status display screen will not be superimposed on the video output from the component video connector.

□ When video signals are input from the video connector

- **Menu:** Menus are displayed superimposed over the background image.
- **Status display:** Displayed.

NOTE

When you use the component video output connector, the on-screen display is not displayed. If you want to display the on-screen display, connect a TV to the HDMI connector or video output connector.

Examples of on-screen display

- Menu screen

```
MENU
1. Audio Adjust
2. Information
3. Auto Setup
4. Manual Setup
5. Input Setup
[ENT] : Select
```

- Status display screen
When the input source is switched

```
[Auto]
IN : DVD
MODE : STEREO
```

Status display: The operating status appears briefly on the screen when the input source is switched or the volume is changed.

- When the volume is adjusted

```
Master Volume -80.0dB
```

NOTE

When you connect a TV to this unit using the video connector, the on-screen display may not be displayed on a TV in some cases. If the on-screen display is not displayed on your TV, set the on-screen display output mode to "Video" mode in accordance with "Switching the on-screen display output mode" (page 54).

Connecting an HDMI-compatible device

You can connect up to four HDMI-compatible devices to the unit.

HDMI function

This unit supports the following HDMI functions:

- 3D
- Deep Color (page 70)
- Auto Lip Sync (page 51)
- x.v.Color, sYCC601 color, Adobe RGB color, Adobe YCC601 color (page 70, 71)
- High definition digital audio format
- ARC (Audio Return Channel)
- Content Type
- CEC (HDMI control)

Copyright protection system

In order to play back digital video and audio such as BD-Video or DVD-Video via HDMI connection, both this unit and TV or the player need to support the copyright protection system known as HDCP (High-bandwidth Digital Content Protection System). HDCP is copyright protection technology comprised of data encryption and authentication of the connected AV device. This unit supports HDCP.

- If a device that does not support HDCP is connected, video and audio are not output correctly. Read the owner's manual of your television or player for more information.

About HDMI cables

- When a device supporting Deep Color signal transfer is connected, use a cable compatible "High Speed HDMI cable" or "High Speed HDMI cable with Ethernet"
- When the ARC function is used, connect a device with a "Standard HDMI cable with Ethernet" or "High Speed HDMI cable with Ethernet" for HDMI 1.4a.

HDMI control function (page 35)

This function allows you to operate external devices from the receiver and operate the receiver from external devices.

NOTE

- The HDMI control function may not work depending on the device it is connected to and its settings.
- You cannot operate a TV or Blu-ray Disc player / DVD player that is not compatible with the HDMI control function.

About 3D function

This unit supports input and output of 3D (3 dimensional) video signals of the HDMI 1.4a standards. For playing the 3D video content, a player, and a TV that support the 3D function of the HDMI 1.4a standards are required in addition to this unit.

About ARC (Audio return channel) function

The Audio Return Channel in HDMI 1.4a enables a TV, via a single HDMI cable, to send audio data “upstream” to this unit.

NOTE

- To enable the ARC function, set “HDMI Control” to “ON” (☞ page 51).
- When connecting a TV that does not support the ARC function, a separate connection using an audio cable is required. In this case, refer to “Connecting a TV” (☞ page 16) for the connection method.

About Content Type

The HDMI Specification Version 1.4a enables simple, automated picture setting selection with no user intervention.

NOTE


To enable the Content type, set “Video Mode” to “Auto” (☞ page 43).

Cables used for connections

Audio and video cable (sold separately)

HDMI cable 

- This interface allows transfer of digital video signals and digital audio signals over a single HDMI cable.

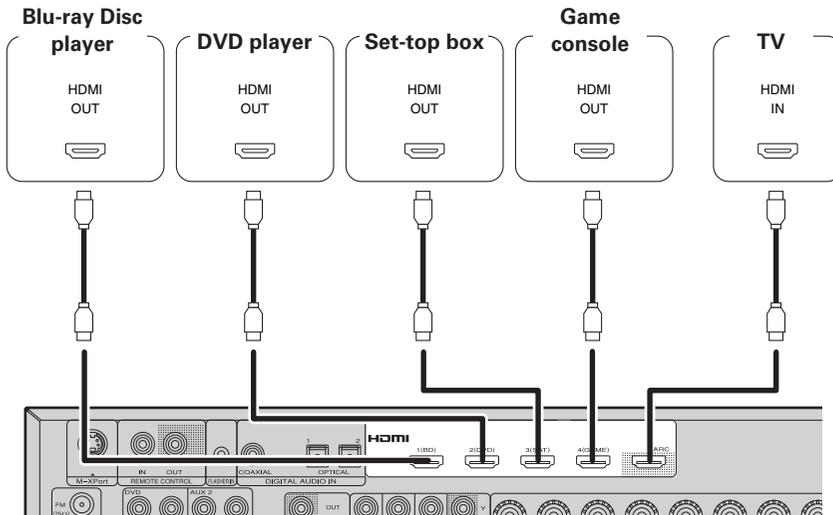

- When this unit is connected to other devices with HDMI cables, connect this unit and TV also with an HDMI cable.
- When connecting a device that supports Deep Color transmission, please use a “High Speed HDMI cable” or “High Speed HDMI cable with Ethernet”.
- Video signals are not output if the input video signals do not match the monitor’s resolution. In this case, switch the Blu-ray Disc/DVD player’s resolution to a resolution with which the monitor is compatible.
- When this unit and monitor are connected with an HDMI cable, if the monitor is not compatible with HDMI audio signal playback, only the video signals are output to the monitor.

NOTE

The audio signal from the HDMI output connector (sampling frequency, number of channels, etc.) may be limited by the HDMI audio specifications of the connected device regarding permissible inputs.

Connecting to a device equipped with a DVI-D connector

When an HDMI/DVI conversion cable (sold separately) is used, the HDMI video signals are converted to DVI signals, allowing connection to a device equipped with a DVI-D connector.

NOTE

- No sound is output when connected to a device equipped with a DVI-D connector. Make separate audio connections.
- Signals cannot be output to DVI-D devices that do not support HDCP.
- Depending on the combination of devices, the video signals may not be output.

Settings related to HDMI connections

Set as necessary. For details, see the respective reference pages.

Input Assign (☞ page 42)

Set this to change the HDMI input connector to which the input source is assigned.

HDMI Setup (☞ page 51)

Make settings for HDMI video/audio output.

- Auto Lip Sync
- HDMI Audio Out
- HDMI Control
- Standby Source
- Power Off Control

NOTE

The audio signals output from the HDMI connectors are only the HDMI input signals.

Connecting a TV

- Select the connector to use and connect the device.
- For video connections, see “Converting input video signals for output (Video conversion function)” (🔗 page 13).
- For instructions on HDMI connections, see “Connecting an HDMI-compatible device” (🔗 page 14).





To listen to TV audio through this device, use the optical digital connection.

NOTE

This connection is not required when a TV compatible with the ARC function (Audio Return Channel (HDMI 1.4a standard function)) is connected to this unit via an HDMI connection.

For details, see “About ARC (Audio return channel) function” (🔗 page 15) or refer to the instruction manual for your TV.

Cables used for connections

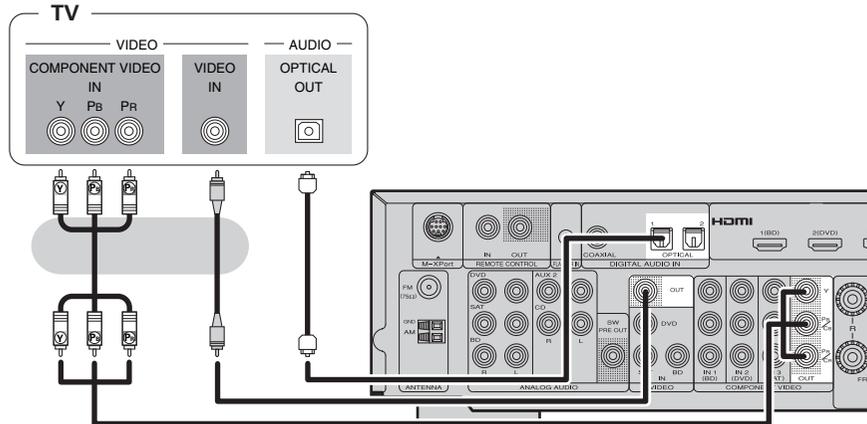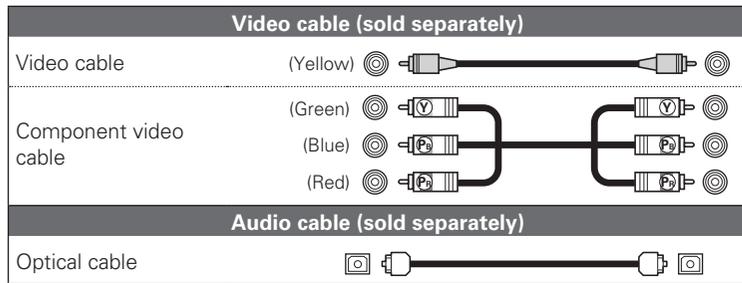

in Set as Necessary



Set this to change the digital input connector or component video input connector to which the input source is assigned.

“Input Assign” (🔗 page 42)

Connecting a Blu-ray Disc player / DVD player

- You can enjoy video and audio from a Blu-ray Disc or DVD.
- Select the connector to use and connect the device.
- For instructions on HDMI connections, see “Connecting an HDMI-compatible device” (🔗 page 14).

Cables used for connections

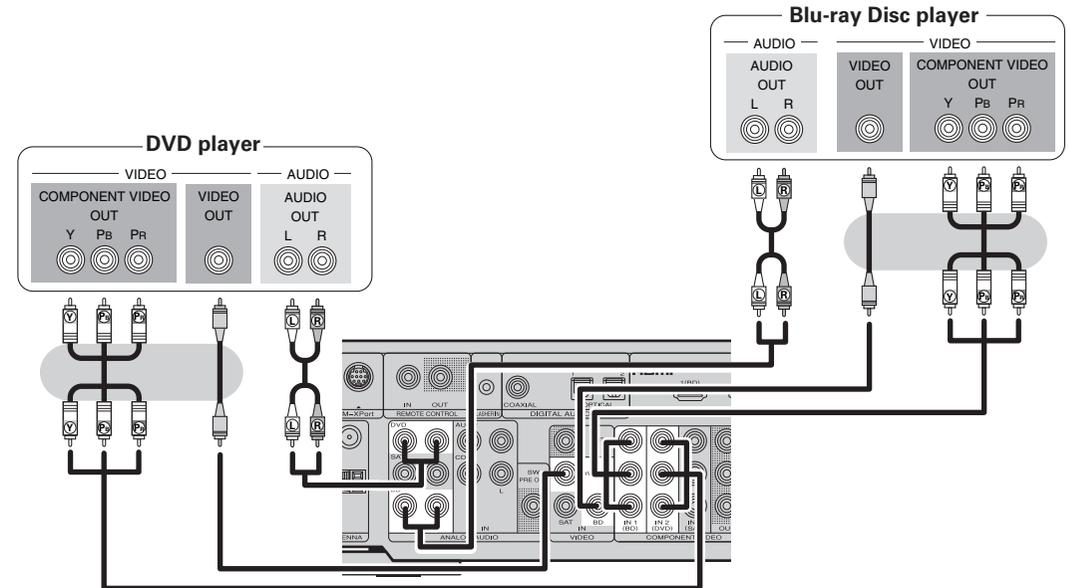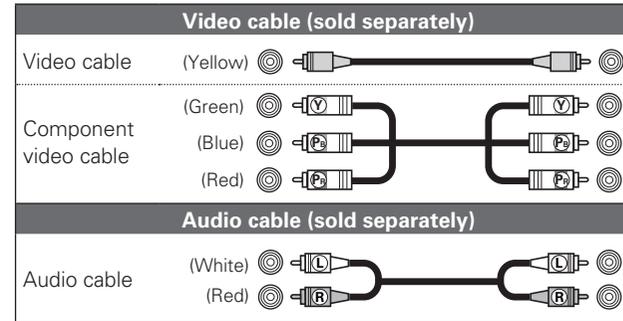

in Set as Necessary

Set this to change the digital input connector or component video input connector to which the input source is assigned.

“Input Assign” (🔗 page 42)





For HD audio (Dolby TrueHD, DTS-HD, Dolby Digital Plus and DTS Express) playback, connect with HDMI (🔗 page 14 “Connecting an HDMI-compatible device”).

Connecting a set-top box (Satellite tuner/cable TV)

- You can watch satellite or cable TV.
- Select the connector to use and connect the device.
- For instructions on HDMI connections, see “Connecting an HDMI-compatible device” (page 14).

Cables used for connections

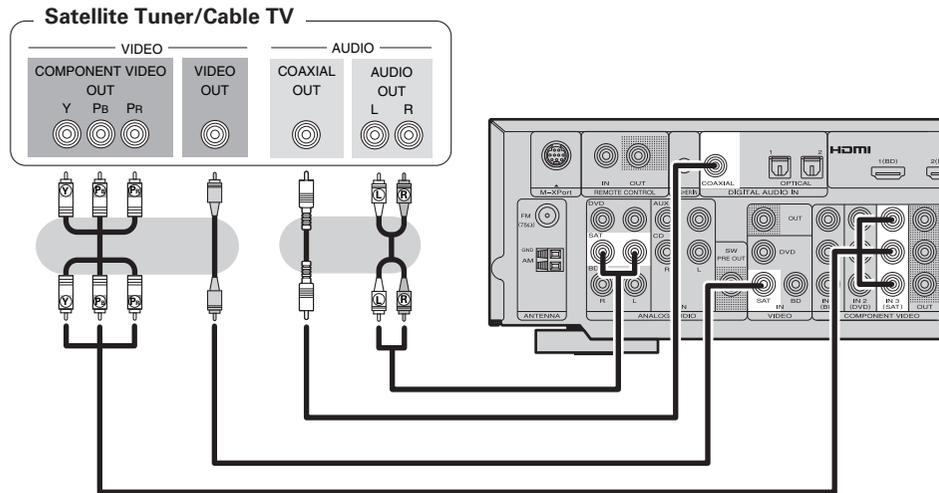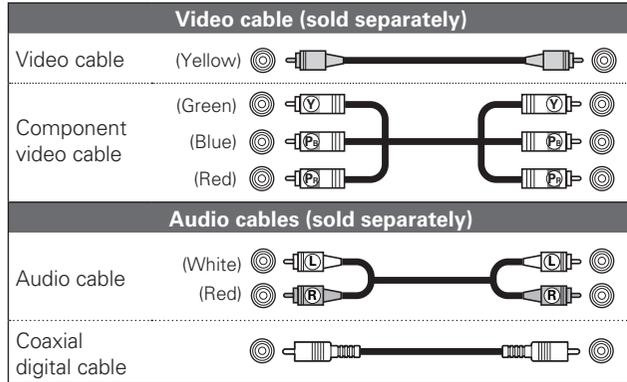

in Set as Necessary


Set this to change the digital input connector or component video input connector to which the input source is assigned.

“Input Assign” (page 42)



Connecting a portable audio player

You can enjoy audio from a portable audio player.

Cables used for connections

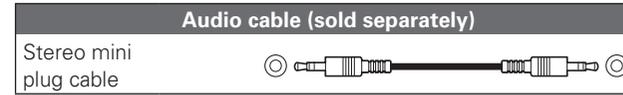

Portable audio player

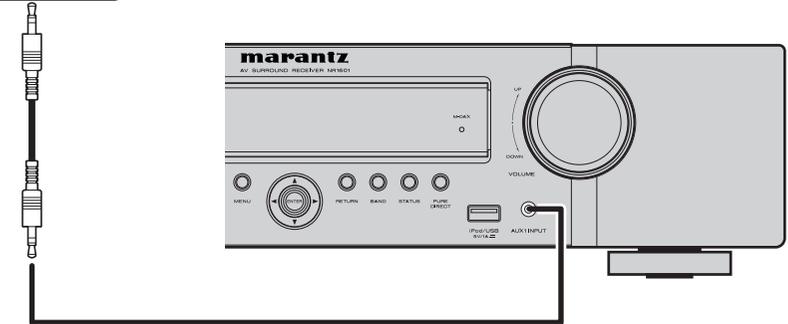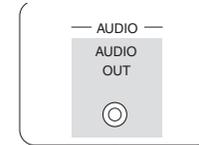


You can enjoy listening to music by connecting a portable audio player via the AUX1 input connector. In this case, set the input source to “AUX1”.

Connecting an iPod or USB memory device to the USB Port

You can enjoy music, stored on an iPod or USB memory device.

Cables used for connections

To connect an iPod to this unit, use the USB cable supplied with the iPod.

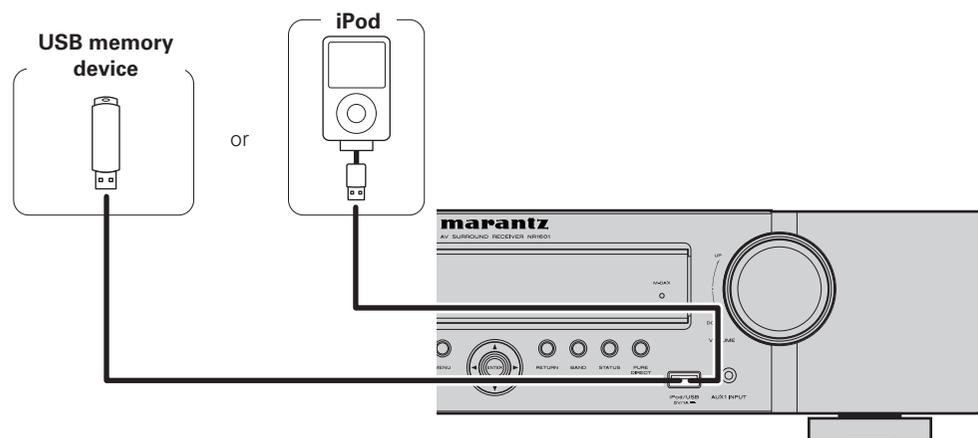

Marantz does not guarantee that all USB memory devices will operate or receive power. When using a portable USB connection type HDD of the kind to which an AC adapter can be connected to supply power, use the AC adapter.

NOTE


- USB memory devices will not work via a USB hub.
- Do not use an extension cable when connecting a USB memory device. This may cause radio interference with other devices.

Supported iPod Models

Made for

- iPod touch (2nd generation)
- iPod touch (1st generation)
- iPod classic
- iPod with video
- iPod nano (5th generation)
- iPod nano (4th generation)
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)



- iPhone
- iPhone 3G
- iPhone 3GS

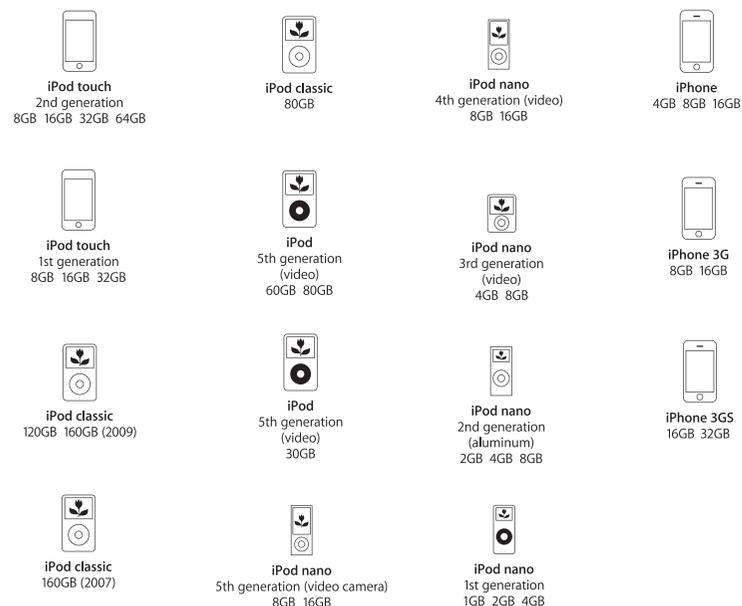

Connecting a CD player

- You can enjoy CD sound.
- Select the connector to use and connect the device.

Cables used for connections

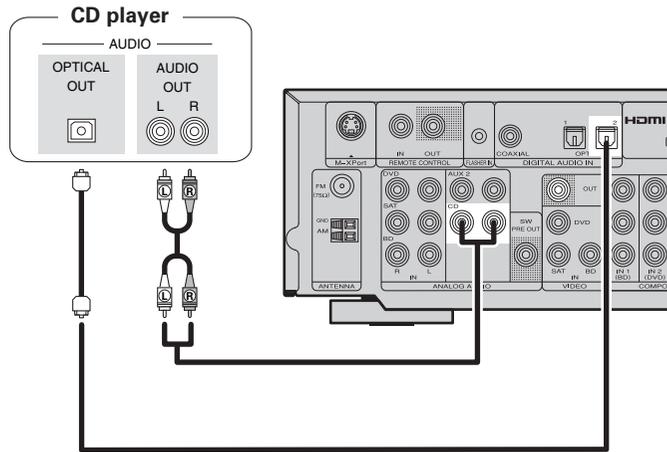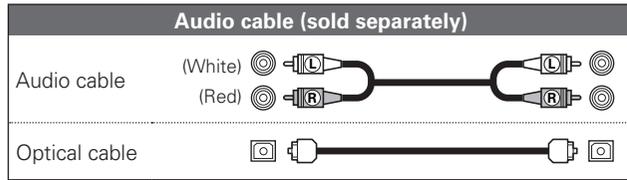


in Set as Necessary

Set this to change the digital input connector to which the input source is assigned.
"Input Assign" (🔧 page 42)


Connecting other audio devices

You can enjoy listening to playback from other audio devices connected to this unit.

Cables used for connections

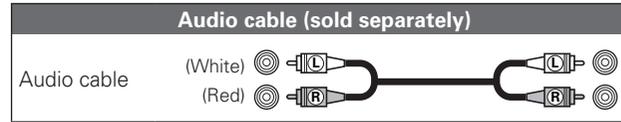

Other audio devices

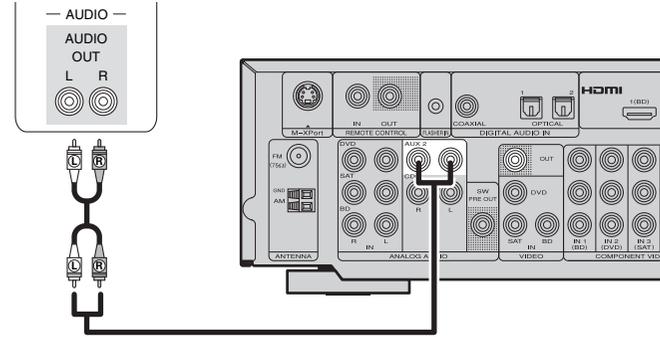


You can enjoy music by connecting a portable audio player via the AUX2 input connector. In this case, set the input source to "AUX2".

Connecting an antenna

- Connect the FM antenna or AM loop antenna supplied with the unit to enjoy listening to radio broadcasts.
- After connecting the antenna and receiving a broadcast signal (☞ page 24 “Listening to FM/AM broadcasts”), fix the antenna with tape in a position where the noise level becomes minimal.

Direction of broadcasting station

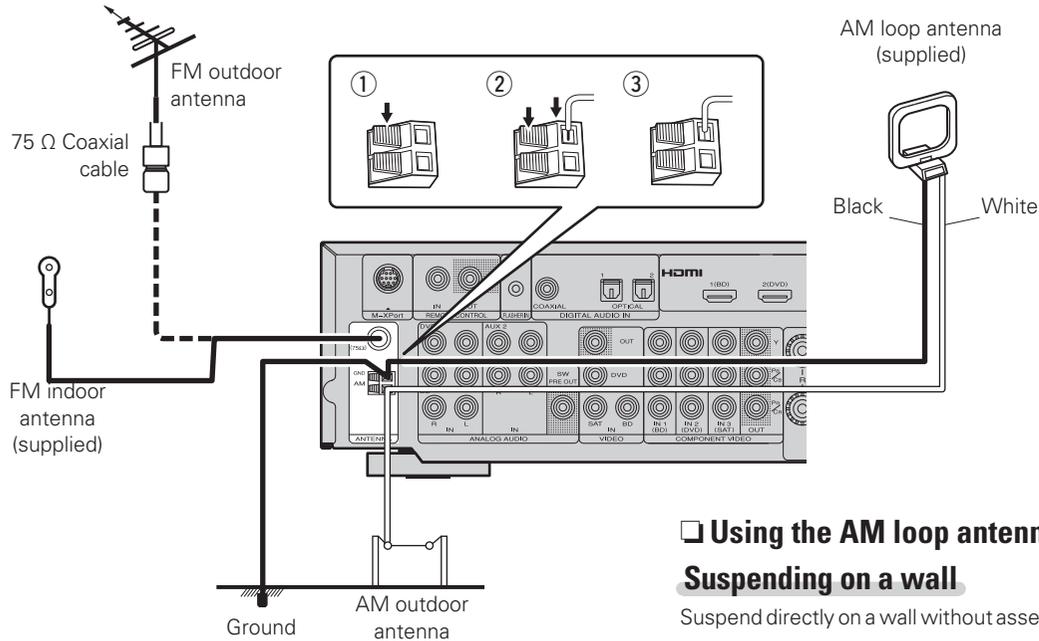


Using the AM loop antenna Suspending on a wall

Suspend directly on a wall without assembling.




AM loop antenna assembly

1 Put the stand section through the bottom of the loop antenna from the rear and bend it forward.

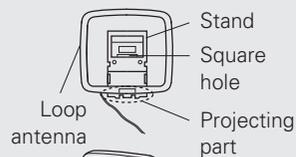

2 Insert the projecting part into the square hole in the stand.

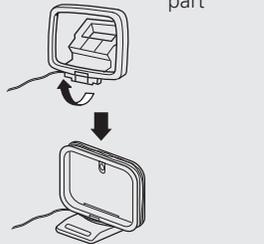

Standing alone

Use the procedure shown left to assemble.


NOTE

- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure the AM loop antenna lead terminals do not touch metal parts of the panel.
- If the signal has noise interference, connect the ground terminal (GND) to reduce noise.
- If you are unable to receive a good broadcast signal, we recommend installing an outdoor antenna. For details, inquire at the retail store where you purchased the unit.

Connecting a wireless receiver (RX101)

By connecting a wireless receiver RX101 (sold separately) to this unit, you can receive and playback audio signals from other devices using the Bluetooth Communication Function.

- Use a Bluetooth device that is A2DP compatible (☞ page 70 “A2DP”).
- You can also use wireless receiver RX101 as an external IR receiver.
- For instructions on the wireless receiver settings, refer to the RX101’s operating instructions.

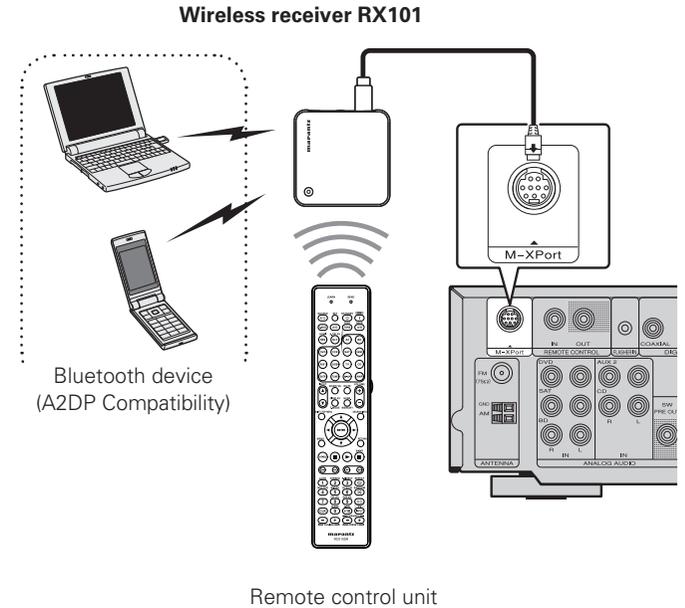

You can enjoy listening to music by connecting a wireless receiver via the M-XPort input connector. In this case, set the input source to “M-XPort”.

NOTE

To use wireless receiver RX101 as external IR receiver, set the remote sensor function of this unit to “DISABLE” (☞ page 54 “Remote control settings”).

Playback (Basic operation)

- ❑ **Selecting the input source** (👉 page 21)
- ❑ **Adjusting the master volume** (👉 page 21)
- ❑ **Turning off the sound temporarily** (👉 page 21)

- ❑ **Playing a Blu-ray Disc player/DVD player** (👉 page 22)
- ❑ **Playing a CD player** (👉 page 22)
- ❑ **Playing an iPod®** (👉 page 22)
- ❑ **Playing a USB memory device** (👉 page 23)
- ❑ **Tuning in radio stations** (👉 page 24)

Selecting a listening mode (Surround mode)
(👉 page 26)

Playback (Advanced operation) (👉 page 35)

Important information

Before starting playback, make the connections between the different components and the settings on the receiver.

NOTE

Also refer to the operating instructions of the connected components when playing them.

Selecting the input source

Press the input source select button (BD, DVD, SAT, GAME, AUX1, USB, TV, CD, TUNE, M-XP) twice to play back that source.

The desired input source can be selected directly.




You can also use the following operation to select an input source.




- Select input source "AUX2" to play back music from an audio system connected to the AUX2 input connector.
- Select the input source "AUX2" using one of the following methods.
 - ① "Source select" menu ("Using the "Source Select" menu" provided on the right)
 - ② **INPUT ▲▼** on the remote control unit ("Operating the remote control unit" provided on the right)
 - ③ **INPUT SELECTOR** knob on the main unit ("Operating the main unit" provided on the right)

❑ Using the "Source Select" menu

- ① Press **AMP** and then press **SOURCE SEL**.
Display the "Source Select" menu.

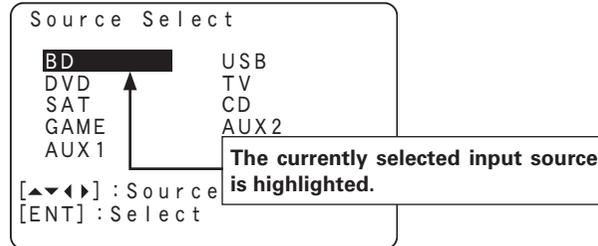

- ② Use **▲▼◀▶** to select the input source, then press **ENTER**.
The input source is set and the source selection menu is turned off.

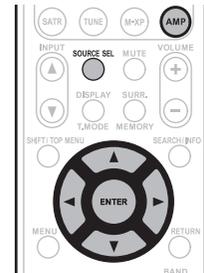

- When using with an iPod connected directly to the USB port of this unit, select "USB" for the input source.
- Input sources that are not going to be used can be set ahead of time. Make this setting at "Source Delete" (👉 page 52).
- To turn off the source selection menu without selecting an input source, press **SOURCE SEL** again.


❑ Operating the remote control unit

- Press **INPUT ▲▼**.
- When **INPUT ▲▼** is pressed, the input source is switched in the order shown below.



❑ Operating the main unit

- Turn **INPUT SELECTOR**.
- Turning **INPUT SELECTOR** switches the input source, as shown below.

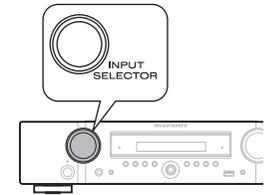

Adjusting the master volume

Use **VOLUME + -** to adjust the volume.

- ❑ When the "Volume Display" setting (👉 page 52) is "Relative" [Adjustable range] --- -80.5dB - 18.0dB




- ❑ When the "Volume Display" setting (👉 page 52) is "Absolute" [Adjustable range] 0.0 - 99.0

- The variable range differs according to the input signal and channel level setting.



You can also operate via the main unit. In this case, perform the following operations. Turn **VOLUME** to adjust the volume.

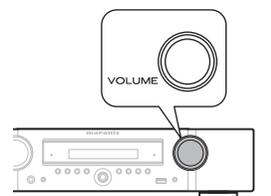

Turning off the sound temporarily

Press **MUTE**.



- The sound is reduced to the level set at "Mute Level" (👉 page 52).
- To cancel, press **MUTE** again. Muting can also be canceled by adjusting the master volume.

Playing a Blu-ray Disc player/DVD player

The following describes the procedure for playing Blu-ray Disc player/DVD player.

1 Prepare for playback.

- ① Turn on the power of the TV, subwoofer and player.
- ② Change the TV input to the input of this unit.
- ③ Load the disc in the player.

2 Press ON to turn on power to the unit.

3 Press BD or DVD twice to switch the input source for the player used for playback.

4 Play the component connected to this unit.

Make the necessary settings on the player (language setting, subtitles setting, etc.) beforehand.



Playing a CD player

The following describes the procedure for playing CD player.

1 Prepare for playback.

- ① Turn on the power of the subwoofer and player.
- ② Load the disc in the player.

2 Press ON to turn on power to the unit.

3 Press CD twice to switch the input source to the CD player.

4 Play the component connected to this unit.



Playing an iPod®

You can play back both video, photo and audio.

Listening to music on an iPod®

1 Connect the iPod® to the USB port (☞ page 18 “Connecting an iPod or USB memory device to the USB Port”)

2 Press ON to turn on power to the unit.

3 Press USB twice to switch the input source to “USB”.

NOTE

If the connections screen is not displayed, the iPod may not be properly connected. Reconnect it.

4 Press SEARCH and hold it down for 2 seconds or more to select the display mode.

- There are two modes for displaying the contents recorded on the iPod.

Remote mode Display iPod information on the TV screen.

- English letters, numbers and certain symbols are displayed. Incompatible characters are displayed as “. ” (period).
- In “Remote mode”, the iPod display is as shown at right.




Direct mode Display iPod information on the iPod screen.

- “Direct iPod” is displayed on the display of this unit.

Display mode		Remote mode	Direct mode
Playable files	Music file	✓	✓
	Video file		*
Active buttons	Remote control unit (This unit)	✓	✓
	iPod®		✓

* Only the sound is played.


5 Use $\Delta \nabla$ to select the item, then press ENTER or \triangleright to select the file to be played.

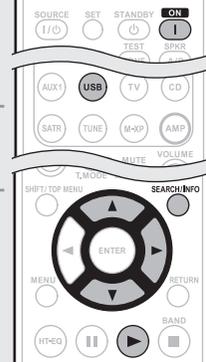

6 Press ENTER, \triangleright or \triangleleft . Playback starts.



- You can specify the duration of the on-screen display to be displayed (default: 30 sec) at menu “USB” (☞ page 53). Press $\Delta \nabla \triangleleft \triangleright$ to return to the original screen.
- To play back compressed audio with extended bass or treble reproduction, we recommend playback in M-DAX mode (☞ page 48). The default setting is “OFF”.
- In Remote mode, press **STATUS** during playback to check the title name, artist name, and album name.

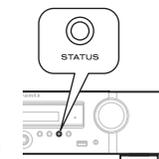

iPod operation



Operation buttons	Function
$\Delta \nabla \triangleleft \triangleright$	Cursor operation
ENTER	Enter
SEARCH (Press and release)	Page search mode
SEARCH (Press and hold)	Direct/Remote mode switching
RETURN	Return
$\lll \ggg$ (Press and hold)	Manual search (fast-reverse/fast-forward)
\triangleright	Playback / Pause
$\lll \ggg \triangleright$	Auto search (cue)
II	Pause
■	Stop
REPEAT	Repeat playback
RANDOM	Shuffle playback
TV POWER	TV power on/standby (Default : Marantz)
TV INPUT	Switch TV input (Default : Marantz)



Repeat playback and shuffle playback can also be set from “Input Setup” – “Playback Mode” (☞ page 44) in the menu.

NOTE

- Depending on the type of iPod and the software version, some functions may not operate.
- Note that Marantz will accept no responsibility whatsoever for any problems arising with the data on an iPod when using this unit in conjunction with the iPod.

Playing a USB memory device

Playing back music files recorded on a USB memory device.

Important information

USB memory devices

- A USB memory device can be connected to the USB port of this unit to play music files stored on the USB memory device.
- Only USB memory devices conforming to mass storage class can be played on this unit.
- This unit is compatible with USB memory devices in "FAT16" or "FAT32" format.

[Compatible formats]

	USB memory devices *1
WMA (Windows Media Audio)	✓ *2
MP3 (MPEG-1 Audio Layer-3)	✓
MPEG-4 AAC	✓ *3
WAV	✓

- *1 USB
 - This unit is compatible with MP3 ID3-Tag (Ver. 2) standards.
 - This unit is compatible with WMA META tags.
 - *2 Copyright-protected files can not be played.
 - *3 Only files that are not protected by copyright can be played on this unit.
- Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer's settings.

[Compatible formats]

	Sampling frequency	Bit rate or Bit length	Extension
WMA (Windows Media Audio)	32/44.1/48 kHz	48 – 192 kbps	.wma
MP3 (MPEG-1 Audio Layer-3)	32/44.1/48 kHz	32 – 320 kbps	.mp3
MPEG-4 AAC	32/44.1/48 kHz	16 – 320 kbps	.m4a
WAV	32/44.1/48 kHz	16 bit	.wav

Playing files stored on USB memory devices

- 1 Connect the USB memory device to the USB port (page 18 "Connecting an iPod or USB memory device to the USB Port").
- 2 Press **USB** twice to switch the input source to "USB".
- 3 Press $\Delta \nabla$ to select the search item or folder, then press **ENTER** or \triangleright .
- 4 Press $\Delta \nabla$ to select the file, then press **ENTER**, \triangleright or \blacktriangleright . Playback starts.



- You can specify the duration of the on-screen display to be displayed (default: 30 sec) at menu "USB" (page 53). Press $\Delta \nabla \triangleleft \triangleright$ to return to the original screen.
- To play back compressed audio with extended bass or treble reproduction, we recommend playback in M-DAX mode (page 48). The default setting is "High".
- If the USB memory device is divided into multiple partitions, only the top partition can be selected.
- This unit is compatible with MP3 files conforming to "MPEG-1 Audio Layer-3" standards.

NOTE

- Note that Marantz will accept no responsibility whatsoever for any problems arising with the data on a USB memory device when using this unit in conjunction with the USB memory device.
- USB memory devices will not work via a USB hub.
- Marantz does not guarantee that all USB memory devices will operate or be supplied power. When using a USB portable hard disk that can draw power from an AC adapter, we recommend using the AC adapter.
- It is not possible to connect and use a computer via the USB port of this unit using a USB cable.

USB operation



Operation buttons	Function
$\Delta \nabla \triangleleft \triangleright$	Cursor operation
ENTER	Enter
SEARCH	Page search
RETURN	Return
$\blacktriangleleft \blacktriangleright$ (Press and hold)	Manual search (fast-reverse/fast-forward)
\blacktriangleright	Playback/Pause
$\blacktriangleleft \blacktriangleright$	Auto search (cue)
II	Pause
■	Stop
REPEAT	Repeat playback
RANDOM	Shuffle playback
TV POWER	TV power on/standby (Default : Marantz)
TV INPUT	Switch TV input (Default : Marantz)



Repeat playback and shuffle playback can also be set from "Input Setup" – "Playback Mode" (page 44) in the menu.

Tuning in radio stations

Listening to FM/AM broadcasts


1 Press **TUNE** twice to switch the input source to “TUNER”.

2 Press **BAND** to select “FM” or “AM”.

FM When listening to an FM broadcast.

AM When listening to an AM broadcast.

3 Tune in the desired broadcast station.

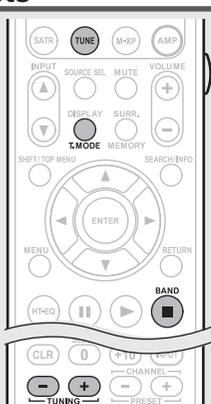

① To tune in automatically (Auto tuning)

Press **T.MODE** to light the “AUTO” indicator on the display, then use **TUNING +** or **TUNING -** to select the station you want to hear.

② To tune in manually (Manual tuning)

Press **T.MODE** to turn off the display’s “AUTO” indicator, then use **TUNING +** or **TUNING -** to select the station you want to hear.



- If the desired station cannot be tuned in with auto tuning, tune it in manually.
- When tuning in stations manually, press and hold **TUNING +** or **TUNING -** to change frequencies continuously.
- You can specify the duration of the on-screen display to be displayed (default: 30 sec) at menu “TUNER” (page 53). Press **Δ** **∇** **◀** **▶** to return to the original screen.

❑ Presetting radio stations (Manual preset)

Your favorite broadcast stations can be preset so that you can tune them in easily. Up to 56 stations can be preset.

- Stations can be preset automatically at “Auto Preset” (page 41). If “Auto Preset” is performed after performing “Manual Preset”, the “Manual Preset” settings will be overwritten.


1 Tune in the broadcast station you want to preset.

2 Press **MEMORY**.

3 Press **SHIFT/TOP MENU** to select the block (A to G) in which to preset the channel (1 to 8 per block), then press **PRESET +**, **PRESET -** or **1 - 8** to select the preset number.

4 Press **MEMORY** again to complete the setting.

- To preset other stations, repeat steps 1 to 4.

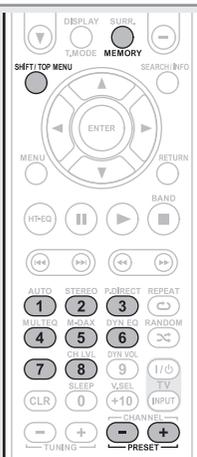

Default settings

Block (A - G) and Channel (1 - 8)	Default Settings
A1 - A8	87.5 / 89.1 / 98.1 / 107.9 / 90.1 / 90.1 / 90.1 / 90.1 MHz
B1 - B8	520 / 600 / 1000 / 1400 / 1710 kHz, 90.1 / 90.1 / 90.1 MHz
C1 - C8	90.1 MHz
D1 - D8	90.1 MHz
E1 - E8	90.1 MHz
F1 - F8	90.1 MHz
G1 - G8	90.1 MHz

Specify a name for the preset broadcast station (Preset Name) (page 42)


❑ Listening to preset stations

1 Press **SHIFT/TOP MENU** to select the memory block (A to G).

2 Press **PRESET +**, **PRESET -** or **1 - 8** to select the desired preset channel.



You can also operate via the main unit. In this case, perform the following operations. Press **◀ ▶** to select the preset radio station.

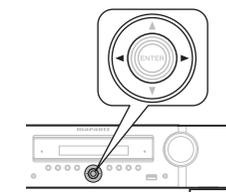

❑ Direct frequency tuning

You can enter the receiving frequency directly to tune in.

1 Press **SEARCH/INFO**.

2 Input frequencies using the **0 - 9**.


- If **◀** is pressed, the immediately preceding input is cancelled.

3 When setting is completed, press **ENTER**.

The preset frequency is tuned in.




□ Tuner (FM/AM) operation

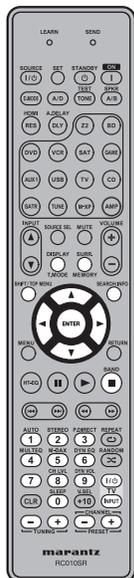

Operation buttons	Function
PRESET +, -	Preset channel selection
△ ▽ ◀ ▶	Cursor operation
ENTER	Enter
SEARCH	Direct frequency tuning
BAND	FM/AM switching
T.MODE	Switch search modes
TUNING +, -	Tuning (up/down)
0 - 9	Preset channel selection (1 - 8) / Direct frequency tuning (0 - 9)
SHIFT	Preset channel block selection
MEMORY	Preset memory registration
TV POWER	TV power on/standby (Default : Marantz)
TV INPUT	Switch TV input (Default : Marantz)

Switching the tuning increment

The tuning increment factory settings are 10kHz for AM, and 0.2 MHz for FM.

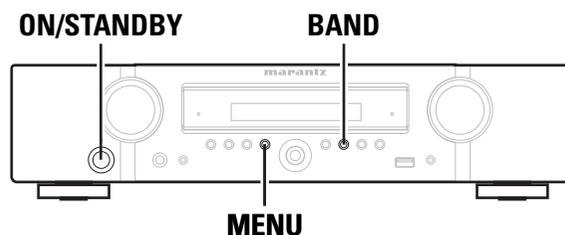

1 While pressing down **BAND** and **MENU**, press **ON/STANDBY** to turn on the power.

“Step ◀ AM10/FM200 ▶” appears on the display.

2 Press ◀ ▶.

“Step ◀ AM9/FM50 ▶” appears on the display, and the tuning increment is switched to AM and FM are 9 kHz and 0.05 MHz.

3 Press **ON/STANDBY**.

- The tuner preset memory will be cleared if this operation is performed.
- This setting will not revert to the default values even when the microprocessor is reset.

Selecting a listening mode (Surround mode)



This unit can play input audio signals in multi-channel surround mode or in stereo mode.
Select a listening mode suitable for the playback contents (cinema, music, etc.) or according to your liking.

Listening mode


Input audio signal	Playback	Listening mode	
2-channel Multi channel		Multi-channel playback (page 26)	For 2-channel signal input: • Surround-channel signals are created and played with surround playback. For multichannel signal input: • The surround signal recorded in source is played as surround playback. (The sound is played according to the settings of the speaker size in "Speaker Config." (page 49).) • Surround-back-channel or front-height-channel signals that are not recorded in source can be created.
2-channel Multi channel		Stereo playback (page 28)	• If multichannel signals are input, they are mixed down to 2-channel audio and are played. • Subwoofer signal is also output.
2-channel Multi channel		Direct playback (page 28)	Sound recorded in source is played as is. • Surround back signals or front height signals are not created. • In this mode, the following items cannot be adjusted. • Tone (page 46) • MultEQ® (page 46) • Dynamic EQ® (page 47) • Dynamic Volume® (page 47) • M-DAX (page 48)
2-channel Multi channel		Dolby Virtual Speaker/ Dolby Headphone playback (page 28)	Virtual Surround processing is performed on 2-channel or multichannel input signals that are played back.



- Some listening modes cannot be selected, depending on the audio format or number of channels of the input signal. For details, see "Types of input signals, and corresponding surround modes" (page 68).
- Adjust the sound field effect with the menu "Surround Parameter" (page 45) to enjoy your favorite sound mode.
- You can select the listening mode by pressing **SURROUND MODE** on the main unit.
Press **SURROUND MODE** and the modes are switched as shown below.

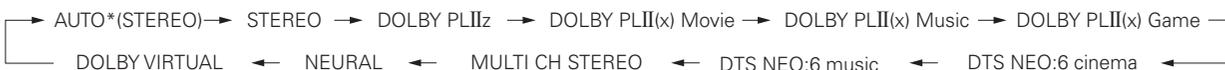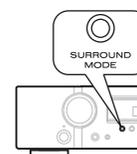

* For "AUTO", press **AUTO** on the amplifier or remote control.

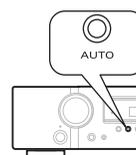


Multi-channel playback

Surround playback of 2-channel sources

1 Playing the source (page 22 – 24).

2 Press **SURR.** to select the surround decoder to play back multichannel sound.

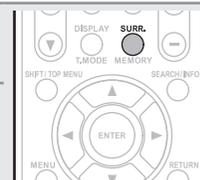

- Each time **SURR.** is pressed, the surround mode is switched. Which decoder can be selected depends on the settings of "Amp Assign" (page 49) or "Speaker Config." (page 49).

DOLBY PLIIz *1 This mode is for 7.1-channel surround playback using the front height speakers.
• "PLIIz Height" is displayed.

DOLBY PLIIx *2 This mode is for 7.1-channel or 6.1-channel surround playback using the surround back speakers.
• "PLIIx Movie", "PLIIx Music" or "PLIIx Game" is displayed.

DOLBY PLII This mode is for 5.1-channel surround playback. Select this mode if no front height speaker nor surround back speaker is to be used.
• "PLII Movie", "PLII Music" or "PLII Game" is displayed.

DTS NEO:6 This mode is for 7.1-channel, 6.1-channel or 5.1-channel surround playback using the surround back speakers.
• "DTS NEO:6 Movie" or "DTS NEO:6 Music" is displayed.

MULTI CH STEREO This mode is for enjoying stereo sound from all speakers.


NEURAL *3 This mode is for 7.1-channel, 6.1-channel or 5.1-channel surround playback using the surround back speakers.
• "NEURAL" is displayed.

- *1 This can be selected when the "Amp Assign" (page 49) setting in the menu is set to "Normal", and the "Front Speaker Setup" setting (page 51) is set to "A".
- *2 This can be selected when "Amp Assign" is set to "Normal" or "Speaker Config." – "S.Back" is not set to "None".
- *3 This mode supports analog 2-channel audio, and linear PCM 2 channel (44.1 kHz, 48 kHz) audio.

❑ Surround playback of multi-channel sources (Dolby Digital, DTS etc.)

1 Playing the source (☞ page 22 – 24).

2 Press **SURR.** to select the surround decoder to play back multichannel sound.

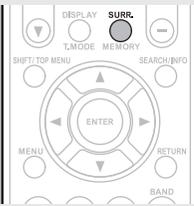

Select the surround mode while viewing the display on the screen (☞ “Displaying the currently playing surround mode” at right).

- Which decoder can be selected depends on the input signal, the settings of “Amp Assign” (☞ page 49) or “Speaker Config.” (☞ page 49).


Displaying the currently playing surround mode

Input signal	Surround mode	Display
DOLBY DIGITAL (2ch)	NEURAL	NEURAL
DOLBY DIGITAL (other than 2ch) / DOLBY DIGITAL EX	DOLBY DIGITAL	DOLBY DIGITAL
	DOLBY DIGITAL EX	DOLBY DIGITAL EX
	DOLBY DIGITAL + PLIIx Movie	DDD+ PLIIx Movie
	DOLBY DIGITAL + PLIIx Music	DDD+ PLIIx Music
DOLBY DIGITAL Plus	DOLBY DIGITAL + PLIIz	DOLBY D + PLIIz
	DOLBY DIGITAL Plus	DOLBY DIGITAL +
	DOLBY DIGITAL Plus + EX	DOLBY D + + EX
	DOLBY DIGITAL Plus + PLIIx Movie	DDD + + PLIIx Mv
DOLBY TrueHD	DOLBY DIGITAL Plus + PLIIx Music	DDD + + PLIIx Ms
	DOLBY DIGITAL Plus + PLIIz	DOLBY D + + PLIIz
	DOLBY TrueHD	DOLBY TrueHD
	DOLBY TrueHD + EX	DOLBY HD +EX
DTS (5.1ch) / DTS-ES Discrete 6.1 / DTS-ES Matrix 6.1 / DTS 96/24	DOLBY TrueHD + PLIIx Movie	DDHD +PLIIx Mv
	DOLBY TrueHD + PLIIx Music	DDHD +PLIIx Ms
	DOLBY TrueHD + PLIIz	DOLBY HD +PLIIz
	DTS SURROUND	DTS SURROUND
	DTS + PLIIx Movie	DTS + PLIIx Mv
	DTS + PLIIx Music	DTS + PLIIx Ms
	DTS + PLIIz	DTS + PLIIz
DTS-HD	DTS + NEO:6	DTS + NEO:6
	DTS ES MTRX6.1	DTS ES MTRX6.1
	DTS ES DSCRT6.1*1	DTS ES DSCRT6.1
	DTS 96/24*2	DTS 96/24
	DTS-HD HI RES	DTS-HD HI RES
	DTS-HD MSTR	DTS-HD MSTR
PCM (multi ch)	DTS-HD + NEO:6	DTS-HD + NEO:6
	DTS-HD + PLIIx Movie	DTS-HD + PLIIx Mv
	DTS-HD + PLIIx Music	DTS-HD + PLIIx Ms
	DTS-HD + PLIIz	DTS-HD + PLIIz
	DTS Express	DTS Express
	MULTI CH IN	MULTI CH IN
All Input signal	MULTI IN + Dolby EX	MULTI +Dolby EX
	MULTI IN + PLIIx Movie	MULTI IN +PLIIx Mv
	MULTI IN + PLIIx Music	MULTI IN +PLIIx Ms
	MULTI IN + PLIIz	MULTI IN +PLIIz
	MULTI CH IN 7.1	MULTI CH IN 7.1
	Dolby VIRTUAL SPEAKER	DOLBY VS

*1 This is displayed when the input signal is “DTS-ES Discrete 6.1”.

*2 This is displayed when the input signal is “DTS 96/24”.

[Views on the display]

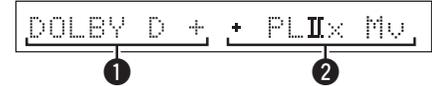

- ① Shows a decoder to be used.
 - A DOLBY DIGITAL Plus decoder is displayed as “DOLBY D +”.
- ② Shows a decoder that creates sound output from the surround back speakers.
 - “+ PLIIz” indicates the front height sound from front height speakers.



For an input signal that can be reproduced in each surround mode, see “Surround modes and surround parameters” (☞ page 66).

Stereo playback

This is the mode for playing in stereo. The tone can be adjusted.

- Sound is output from the front left and right speakers and subwoofer.
- If multichannel signals are input, they are mixed down to 2-channel audio and are played.

1 Playing the source (page 22 – 24).

2 Press **STEREO**. Stereo playback begins.



Direct playback

Sound recorded in source is played as is.

- Surround back signals or front height signals are not created.
- In this mode, the following items cannot be adjusted.
 - Tone (page 46)
 - MultEQ® (page 46)
 - Dynamic EQ® (page 47)
 - Dynamic Volume® (page 47)
 - M-DAX (page 48)

1 Playing the source (page 22 – 24).

2 Press **P.DIRECT** to select the direct mode.



- If **PURE DIRECT** on the main unit is pressed, the same function as with the remote control unit can be obtained.



- Each time **P.DIRECT** is pressed, the direct mode is switched.

Source Direct This mode plays back tracks at high sound quality without passing through the sound quality adjustment circuits.

Pure Direct * This mode plays back tracks at the closest to the original sound quality.

Auto This mode detects the type of input digital signal, and automatically selects the corresponding mode for playback.

* The following circuits that affect sound quality are set to off.

- Main unit's display circuit (The display is turned off.)
- Analog video input/output circuit



- To cancel, press **P. DIRECT** again.
- Video signals are only output when HDMI signals are played in the PURE DIRECT mode.

NOTE

When in the PURE DIRECT mode, the menu screen is not displayed.

Dolby Virtual Speaker/Dolby Headphone playback


Dolby Virtual Speaker mode

This delivers a full surround sound experience from two stereo speakers.

- Sound is output from the front left and right speakers.
- If multichannel signals are input, they are mixed down to 2-channel audio.

1 Playing the source (page 22 – 24).

2 Press **SURR.** to select “DOLBY VS”.

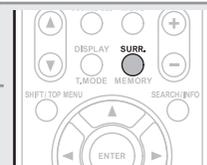

Dolby Headphone mode

You can enjoy listening to multi-channel surround sound through headphones using this mode.

Press **SURR.** to select the Dolby Headphone mode.



- Each time **SURR.** is pressed, the Dolby Headphone mode is switched.

DOLBY HEADPHONE

This is the surround mode for listening with headphones. The surround sound field is played through regular headphones.

DOLBY HP BYPASS

The sound is played in the normal stereo mode rather than the surround mode when listening with headphones.

DOLBY HP PLII Movie

This mode is best suited for movie sources.

DOLBY HP PLII Music

This mode is best suited for music sources.

NOTE

- The surround mode returns to the previous setting as soon as the plug is removed from the jack.
- In headphone mode, Tone Control is not available.
- You can select Dolby HP PLII Movie or Dolby HP PLII Music when a 2-channel source is played back.

Advanced version

Here, we explain functions and operations that let you make better use of this unit.

- **Speaker installation/connection (Other than 7.1-channel system with surround back speakers)**  page 30
- **Connections (Advanced connection)**  page 34
- **Playback (Advanced operation)**  page 35
- **How to make detailed settings**  page 37
- **Other settings**  page 54
- **Operating the connected devices by remote control unit**  page 55

Speaker installation/connection (Other than 7.1-channel system with surround back speakers)

This section explains a wide range of speaker installation/connection/setting procedures.

For details on installing/connecting/setting 7.1 channel audio that uses surround back speakers, see "Simple version (Simple setup guide)" (page 3).

Use the Audyssey® Auto Setup function of this unit to automatically detect the number of connected speakers and perform optimal settings for the speakers to be used.

Procedure for speaker settings

Install

Connect (page 31)


Set up speakers (page 33)

Install

This unit is compatible with Dolby Pro Logic IIz (page 70), which offers an even wider and deeper surround sensation. When using Dolby Pro Logic IIz, install front height speakers.



Install the surround back speakers in a position 60 to 90 cm higher than ear level.

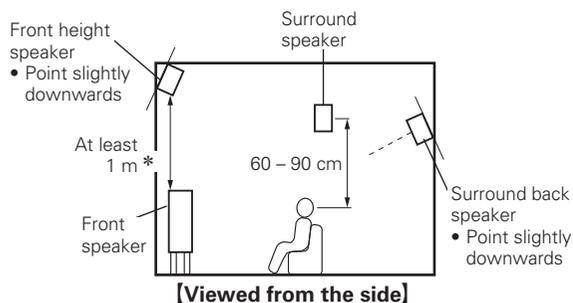


* Recommended for Dolby Pro Logic IIz


NOTE

It is not possible to use the surround back speakers and front height speakers simultaneously.


When 7.1ch (Front height speaker) installed

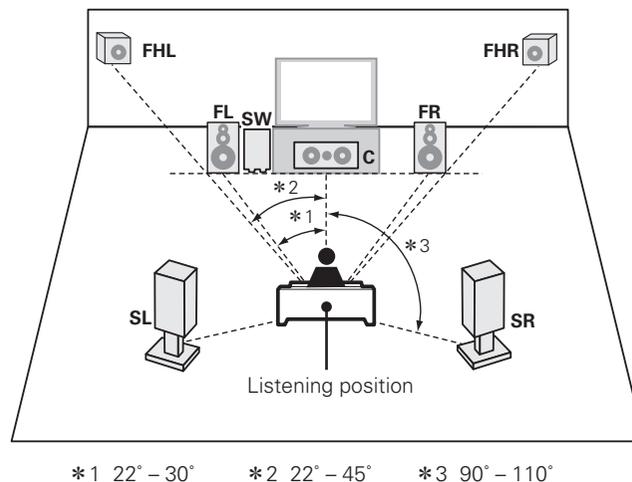


When 5.1ch installed

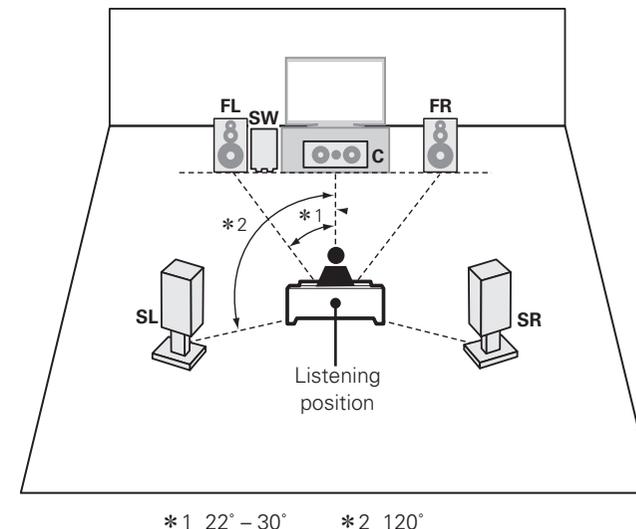

When 6.1ch (Surround back speaker) installed

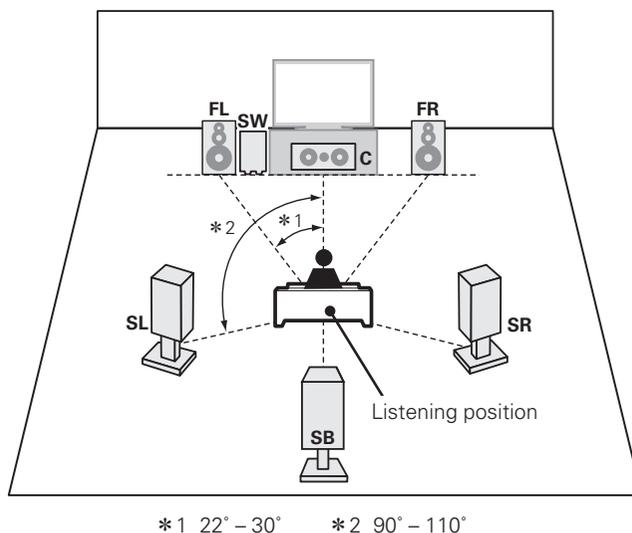

When 2.1ch installed

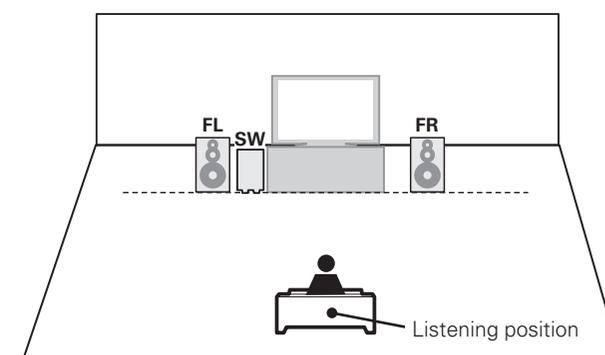

- FL Front speaker (L)
- FR Front speaker (R)
- C Center speaker
- SW Subwoofer
- SL Surround speaker (L)
- SR Surround speaker (R)


- SBL Surround back speaker (L)
- SBR Surround back speaker (R)
- FHL Front height speaker (L)
- FHR Front height speaker (R)

Connect

- For the method of connecting the 7.1-channel system with surround back speakers, see page 4.
- For the method of connecting the TV, see page 5.

7.1-channel (Front height speaker) connection

For 7.1-channel (Front height speaker) playback, set "Amp Assign" in "Set up speakers" (page 33) to "Normal".

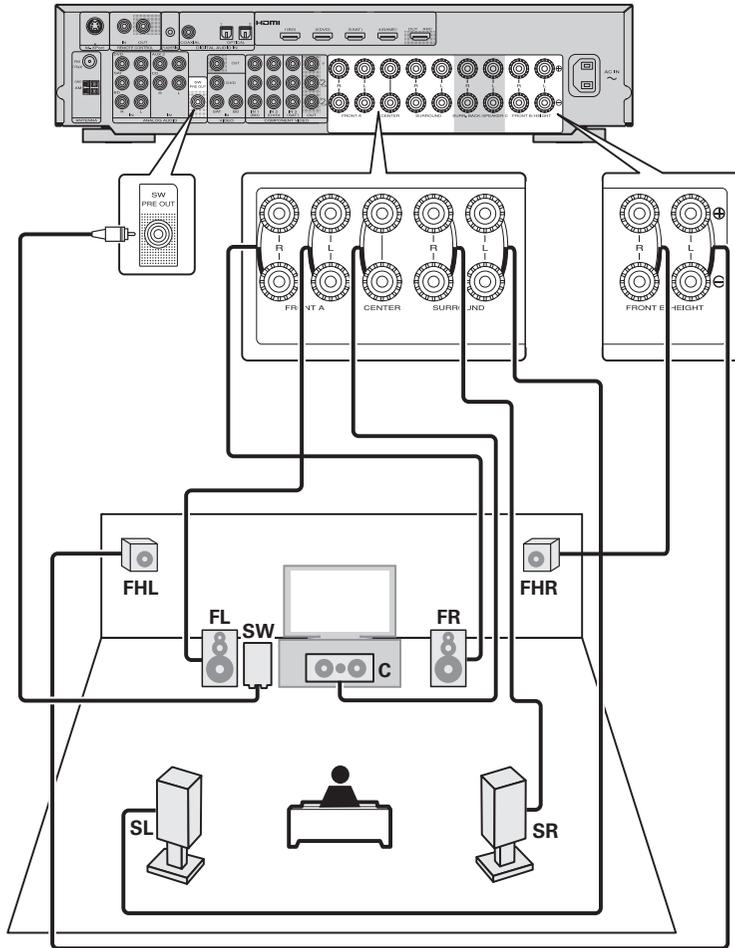


6.1-channel (Surround back speaker) connection

If a single surround back speaker is to be used (with a 6.1-channel connection), connect it to the "L" terminals of the SURR. BACK/SPEAKER C terminal.

For speaker settings in this case, see "When 6.1ch (Surround back speaker) installed" (page 30).

For 6.1-channel (Surround back speaker) playback, set "Amp Assign" in "Set up speakers" (page 33) to "Normal".

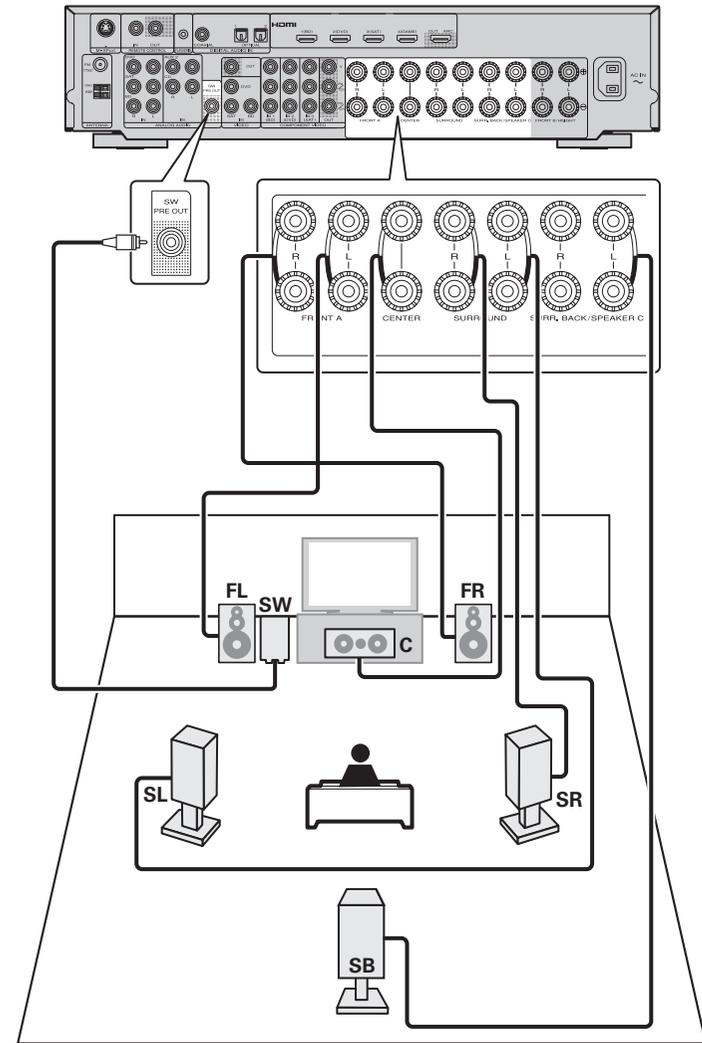

For speaker impedance and speaker cable connections, see page 4.

Simple version

Basic version


Advanced version

Information

Front A/B connection

The second set of front speakers can be connected to the FRONT B/HEIGHT terminals.


In this case, set “Front Speaker Setup” (page 51) of “Speaker Setup” to “B”.

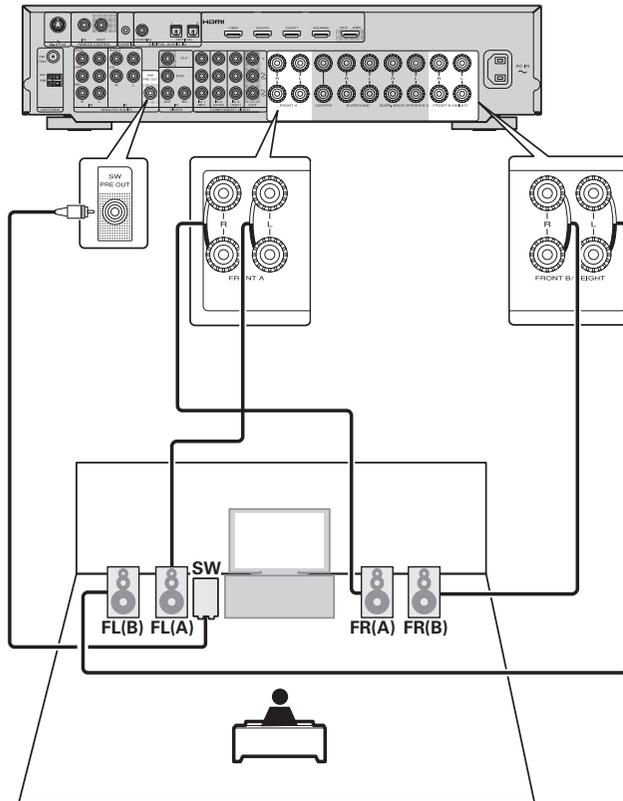

For surround playback of a multichannel source, if you connect the center speaker, surround speakers, surround back speakers and subwoofers, 7.1-channel playback is available.

Front speakers can be used separately, depending on the speaker's specifications or playback source such as front speakers (A) for multichannel playback and front speakers (B) for 2-channel playback (page 51 “Front Speaker Setup”).

2.1-channel/2-channel connection

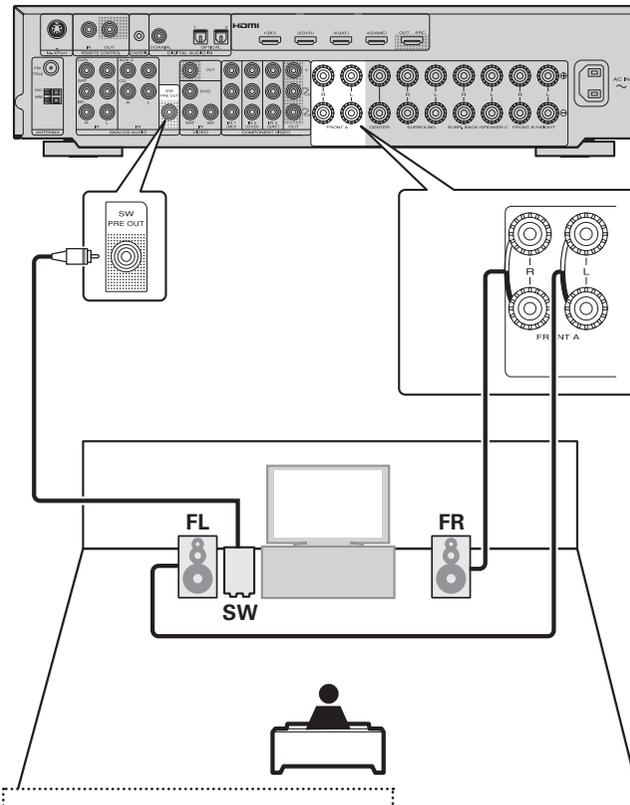


2-channel connection

For 2-channel playback, disconnect the subwoofers.

Bi-amp connection

A bi-amp connection is to connect separate amplifiers to the tweeter terminals and woofer terminals of speakers compatible with the bi-amp function. This prevents the back electromotive force (returned force without output) of the woofer sent to the tweeter, which affects the sound quality of the tweeter, and you can enjoy playback with higher-quality sound.

In this case, set “Amp Assign” of “Set up speakers” (page 33) to “SPKR-C”.

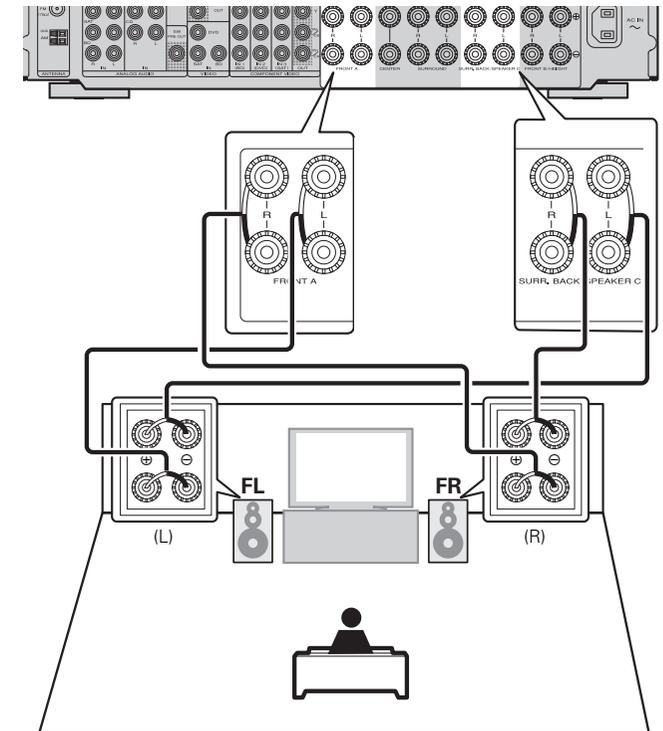

When making a bi-amp connection, the same signal is output from the FRONT A terminal and the SURR.BACK/SPEAKER C terminal.

For surround playback of a multichannel source, if you connect the center speaker, surround speakers and subwoofers, 5.1-channel playback is available.

NOTE

- Use speakers compatible with bi-amp connections.
- When making bi-amp connections, be sure to remove the short-circuiting plate or wire between the speaker's woofer and tweeter terminals.

Set up speakers

around items indicate the settings.

This section provides the setup methods of speaker systems other than the 7.1-channel system (with surround back speakers). For the setup methods of the 7.1-channel system with surround back speakers, see "Set up speakers (Audyssey® Auto Setup)" (page 6) of "Simple version".

First install and connect the speakers to this unit.


1 Set up the remote control unit

- Set up the operation mode
Press **AMP** to set the remote control unit to amplifier operation mode.



Press AMP

2 Connect the setup microphone.

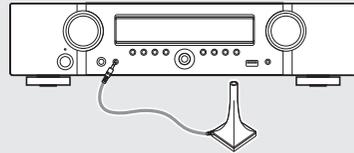

When the setup microphone is connected, the following screen is displayed.

```

3-1. Audyssey Auto Setup
                               MultEQ
Please place microphone
at ear height at
main listening position.
F. Height : Measure
Front Sp. : A
Amp Assign: Normal
Start
Cancel
[ENT] : Select [RTN] : Back
    
```

3 Set up "Amp Assign"

Use Δ ∇ to select "Amp Assign".

```

3-1. Audyssey Auto Setup
                               MultEQ
Please place microphone
at ear height at
main listening position.
F. Height : Measure
Front Sp. : A
Amp Assign: ◀Normal ▶
Start
Cancel
                               [RTN] : Back
    
```

4 Use \triangleleft \triangleright to select the configuration of the connected speakers.

- Normal** Set when using 9.1-channel (Front/Center/Surround/Surround Back/Front height/Subwoofer) speakers.
- SPKR-C** Set for connecting a tweeter of a front speaker to the SURR. BACK/SPEAKER C terminals and a woofer of the front speaker to the FRONT A terminals.

5 Set up "F. Height"

Press Δ to select "F. Height".

- Measure** Set to measure the front height speakers.
- Skip** Set not to measure the front height speakers.

6 Set up "Front.Sp."

Use Δ ∇ to select "Front Sp." and then press \triangleleft \triangleright to select a speaker.

- A** Select this to use front speaker A.
- B** Select this to use front speaker B.

NOTE

If "Measure" is selected in step 5, select "A". If "B" is selected, the "F.Height" measurement cannot be performed.

7 Proceed to page 8 "Preparation" step 5.

NOTE

After performing Audyssey Auto Setup, do not change the speaker connections or subwoofer volume. In event of a change, perform Audyssey Auto Setup again.

Connections (Advanced connection)

Connecting the remote control jacks

When you use this unit connected to Marantz audio components, it sends operation signals to operate each component.


□ Connection

Use the remote connection cable (supplied with a Marantz audio component you want to connect) to connect the REMOTE CONTROL OUT terminal of this unit to the REMOTE CONTROL IN terminal of the component to be connected.

□ Setting

Set the remote control switch located on the rear panel of the connected audio component to "EXTERNAL" or "EXT." to use this feature.

- This setting will disable remote sensor reception of the connected audio component.
- To operate the connected audio component, point the remote control at the remote sensor of this unit.

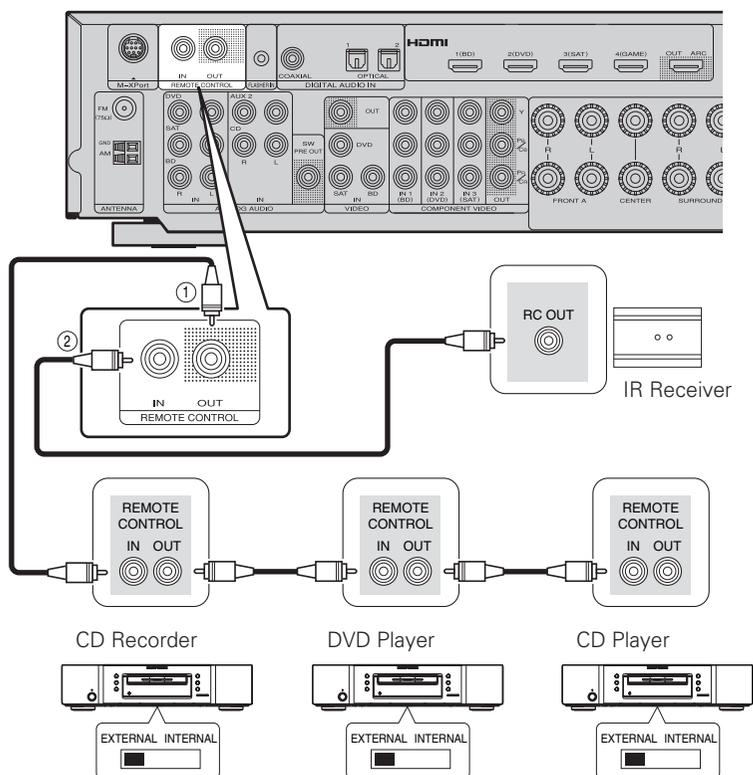

Playback (Advanced operation)

Playback (Basic operation) (👉 page 21)

Selecting a listening mode (Surround mode)
(👉 page 26)

- HDMI control function (👉 page 35)
- Sleep timer function (👉 page 36)
- Adjusting the volume of the speakers (👉 page 36)

Convenient functions

HDMI control function

When you make an HDMI connection with a TV or player compatible with this unit and HDMI control functions, you can perform the following operations by setting the HDMI control function of each device.

- This unit power off can be linked to the TV power off step.**
- You can switch audio output devices with a TV operation.**
When you set "Output audio from amp" in the TV audio output setup operation, you can switch the amp power on.
- You can adjust this unit volume in the TV volume adjustment operation.**
- You can switch this unit input sources through linkage to TV input switching.**
- When playing the player, this unit input source switches to the source for that player.**

NOTE

- When "HDMI Control" is set to "ON", it consumes more standby power.
- The HDMI control function controls operations of a TV that is compatible with the HDMI control function. Make sure that the TV and HDMI are connected when you perform HDMI control.
- Some functions may not operate depending on the connected TV or player. Check the owner's manual of each device for details beforehand.
- When "Power Off Control" on the menu is set to "OFF" (👉 page 52), this unit is not set to standby even if the connected device is in the standby mode.
- When connection changes are implemented, such as adding connections to HDMI devices, linked operations may be initialized. In this case, you will need to reconfigure the settings.
- When "HDMI Control" is set to "ON", it is not possible to assign an HDMI connector to "TV" at "Input Assign" (👉 page 42).

- 1 Enable the HDMI control function of this unit.**
Set "HDMI Control" (👉 page 51) to "ON".
- 2 Turn the power on for all the equipment connected by HDMI cable.**
- 3 Set the HDMI control function for all equipment connected by HDMI cable.**
 - Please consult the operating instructions for the connected equipment to check the settings.
 - Carry out steps 1 and 2 should any of the equipment be unplugged.
- 4 Switch the television input to the HDMI input connected to this unit.**
- 5 Switch this unit input to the HDMI input source and check if the picture from the player is ok.**
- 6 When you turn the TV's power to standby, check that the power of this unit also goes to standby.**



If the HDMI control function does not operate properly, check the following points.

- Is the TV or player compatible with the HDMI control function?
- Is "HDMI Control" (👉 page 51) set to "ON"?
- Is "Power Off Control" (👉 page 52) set to "All" or "Video"?
- Are the HDMI control function settings of all equipment correct?

NOTE

Should any of the operations below be performed, the interlocking function may be reset, in which case, repeat steps 2 and 3.

- "Input Assign" – "HDMI" (👉 page 42) setting has changed.
- There is a change to the connection between the equipment and the HDMI, or an increase in equipment.

Sleep timer function

The power automatically goes into standby once the set time has elapsed.

This is convenient for playing sources while going to sleep.

Press **SLEEP** and display the time you want to set.

The "SLEEP" indicator on the display lights.

- The time switches as shown below each time **SLEEP** is pressed.



To cancel the sleep timer

Press **SLEEP** to set "OFF".

The "SLEEP" indicator on the display turns off.



The sleep timer setting is canceled if this unit's power is set to standby or turned off.


Adjusting the volume of the speakers

You can adjust the channel level either according to the playback sources or to your taste, as described below.

Adjusting the volume of the different speakers

1 Press **AMP** to set the remote control unit to amplifier operation mode.


2 Press **CH LVL**.

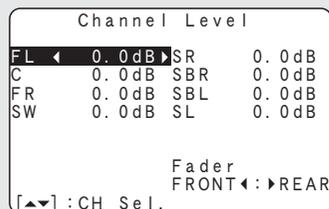

3 Use **△▽** to select the speaker. The speaker that can be set switches each time one of the buttons is pressed.

4 Use **◀▶** to adjust the volume.

- In the case of a subwoofer, pressing **◀** when it is at "-12 dB" will change the setting to "OFF".

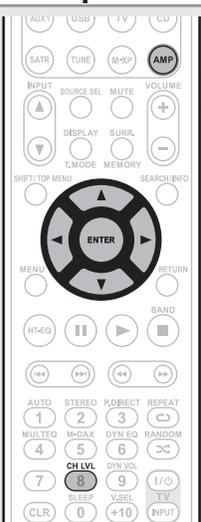


When a headphone jack is inserted, the headphone channel level can be adjusted.

Adjusting the volume of groups of speakers (Fader function)

This function lets you adjust (fade) the sound all at once from the front (front speaker / front height speaker / center speaker) or rear (surround speaker / surround back speaker).

1 Press **AMP** to set the remote control unit to amplifier operation mode.

2 Press **CH LVL**.

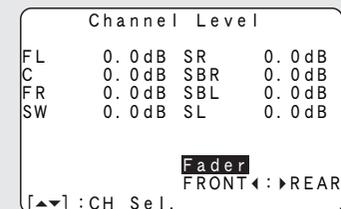


3 Use **▽** to select "Fader", then select the item to be adjusting using **◀▶**.

4 Use **◀▶** to adjust the volume of the speakers. (◀ : front, ▶ : rear)




- The fader function does not affect the subwoofer.
- The fader can be adjusted until the volume of the speaker is adjusted to the lowest value of -12 dB.

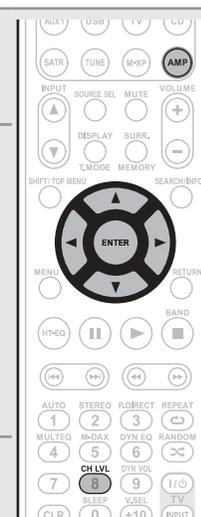

How to make detailed settings

Menu map

For menu operation, connect a TV to this unit and display the menu on the TV screen. For menu operations, see the following page.

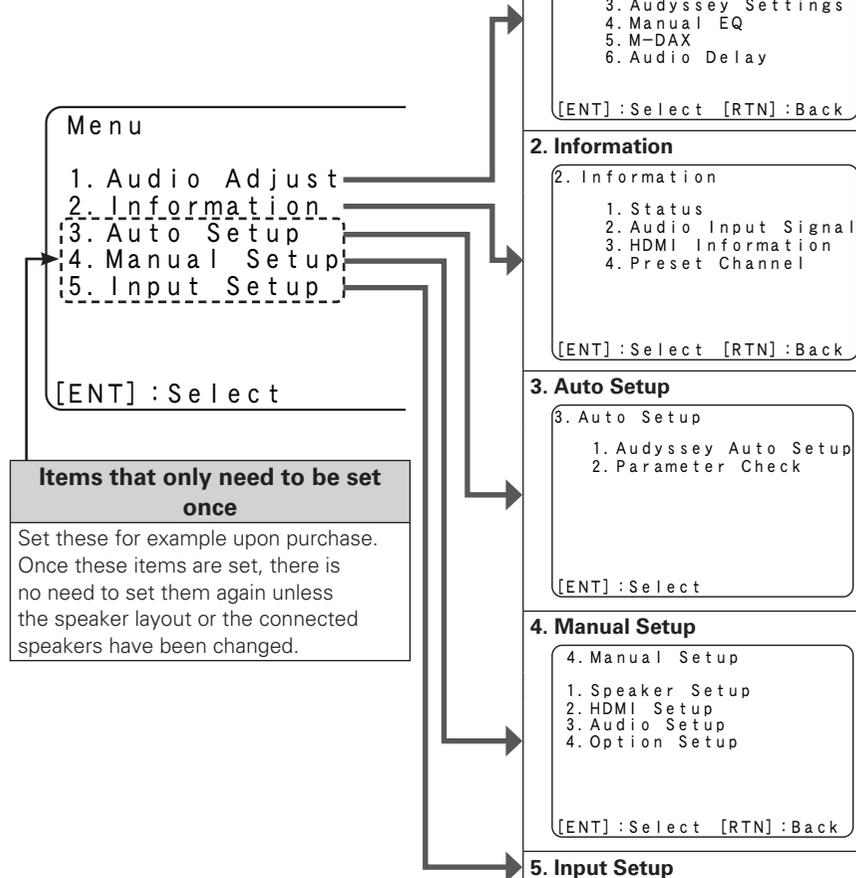

Setting items	Number	Detailed items	Description	Page
1. Audio Adjust 1. Audio Adjust 1. Surround Parameter 2. Tone 3. Audyssey Settings 4. Manual EQ 5. M-DAX 6. Audio Delay [ENT] : Select [RTN] : Back	1-1	Surround Parameter	Adjusts surround sound parameters.	45
	1-2	Tone	Adjusts the tonal quality of the sound.	46
	1-3	Audyssey Settings	Makes MultEQ [®] , Dynamic EQ [®] and Dynamic Volume [®] settings.	46
	1-4	Manual EQ	Uses the graphic equalizer to adjust the tone of each speaker.	48
	1-5	M-DAX	Uncompresses compressed sources and apply bass boost for richer sound.	48
	1-6	Audio Delay	Compensates for incorrect timing between video and audio.	48
2. Information 2. Information 1. Status 2. Audio Input Signal 3. HDMI Information 4. Preset Channel [ENT] : Select [RTN] : Back	2-1	Status	Shows information about current settings.	53
	2-2	Audio Input Signal	Shows information about audio input signals.	53
	2-3	HDMI Information	Displays the HDMI input/output signals and HDMI monitor information.	53
	2-4	Preset Channel	Shows information about tuner preset channels.	53
3. Auto Setup 3. Auto Setup 1. Audyssey Auto Setup 2. Parameter Check [ENT] : Select	3-1	Audyssey Auto Setup	Makes the optimum settings for the speakers being used automatically.	6
	3-2	Parameter Check	Checks Audyssey [®] Auto Setup measurement results. This item is only displayed after Audyssey Auto Setup procedure has been performed.	10
4. Manual Setup 4. Manual Setup 1. Speaker Setup 2. HDMI Setup 3. Audio Setup 4. Option Setup [ENT] : Select [RTN] : Back	4-1	Speaker Setup	Sets the speaker size and distance, the channel level, etc.	49
	4-2	HDMI Setup	Makes settings for HDMI video/audio output.	51
	4-3	Audio Setup	Makes settings for audio playback.	52
	4-4	Option Setup	Makes various other settings.	52
5. Input Setup	-	Auto Preset	Uses the auto preset function to program radio stations.	41
	-	Preset Skip	Sets the preset memories that you do not want to display when tuning.	41
	-	Preset Name	Assigns name to a preset memory.	42
	-	Input Assign	Changes input connector assignment.	42
	-	Video	Makes the video settings.	43
	-	Input Mode	Sets the audio input mode and decode mode.	43
	-	Rename	Changes the display name for this source.	44
	-	Source Level	Adjusts the playback level of the audio input.	44
-	Playback Mode	Makes settings for iPod and USB memory device playback.	44	



Displayed items of the "Input Setup" menu differs, depending on the selected input source.

Examples of on-screen display and front display

Below we describe typical examples of displays on the TV screen and on the set's display window.

	On-screen Display	Front Display	Description
Top menu display			<ol style="list-style-type: none"> 1 The menu items are displayed here. 2 The selected line is displayed here. The currently selected item is displayed on the display. Use Δ/∇ to move to the item you want to set. 3 The number of the current selected setting menu is displayed.
Display when changing settings	<p>Press ENTER.</p>	<p>Press ENTER.</p>	<ol style="list-style-type: none"> 1 The number of the current selected setting menu is displayed. 2 Use Δ/∇/\triangleleft/\triangleright to move to the item you want to set. 3 Press ENTER to set to the mode in which the setting can be made. 4 \triangleleft/\triangleright is displayed at the sides of item whose setting can be changed. Use \triangleleft/\triangleright to change to the desired setting.
Display when inputting characters			<ol style="list-style-type: none"> 1 When \triangleleft/\triangleright is pressed, the cursor moves to the left or right. 2 When Δ/∇ is pressed at the position where you want to input the character, the character is input. 3 The number of the current selected setting menu is displayed. <p>For inputting characters on a keyboard screen or with the number buttons on the remote control unit, see page 39.</p>
Display when resetting		<p>Press ENTER.</p>	<ol style="list-style-type: none"> 1 Press ∇ to select "Default", then press ENTER to set. 2 The number of the current selected setting menu is displayed.

Inputting characters

“Preset Name” (page 42) and “Rename” (page 44) can be changed as desired.


For inputting characters, there are three methods, as shown below.

Method for inputting characters

Method	Operations
Using the cursor buttons (normal screen)	<ul style="list-style-type: none"> Operating with the remote control unit or the main unit. Use Δ ∇ \triangleleft \triangleright and ENTER to input characters.
Using the keyboard screen	<ul style="list-style-type: none"> Operating with the remote control unit. Select a character on the TV screen to input characters.

Normal screen

Display of a normal input screen

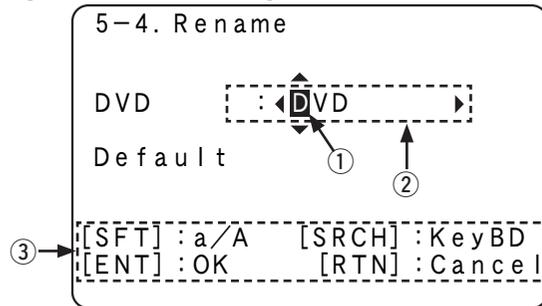

- ① Cursor
- ② Character input section
- ③ Guide for operation buttons
 - **[SFT] SHIFT** Switching upper- and lower-case characters
 - **[SRCH] SEARCH** Switching to the keyboard screen input method
 - **[ENT] ENTER** Registering an input character
 - **[RTN] RETURN** Canceling an input character

Using the cursor buttons

1 Display the screen for inputting characters. (page 37 “Menu map”)

2 Use \triangleleft \triangleright to set the cursor to the character you want to change.

3 Use Δ ∇ to change the character, then press **ENTER**.

• The types of characters that can be input are as shown below.

[Upper case characters]
 ABCDEFGHIJKLMNOPQRSTUVWXYZ
[Lower case characters]
 abcdefghijklmnopqrstuvwxyz
[Symbols] ' () * + - . / : ; < = > ? []
[Numbers] 0 1 2 3 4 5 6 7 8 9 (Space)


• The input character type can be switched by pressing **SHIFT/TOP MENU** while the display name is being changed.

4 Repeat steps 2 and 3 to rename then press **ENTER** to register it.



Keyboard screen

Display of a keyboard input screen

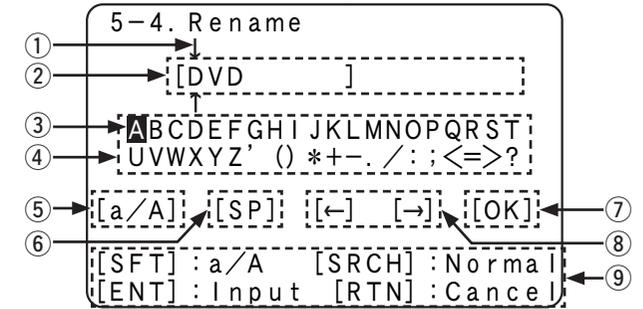

- ① Cursor
- ② Character input section
- ③ Cursor
- ④ Keyboard section
- ⑤ Upper (Symbols)- / lower (Numbers)-case character switching key
- ⑥ Space key
- ⑦ OK key
- ⑧ Cursor keys
- ⑨ Guide for operation buttons
 - **[SFT] SHIFT** Switching upper- and lower-case characters
 - **[SRCH] SEARCH** For switching to the normal screen input method
 - **[ENT] ENTER** For inputting a selected character
 - **[RTN] RETURN** Canceling an input character

Inputting characters

1 Display the screen for inputting characters (see page 37 “Menu map”).

2 Press **SEARCH/INFO** while a normal screen is displayed.

A keyboard screen is displayed.

3 Select a character to be changed.

① Press $\Delta \nabla \triangleleft \triangleright$ to select “[←]” or “[→]”.

② Press **ENTER** to place the cursor at the character to be changed.

Each time **ENTER** is pressed, the cursor moves by one character.

4 Select a character to be input with $\Delta \nabla \triangleleft \triangleright$ then press **ENTER**.

• The types of characters that can be input are as shown below.

[Upper case characters/Symbols]


ABCDEFGHIJKLMNOPQRSTUVWXYZ

UVWXYZ ' () * + - . / : ; < = > ?

[Lower case characters/Numbers]

abcdefghijklmnopqrstuvwxyz

uvwxyz[]0123456789

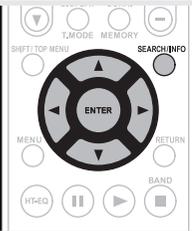

5 Repeat steps 3 and 4 to rename.

6 Use $\Delta \nabla \triangleleft \triangleright$ to select “[OK]”, then press **ENTER**.

Input Setup

Perform settings related to input source playback.

• You do not have to change the settings to use the unit. Make settings when needed.

Menu operation

1 Press **AMP** to set the remote control unit to amplifier operation mode.

2 Press **MENU**.


The menu is displayed on the TV screen.

3 Press $\Delta \nabla$ to select the menu to be set or operated.

4 Press **ENTER** to enter the setting.

• To return to the previous item, press **RETURN**.

• Exiting the Menu, press **MENU** while the menu is displayed. The menu display disappears.

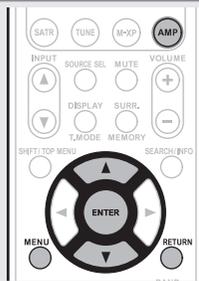

Items that can be set with the Input Setup procedure

Auto Preset (☞ page 41)

```

5-1. Auto Preset
Auto Tuning
Preset Station Memory
Storing Preset Memory
Start
[ENT] : Start [RTN] : Back
    
```

Preset Skip (☞ page 41)

```

5-2. Preset Skip
Block : A
A Block Presets : ON
A1 FM 87.50MHz : ON
A2 FM 89.10MHz : ON
A3 FM 98.10MHz : ON
A4 FM107.90MHz : ON
A5 FM 90.10MHz : ON
A6 FM 90.10MHz : ON
A7 FM 90.10MHz : ON
A8 FM 90.10MHz : ON
[RTN] : Back
    
```

Preset Name (☞ page 42)

```

5-3. Preset Name
Block : A
A1FM 87.50MHz :
A2FM 89.10MHz :
A3FM 98.10MHz :
A4FM107.90MHz :
A5FM 90.10MHz :
A6FM 90.10MHz :
A7FM 90.10MHz :
A8FM 90.10MHz :
[ENT] : Select [RTN] : Back
    
```

Input Assign (☞ page 42)

```

5-1. Input Assign
Default HDMI Digi Comp
BD 1 1
DVD 2 2
SAT 3 C1 3
GAME 4
AUX1
TV 01
[ENT] : Select [RTN] : Back
    
```

Video (☞ page 43)

```

5-2. Video
Video Select : Source
Video Mode : Auto
[RTN] : Back
    
```

Input Mode (☞ page 43)

```

5-3. Input Mode
Input Mode : Auto
Decode Mode : Auto
[RTN] : Back
    
```

Rename (☞ page 44)

```

5-4. Rename
BD : BD
Default
[▲▼] : Up/Down [◀▶] : Rename
[RTN] : Back
    
```

Source Level (☞ page 44)

```

5-5. Source Level
Source Level : 0dB
[RTN] : Back
    
```

Playback Mode (☞ page 44)

```

5-6. Playback Mode
Repeat Mode : OFF
Shuffle Mode : OFF
[RTN] : Back
    
```

Important information

About the display of input sources

In this section, the configurable input sources for each item are shown as follows.

BD DVD SAT GAME AUX1 USB TV CD AUX2 TUNER M-XPort

NOTE

Input sources that have been set to "Delete" at "Source Delete" (☞ page 52) cannot be selected.

Auto Preset

Use the auto preset function to program radio stations.

Setting items	Setting details
Start Start the auto preset process. TUNER	If an FM station cannot be preset automatically, select the desired station by tuning it in manually, then preset it manually.

Preset Skip

Default settings are underlined.

Set preset ch to be skipped when selecting.

Setting items	Setting details
A - G Set the preset channels you do not want to display. You can set by preset memory block (A to G) or by preset channel (1 to 8). TUNER	1 - 8 : Set by individual preset channels in the currently selected preset memory block. • ON : Display the selected preset channel. • Skip : Do not display the selected preset channel. If you set "Block Presets" to "Skip", you can skip the preset memory blocks (A to G).




Preset Name

Assign a name to a preset memory.

Setting items	Setting details
A1 – G8 Select the preset channel. TUNER	<ul style="list-style-type: none"> Up to eight characters can be input. For character input, see page 39.
Default The changed preset name is returned to the default setting.	Yes : Reset to the defaults. No : Do not reset to the defaults.


Input Assign

Examples of input assign menu screen displays

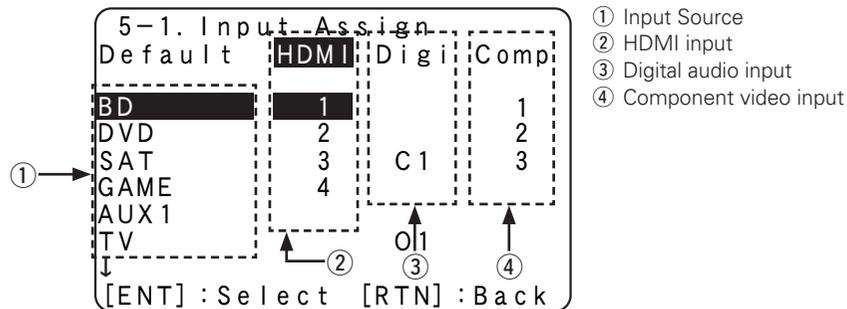

Input assignments menu operations

- Use $\Delta \nabla \triangleleft \triangleright$ to move the highlight to the item you want to set.
- Press **ENTER**, then use $\triangleleft \triangleright$ to select the input connector to be assigned.
- Press **ENTER** to enter the setting.

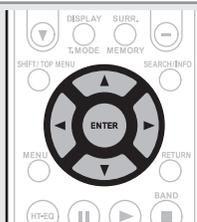

NOTE

If all "HDMI", "Digital" and "Component" assignment of the Game source are set to "None", Game source cannot be selected with the input source selection.

Setting items	Setting details																				
HDMI Set this to change the HDMI input connectors assigned to the input sources. <div style="display: flex; flex-wrap: wrap; gap: 5px;"> BD DVD SAT </div> <div style="display: flex; flex-wrap: wrap; gap: 5px;"> GAME AUX1 TV </div>	HDMI 1 / HDMI 2 / HDMI 3 / HDMI 4 None : Do not assign an HDMI input connector to the selected input source. <ul style="list-style-type: none"> At time of purchase, the settings of the different input sources are as shown below. <table border="1"> <thead> <tr> <th>Input source</th> <th>BD</th> <th>DVD</th> <th>SAT</th> <th>GAME</th> <th>AUX1</th> <th>TV</th> </tr> </thead> <tbody> <tr> <td>Default setting</td> <td>HDMI 1</td> <td>HDMI 2</td> <td>HDMI 3</td> <td>HDMI 4</td> <td>None</td> <td>None</td> </tr> </tbody> </table> <p> An input source to which an HDMI input connector cannot be assigned is displayed as "–".</p> <ul style="list-style-type: none"> To play the video signal assigned at "HDMI" combined with the audio signal assigned at "Input Assign" – "Digital", select "Digital" at "Input Mode" (page 43). The audio signals input from the analog and digital connectors are not output to the monitor. When "HDMI Control" (page 51) is set to "ON", HDMI input connector cannot be assigned to "TV". 	Input source	BD	DVD	SAT	GAME	AUX1	TV	Default setting	HDMI 1	HDMI 2	HDMI 3	HDMI 4	None	None						
Input source	BD	DVD	SAT	GAME	AUX1	TV															
Default setting	HDMI 1	HDMI 2	HDMI 3	HDMI 4	None	None															
Digital Set this to change the digital input connectors assigned to the input sources. <div style="display: flex; flex-wrap: wrap; gap: 5px;"> BD DVD SAT </div> <div style="display: flex; flex-wrap: wrap; gap: 5px;"> GAME AUX1 TV </div> <div style="display: flex; flex-wrap: wrap; gap: 5px;"> CD AUX2 </div>	C1 (COAXIAL) / O1, O2 (OPTICAL) None : Do not assign a digital input connector to the selected input source. <ul style="list-style-type: none"> At time of purchase, the settings of the different input sources are as shown below. <table border="1"> <thead> <tr> <th>Input source</th> <th>BD</th> <th>DVD</th> <th>SAT</th> <th>GAME</th> <th>AUX1</th> </tr> </thead> <tbody> <tr> <td>Default setting</td> <td>None</td> <td>None</td> <td>COAXIAL 1</td> <td>None</td> <td>None</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Input source</th> <th>TV</th> <th>CD</th> <th>AUX2</th> </tr> </thead> <tbody> <tr> <td>Default setting</td> <td>OPTICAL 1</td> <td>OPTICAL 2</td> <td>None</td> </tr> </tbody> </table>	Input source	BD	DVD	SAT	GAME	AUX1	Default setting	None	None	COAXIAL 1	None	None	Input source	TV	CD	AUX2	Default setting	OPTICAL 1	OPTICAL 2	None
Input source	BD	DVD	SAT	GAME	AUX1																
Default setting	None	None	COAXIAL 1	None	None																
Input source	TV	CD	AUX2																		
Default setting	OPTICAL 1	OPTICAL 2	None																		



Setting items	Setting details																				
<p>Component Set this to change the component video input connectors assigned to the input sources.</p> <table border="1"> <tr> <td>BD</td> <td>DVD</td> <td>SAT</td> </tr> <tr> <td>GAME</td> <td>AUX1</td> <td>TV</td> </tr> </table>	BD	DVD	SAT	GAME	AUX1	TV	<p>Comp1/Comp2/Comp3 (Component video) None : Do not assign a component video input connector to the selected input source.</p> <ul style="list-style-type: none"> At time of purchase, the settings of the different input sources are as shown below. <table border="1"> <tr> <th>Input source</th> <td>BD</td> <td>DVD</td> <td>SAT</td> <td>GAME</td> <td>AUX1</td> <td>TV</td> </tr> <tr> <th>Default setting</th> <td>Component 1</td> <td>Component 2</td> <td>Component 3</td> <td>None</td> <td>None</td> <td>None</td> </tr> </table> <p> An input source to which an component video input connector cannot be assigned is displayed as “-”.</p>	Input source	BD	DVD	SAT	GAME	AUX1	TV	Default setting	Component 1	Component 2	Component 3	None	None	None
BD	DVD	SAT																			
GAME	AUX1	TV																			
Input source	BD	DVD	SAT	GAME	AUX1	TV															
Default setting	Component 1	Component 2	Component 3	None	None	None															
<p>Default The “Input Assign” settings are returned to the default settings.</p>	<p>Yes : Reset to the defaults. No : Do not reset to the defaults.</p> <p> If you select “Default” and press ENTER, the message “Default Setting?” is displayed. Select “Yes” or “No”, and then press ENTER.</p>																				

Video

Default settings are underlined.

Set the source video.

* “BD”, “TV” or “GAME” can be set when “HDMI” (page 42) or “Component” (page 43) has been assigned.

Setting items	Setting details
<p>Video Select Video of another input source is played back combined with the playing audio.</p>	<p>Source : Play the picture and sound of the input source. BD / DVD / SAT : Select video input source to view. This can be set for individual input sources.</p> <p> “BD”, “TV” and “GAME” can be selected only when a component video connector is assigned as an input source.</p> <p>NOTE</p> <ul style="list-style-type: none"> It is not possible to select HDMI input signals. Input sources for which “Delete” is selected at “Source Delete” (page 52) cannot be selected. <p> Buttons on the remote control unit can be used for operations. Press V.SEL until the desired picture appears. • To cancel, press V.SEL to select “Source”.</p>

Setting items	Setting details						
<p>Video Mode Make settings for video processing.</p> <table border="1"> <tr> <td>BD</td> <td>DVD</td> <td>SAT</td> </tr> <tr> <td>GAME</td> <td>AUX1</td> <td>TV</td> </tr> </table>	BD	DVD	SAT	GAME	AUX1	TV	<p>Auto : Process video automatically based on the HDMI content information. Movie : Process video normally. Game : Always process video appropriate for game content.</p> <p></p> <ul style="list-style-type: none"> This can be assigned to HDMI terminal in “Input Assign” in the menu. If “Video Mode” is set to “Auto”, the mode is switched according to the input contents.
BD	DVD	SAT					
GAME	AUX1	TV					

Input Mode

Default settings are underlined.

The input modes available for selection may vary depending on the input source.

Setting items	Setting details
<p>Input Mode Set the audio input modes for the different input sources.</p>	<p>Auto : Automatically detect input signal and perform playback. HDMI : Play only signals from HDMI input. Digital : Play only signals from digital input. Analog : Play only signals from analog input.</p> <p></p> <ul style="list-style-type: none"> “HDMI” can be set for input sources for which “HDMI” is assigned at “Input Assign” (page 42). “Digital” can be set for input sources for which “Digital” is assigned at “Input Assign” (page 42). If the input source is set to “TV” or “Game”, it cannot be set to “Analog”. When digital signals are properly input, the DIG. indicator lights on the display. If the DIG. indicator does not light, check the digital input connector assignment and the connections. If “HDMI Control” is set to “ON” and a TV compatible with the ARC is connected via the HDMI MONITOR connectors, the input mode whose input source is “TV” is fixed to ARC. <p> This can also be set by pressing A/D on the remote control unit. Each time A/D is pressed, the setting is changed as shown below.</p> <p>Auto → HDMI → Digital → Analog</p>



Setting items	Setting details									
Decode Mode Set the decode mode for input source. <table border="1" style="margin-top: 10px;"> <tr> <td>BD</td> <td>DVD</td> <td>SAT</td> </tr> <tr> <td>GAME</td> <td>AUX1</td> <td>TV</td> </tr> <tr> <td>CD</td> <td>AUX2</td> <td></td> </tr> </table>	BD	DVD	SAT	GAME	AUX1	TV	CD	AUX2		<p>Auto : Detect type of digital input signal and decode and play automatically.</p> <p>PCM : Decode and play only PCM input signals.</p> <p>DTS : Decode and play only DTS input signals.</p> <p> This item can be set for input sources for which "HDMI" or "Digital" is assigned at "Input Assign" (page 42).</p> <p>• Normally set this mode to "Auto". Set "PCM" and "DTS" when inputting the corresponding input signal.</p> <p>• This can also be set by pressing D.MODE on the remote control unit.</p> 
BD	DVD	SAT								
GAME	AUX1	TV								
CD	AUX2									

Rename

Change the display name of the selected input source.

Setting items	Setting details
Rename Change the display name of the selected input source.	<ul style="list-style-type: none"> Up to eight characters can be input. For character input, see page 39.
Default The input source name is returned to the default setting.	<p>Yes : Reset to the defaults.</p> <p>No : Do not reset to the defaults.</p>

Source Level

Default settings are underlined.

- This function corrects the playback level of the selected input source's audio input.
- Make this setting if there are differences in the input volume levels between the different sources.

Setting details

-12dB - +12dB (0dB)

-  The analog input level and digital input level can be adjusted independently for input sources for which "HDMI" or "Digital" is assigned at "Input Assign" (page 42).

Playback Mode

This item can be set when the input source is "USB".

Setting items	Setting details
Repeat Make settings for repeat mode.	<p>All : All files are played repeatedly.</p> <p>One : A file being played is played repeatedly.</p> <p>Folder : A file in the folder being played is played repeatedly.</p>
Shuffle Make settings for shuffle mode.	<p>ON : Shuffle playback mode is enabled.</p> <p>OFF : Shuffle playback mode is canceled.</p>



Audio Adjust

The sound being played in the surround mode can be adjusted to your liking. The items (parameters) that can be adjusted depend on the signal being input and the currently set surround mode. For details on the adjustable parameters, see "Surround modes and surround parameters" (🔍 page 66).

Menu operation


1 Press **AMP** to set the remote control unit to amplifier operation mode.

2 Press **MENU**.
The menu is displayed on the TV screen.

3 Press **△▽** to select the menu to be set or operated.

4 Press **ENTER** to enter the setting.

- To return to the previous item, press **RETURN**.
- Exiting the Menu, press **MENU** while the menu is displayed. The menu display disappears.

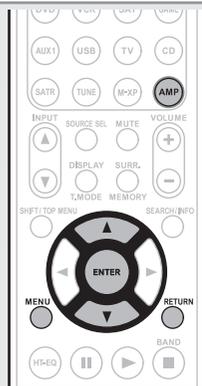

Items that can be set with the Audio Adjust procedure

Surround Parameter (🔍 page 45)

Tone (🔍 page 46)

Audyssey Settings (🔍 page 46)

Manual EQ (🔍 page 48)

M-DAX (🔍 page 48)

Audio Delay (🔍 page 48)

Surround Parameter

Default settings are underlined.

Adjust surround sound parameters. It may not be possible to set this item depending on the input signal.

Setting items	Setting details
HT-EQ Soften the treble range of movie soundtracks for better understanding.	ON : "HT-EQ" is used. OFF : "HT-EQ" is not used.  This can also be set by pressing HT-EQ on the remote control unit.
D.Comp Compress dynamic range (difference between loud and soft sounds).	Low / Mid / High : These set the compression level. OFF : Turn dynamic range compression off.
DRC Compress dynamic range (difference between loud and soft sounds).	Auto : Automatic dynamic range compression on/off control according to the source. This can be set in the Dolby TrueHD mode. Low / Mid / High : These set the compression level. OFF : Dynamic range compression is always off.
LFE Adjust the low-frequency effects level (LFE).	-10dB - 0dB  For proper playback of the different sources, we recommend setting to the values below. <ul style="list-style-type: none"> • Dolby Digital sources : "0dB" • DTS movie sources : "0dB" • DTS music sources : "-10dB"
Center Image Assign center channel signal to front left and right channels for wider sound.	0.0 - 1.0 (0.3)
Panorama Assign front L/R signal also to surround channels for wider sound.	ON : Set. OFF : Do not set.
Dimension Shift sound image center to front or rear to adjust playback balance.	0 - 6 (3)
Center Width Assign center channel signal to front left and right channels for wider sound.	0 - 7 (3)

Remote control operation buttons



Move the cursor (Up/Down/Left/Right)



ENTER Confirm the setting

RETURN



RETURN Return to previous menu

Setting items	Setting details
Height Gain Control the front height channel volume.	Low : Reduce the front height channel volume. Mid : Front height channel sound is output with standard sound volume. High : Increase the front height channel volume. NOTE "Height Gain" is displayed for the following settings. <ul style="list-style-type: none"> When "Amp Assign" (🔧 page 49) is set to "Front Height". When the "Speaker Config." – "Front Height" setting (🔧 page 50) is set to other than "None". When surround mode is "PLIIz" or the PLIIz decoder is used.
Default The "Surround Parameter" settings are returned to the default settings.	Yes : Reset to the defaults. No : Do not reset to the defaults.

Tone

Default settings are underlined.

Adjust the tonal quality of the sound.

Setting items	Setting details
Tone Control Set the tone control function to ON and OFF.	ON : Allow tone adjustment (bass, treble). OFF : Playback without tone adjustment.  "Tone Control" can be set when "Dynamic EQ" (🔧 page 47) is set to "OFF". NOTE The tone cannot be adjusted in the direct mode.
Bass Adjust low frequency range (bass).	-6dB – +6dB (0dB)  "Bass" can be set when "Tone Control" is set to "ON".
Treble Adjust high frequency range (treble).	-6dB – +6dB (0dB)  "Treble" can be set when "Tone Control" is set to "ON".

Audyssey Settings

Default settings are underlined.

Set MultEQ®, Dynamic EQ® and Dynamic Volume®. These can be selected after Audyssey® Auto Setup has been performed. For additional information on Audyssey technology, please see page 70.

NOTE

If you have not performed Auto Setup, or if you change the speaker settings after performing Auto Setup, you may not be able to select Dynamic EQ/Dynamic Volume, and "Run Audyssey" may be displayed. In this case, either perform Audyssey Auto Setup over again or perform "Restore" (🔧 page 10) to return to the settings after Audyssey Auto Setup was run.

Setting items	Setting details
MultEQ Select one equalizer from three modes. MultEQ corrects both time and frequency response problems in the listening area based on Audyssey Auto Setup calibration. We recommend "Audyssey". MultEQ is the prerequisite function for Dynamic EQ and Dynamic Volume.	Audyssey : Optimize the frequency response of all speakers. Audyssey Byp.L/R : Optimize frequency response of speakers except front L and R speakers. Audyssey Flat : Optimize frequency response of all speakers to flat response. Manual : Apply frequency response set with "Manual EQ" (🔧 page 48). OFF : Turn "MultEQ" equalizer off.  <ul style="list-style-type: none"> "Audyssey", "Audyssey Byp. L/R" and "Audyssey Flat" can be selected after Audyssey Auto Setup has been performed. "Audyssey" is automatically selected after performing Audyssey Auto Setup. When "Audyssey", "Audyssey Byp. L/R" or "Audyssey Flat" is selected,  illuminates. After running Audyssey Auto Setup, if the Speaker Configuration, Distance, Channel Level, and Crossover Freq. have changed without increasing the number of speakers measured, only  illuminates. Press MULTEQ on the remote control unit to set this setting. 
NOTE	<ul style="list-style-type: none"> "MultEQ" and "Manual" cannot be selected when "EQ Customize" is set to "Not Used" (🔧 page 52). When using headphones, "MultEQ" is automatically set to "OFF".



Setting items	Setting details
<p>Dynamic EQ® Solve the problem of deteriorating sound quality as volume is decreased by taking into account human perception and room acoustics. Works with MultEQ.</p>	<p>ON : Use Dynamic EQ. OFF : Do not use Dynamic EQ.</p>  <ul style="list-style-type: none"> AUDYSSEY MULTEQ DYN EQ is displayed when set to "ON". This can also be set by pressing DYN EQ on the remote control unit. <p>Each time DYN EQ is pressed, the setting is changed as shown below.</p> <p style="text-align: center;">Dynamic EQ : ON ↔ Dynamic EQ : OFF</p> 
<p>Reference Level Offset Audyssey Dynamic EQ is referenced to the standard film mix level. It makes adjustments to maintain the reference response and surround envelopment when the volume is turned down from 0 dB. However, film reference level is not always used in music or other non-film content. Dynamic EQ Reference Level Offset provides three offsets from the film level reference (5 dB, 10 dB, and 15 dB) that can be selected when the mix level of the content is not within the standard.</p>	<p>0dB (Film Ref) : This is the default setting and should be used when listening to movies. 5dB : Select this setting for content that has a very wide dynamic range, such as classical music. 10dB : Select this setting for jazz or other music that has a wider dynamic range. This setting should also be selected for TV content as that is usually mixed at 10 dB below film reference. 15dB : Select this setting for pop/rock music or other program material that is mixed at very high listening levels and has a compressed dynamic range.</p>  <p>Setting is enabled when "Dynamic EQ" is "ON" (page 47).</p>

Setting items	Setting details
<p>Dynamic Volume® Solve the problem of large variations in volume level between TV, movies and other content (between quiet passages and loud passages, etc.) by automatically adjusting to the user's preferred volume setting.</p>	<p>Heavy : Most adjustment to softest and loudest sounds. Medium : Medium adjustment to loudest and softest sound. Light : Least adjustment to loudest and softest sounds. OFF : Do not use the "Dynamic Volume".</p>  <ul style="list-style-type: none"> AUDYSSEY MULTEQ DYN VOL is displayed when set to "ON". If "Dynamic Volume" is set to "Yes" in Auto Setup (page 9), the setting is automatically changed to "Heavy". This can also be set by pressing DYN VOL on the remote control unit. <p>Each time DYN VOL is pressed, the setting is changed as shown below.</p> <p style="text-align: center;"> Dynamic Volume : OFF → Dynamic Volume : Heavy Dynamic Volume : Light ← Dynamic Volume : Medium </p> 



Manual EQ

Default settings are underlined.

Use the graphic equalizer to adjust the tone of each speaker.
 "Manual EQ" can be set when "MultEQ®" setting (page 46) is "Manual".

Setting items	Setting details
Adjust CH Correct the tone of each speaker.	① Select the speaker tone adjustment method. All CH : Adjust the tone of all speakers together. L/R CH : Adjust the tone of left and right speakers together. Each CH : Adjust the tone of each speaker. ② Select the speaker. ③ Select the adjustment frequency band. 63Hz / 125Hz / 250Hz / 500Hz / 1kHz / 2kHz / 4kHz / 8kHz / 16kHz • Select the speakers you want to adjust when "L/R" or "Each" is selected. ④ Adjust the level. -20.0dB – +6.0dB (0.0dB)
Base Curve Copy Copy "Audyssey Flat" curve from MultEQ.	Yes : Copy. No : Do not copy.  "Base Curve Copy" is displayed after Audyssey Auto Setup has been performed.
Default The "Manual EQ" settings are returned to the default settings.	Yes : Reset to the defaults. No : Do not reset to the defaults.

M-DAX

Compressed audio formats such as MP3, WAV, WMA (Windows Media Audio) and MPEG-4 AAC reduce the amount of data by eliminating signal components that are hard for the human ear to hear. The M-DAX function generates the signals eliminated upon compression, restoring the sound to conditions near those of the original sound before compression. It also corrects the sense of volume of the bass to obtain richer sound with compressed audio signals.

Setting details

- OFF** : Do not use M-DAX.
- Low** : Optimized mode for compressed sources with normal highs.
- Mid** : Apply suitable bass and treble boost for all compressed sources.
- High** : Optimized mode for compressed sources with very weak highs.



- This item can be set with analog signals or when a PCM signal (fs = 44.1/48 kHz) is input.
- This cannot be set when the surround mode is set to "DIRECT".
- When set to "OFF", the M-DAX indicator on the front panel switches off.
- This can also be set by pressing **M-DAX** on the remote control unit.



Audio Delay

Default settings are underlined.

While viewing video, manually adjust the time to delay audio output.

Setting details

0ms – 200ms



- This item can be set within the range of 0 to 200 ms when "Auto Lip Sync" is set to "ON" and when a TV compatible with Auto Lip Sync is connected.
- Store "Audio Delay" for each input source.
- Audio Delay for game mode can be set when "Video Mode" (page 43) is set to "Game".
- You can also adjust the time to delay audio output after pressing **DLY** followed by the $\triangleleft \triangleright$ on the remote control, instead of using the menu operation.



Move the cursor (Up/Down/Left/Right)



ENTER Confirm the setting

RETURN



RETURN Return to previous menu


Manual Setup

Set when changing Audyssey® Auto Setup settings, or when changing the audio, video, display or other settings.

- If you change the speaker settings after performing Audyssey Auto Setup, it will not be possible to set MultEQ®, Dynamic EQ® and Dynamic Volume® (page 46, 47).
- Can be used without changing the settings. Please set if necessary.

Menu operation

- 1 Press AMP to set the remote control unit to amplifier operation mode.**
- 2 Press MENU.**
The menu is displayed on the TV screen.
- 3 Press Δ / ∇ to select the menu to be set or operated.**
- 4 Press ENTER to enter the setting.**
 - To return to the previous item, press RETURN.
 - Exiting the Menu, press MENU while the menu is displayed. The menu display disappears.

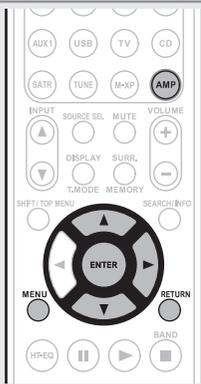

Items that can be set with the Manual Setup procedure

Speaker Setup (page 49)

- 4-1. Speaker Setup
1. Amp Assign
 2. Speaker Config.
 3. Bass Setting
 4. Distance
 5. Channel Level
 6. Crossover Freq.
 7. Front Sp Setup

[ENT] : Select [RTN] : Back

HDMI Setup (page 51)

- 4-2. HDMI Setup
- Auto Lipsync : ON
 - HDMI Audio Out : Amp
 - HDMI Control : OFF

[RTN] : Back

Audio Setup (page 52)

- 4-3. Audio Setup
1. EQ Customize

[ENT] : Select [RTN] : Back

Option Setup (page 52)

- 4-4. Option Setup
1. Volume Control
 2. Source Delete
 3. On-Screen Display
 4. Display
 5. Setup Lock

[ENT] : Select [RTN] : Back

Speaker Setup

Default settings are underlined.

- Perform when setting the speakers manually or when changing settings made in Audyssey Auto Setup.
- If you change the speaker settings after performing Audyssey Auto Setup, it will not be possible to select MultEQ, Dynamic EQ and Dynamic Volume (page 46, 47).
 - Manual Setup can be used without changing the settings. Please set if necessary.

Setting items	Setting details
Amp Assign Set the speakers connected to this unit.	<p>Normal : Set when using 9.1-channel (Front/Center/Surround/Surround Back/Subwoofer) speakers.</p> <p>SPKR C : Set for connecting a tweeter of a front speaker to the SURR. BACK/SPEAKER C terminals and a woofer of the front speaker to the FRONT A terminals.</p>
Speaker Config. Select speaker configuration and size (bass reproduction capability).	<p>Front : Set the front speaker size.</p> <ul style="list-style-type: none"> • Large : Use a large speaker that can adequately play back low frequencies. • Small : Use a small speaker that has inadequate playback capacity for low frequencies. <p>NOTE</p> <p>Do not use the outward shape of the speaker to determine selection of a "Large" or "Small" speaker. Instead, use the frequencies set in "Crossover Freq." (page 51) as the standard for determining bass reproduction capability.</p> <ul style="list-style-type: none"> • When "Subwoofer" is set to "No", "Front" is automatically set to "Large". • When "Front" is set to "Small", "Center", "Surround", "Surround Back" and "Front Height" can not be set to "Large". <p>Center : Set the presence and size of the center speaker.</p> <ul style="list-style-type: none"> • Large : Use a large speaker that can adequately play back low frequencies. • Small : Use a small speaker that has inadequate playback capacity for low frequencies. • None : Select when a center speaker is not connected. <p>• "Large" is not displayed when "Front" is set to "Small".</p> <p>Subwoofer : Set the presence of a subwoofer.</p> <ul style="list-style-type: none"> • Yes : Use a subwoofer. • No : Select when a subwoofer is not connected. <p>• When "Front" is set to "Small", "Subwoofer" is automatically set to "Yes".</p>




Setting items	Setting details
Speaker Config. (Continued)	<p>Surround : Set the presence and size of the surround speakers.</p> <ul style="list-style-type: none"> • Large : Use a large speaker that can adequately play back low frequencies. • Small : Use a small speaker that has inadequate playback capacity for low frequencies. • None : Select when the surround speakers are not connected. <p></p> <ul style="list-style-type: none"> • When "Surround" is set to "Large", "Surround Back" and "Front Height" can be set to "Large". • When "Surround" is set to "None", "Surround Back" and "Front Height" can automatically set to "None". <hr/> <p>S.Back : Set the presence, size and number of surround back speakers.</p> <ul style="list-style-type: none"> • Large : Use a large speaker that can adequately play back low frequencies. • Small : Use a small speaker that has inadequate playback capacity for low frequencies. • None : Select when the surround back speakers are not connected. • 2sp : Use two surround back speakers. • 1sp : Use only one surround back speaker. When you select this setting, connect the surround back speaker to the left (L) channel. <p>NOTE</p> <p>When the "Amp Assign" setting ( page 49) is other than "Normal", you cannot make the "S.Back" setting.</p> <hr/> <p>Front Height : Set the presence and size of the front height speakers.</p> <ul style="list-style-type: none"> • Large : Use a large speaker that can adequately play back low frequencies. • Small : Use a small speaker that has inadequate playback capacity for low frequencies. • None : Select when the front height speakers are not connected. <p>NOTE</p> <p>When the "Amp Assign" setting ( page 49) is other than "Front Height", you cannot make the "Front Height" setting.</p>

Setting items	Setting details
Bass Setting Set subwoofer and LFE signal range playback.	<p>Subwoofer Mode : Select low range signals to be reproduced by subwoofer.</p> <ul style="list-style-type: none"> • LFE : The low range signal of the channel set to "Small" speaker size is added to the LFE signal output from the subwoofer. • LFE+Main : The low range signal of all channels is added to the LFE signal output from the subwoofer. <p></p> <ul style="list-style-type: none"> • "Subwoofer Mode" can be set when "Speaker Config." – "Subwoofer" ( page 49) is set to "Yes". • Play music or a movie source and select the mode offering the strongest bass. • Select "LFE+Main" if you want the bass signals to always be produced from the subwoofer. <p>NOTE</p> <p>If "Front" and "Center" for "Speaker Config." are set to "Large", and "Subwoofer Mode" is set to "LFE", no sound may be output from the subwoofers, depending on the input signal or selected surround mode.</p> <hr/> <p>LPF for LFE : Set LFE signal playback range.</p> <ul style="list-style-type: none"> • 80Hz / 90Hz / 100Hz / 110Hz / 120Hz / 150Hz / 200Hz / 250Hz <hr/> <p>Unit : Set the unit of distance.</p> <ul style="list-style-type: none"> • Feet / Meters <hr/> <p>Step : Set the minimum variable width of the distance.</p> <ul style="list-style-type: none"> • 1ft / 0.1ft • 0.1m / 0.01m <hr/> <p>FL / FR / C / SW / SL / SR / SBL* / SBR* / FHL / FHR : Select the speaker.</p> <p>* When the "Speaker Config." – "S.Back" setting ( page 50) is set to "1sp", "S.Back" is displayed.</p> <ul style="list-style-type: none"> • 0.0ft – 60.0ft / 0.00m – 18.00m : Set the distance. <p></p> <ul style="list-style-type: none"> • The speakers that can be selected differ depending on the "Amp Assign" ( page 49) and "Speaker Config." ( page 49) settings. • Default settings : FL / FR / C / SW / FHL / FHR : 12.0 ft (3.6 m) SL / SR / SBL / SBR : 10.0 ft (3.0 m) • Set the difference in the distance between the speakers to less than 20 ft (6.0 m). <p>NOTE</p> <p>Speakers set to "None" in "Speaker Config." ( page 49) are not displayed.</p> <p>Default : The "Distance" settings are returned to the default settings.</p> <ul style="list-style-type: none"> • Yes : Reset to the defaults. • No : Do not reset to the defaults. <p> When you select "Default" and press ENTER, the "Default Setting?" prompt is displayed. Select either "Yes" or "No", and press ENTER.</p>
Distance Set distance from listening position to speakers. Measure beforehand the distance from the listening position to each speaker.	



Setting items	Setting details
Channel Level Set the volume of the test tone to be the same when it is output from each speaker. 	Test Tone Start : Output test tone. <ul style="list-style-type: none"> • FL / C / FR / SR / SBR* / SBL* / SL / FHL / FHR / SW : Select the speaker. * When the "Speaker Config." – "S.Back" setting (page 50) is set to "1sp", "S.Back" is displayed. • -12.0dB – +12.0dB (0.0dB) : Adjust the volume. <p></p> <ul style="list-style-type: none"> • When ◀ is pressed while the subwoofer volume is set to "-12 dB", the "Subwoofer" setting switches to "OFF". • When "Channel Level" is adjusted, the adjusted values are set for all the surround modes. To adjust the channel level separately for the different surround modes, use the operation see page 36. • When you press TEST TONE on the remote control, you can enter this setting item immediately. <p>NOTE</p> <ul style="list-style-type: none"> • Speakers set to "None" in the "Speaker Config." (page 49) settings are not displayed. • When a headphones jack is inserted in the PHONES jack of this unit, the "Channel Level" is not displayed. <p>Default : The "Channel Level" settings are returned to the default settings.</p> <ul style="list-style-type: none"> • Yes : Reset to the defaults. • No : Do not reset to the defaults.
Crossover Freq. Set the maximum frequency of the bass signal output from each channel to the subwoofer. Set the Crossover Freq. to suit the bass reproduction capability of the speaker being used.	Crossover : Set the crossover frequency. <ul style="list-style-type: none"> • 40Hz / 60Hz / 80Hz / 90Hz / 100Hz / 110Hz / 120Hz / 150Hz / 200Hz / 250Hz <p>Advanced : Specify crossover frequency for each speaker.</p> <ul style="list-style-type: none"> • Front / Center / Surround / S.Back / Front Height : Select the speaker. • 40Hz / 60Hz / 80Hz / 90Hz / 100Hz / 110Hz / 120Hz / 150Hz / 200Hz / 250Hz : Set the crossover frequency. <p></p> <ul style="list-style-type: none"> • "Crossover Freq." can be set when the "Bass Setting" – "Subwoofer Mode" (page 50) setting is "LFE+Main", or when you have a speaker that is set to "Small". • Always set the crossover frequency to "80Hz". When using small speakers, however, we recommend setting the crossover frequency to a higher frequency. • For speakers set to "Small", sound below the crossover frequency is cut from the sound output. The cut bass sound is output from the subwoofer or front speakers. • The speakers that can be set when "Advanced" is selected differ depending on the "Subwoofer Mode" setting (page 50). <ul style="list-style-type: none"> • When "LFE" is selected, speakers set to "Small" at "Speaker Config." can be set. If the speakers are set to "Large", "Full Band" is displayed and the setting cannot be made. • If set to "LFE+Main", this setting can be made regardless of the speaker size.

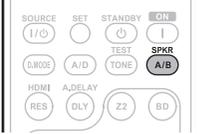Setting items	Setting details
Front Speaker Setup Set the front speakers to use for every surround mode.	<ul style="list-style-type: none"> • A : Front speaker A is used. • B : Front speaker B is used. <p> You can switch speakers by pressing SPKR A/B on the remote control.</p> 

HDMI Setup

Default settings are underlined.

Make settings for HDMI video/audio output.

Setting items	Setting details
Auto Lip Sync Make automatic compensation for timing shift in audio and video output.	<p>ON : Compensated.</p> <p>OFF : Not compensated.</p>
HDMI Audio Out Select HDMI audio output device.	<p>Amp : Play back through speakers connected to the receiver.</p> <p>TV : Play back through TV connected to the receiver.</p> <p> When the HDMI control function is activated, priority is given to the TV audio setting (page 35 "HDMI control function").</p>
HDMI Control You can link operations with devices connected to HDMI and compatible with HDMI Control.	<p>ON : Use HDMI control function.</p> <p>OFF : Do not use HDMI control function.</p> <p></p> <ul style="list-style-type: none"> • When a device that is not compatible with the HDMI control function is connected, set "HDMI Control" to "OFF". • Please consult the operating instructions for each connected component to check the settings. • Refer to "HDMI control function" (page 35) for more information about the HDMI control function. <p>NOTE</p> <ul style="list-style-type: none"> • When "HDMI Control" is set to "ON", it consumes more standby power. If you are not using this unit for an extended period, it is recommended that you unplug the power cord from the power outlet. • "HDMI Control" does not work when the power to the equipment is off. Either turn power on or set to standby. • The HDMI control function controls operations of a TV that is compatible with the HDMI control function. Make sure that the TV and HDMI are connected when you perform HDMI control. • If the "HDMI Control" settings have been changed, always reset the power to connected devices after the change.
Standby Source Sets the HDMI input source to put into standby when the power is on.	<p>Last : This item is set at the last-used input source.</p> <p>HDMI1 / HDMI2 / HDMI3 / HDMI4 : Put the respective input source into standby.</p> <p> "Standby Source" can be set when "HDMI Control" is set to "ON".</p>



Setting items	Setting details
Power Off Control Links the power standby of this unit to external equipment.	All : If power to a connected TV is turned off independently of the input source, power to this unit is automatically set to standby. Video : If power to a connected TV is turned off when the input source is BD / DVD / SAT / GAME / AUX1, power to this unit is automatically set to standby. OFF : This unit does not link with power to a TV.  "Power Off Control" can be set when "HDMI Control" is set to "ON".

Audio Setup

Default settings are underlined.

Make settings for audio playback.

Setting items	Setting details
EQ Customize Set so that unused equalizer settings are not displayed when MULTEQ is pressed.	Audyssey Byp. L/R : Set when not using "Audyssey Byp. L/R" equalizer. • Used : Use. • Not Used : Do not use.  Set so that "Audyssey Byp. L/R" settings can be made when Audyssey Auto Setup is performed.
	Audyssey Flat : Set when not using "Audyssey Flat" equalizer. • Used : Use. • Not Used : Do not use.  Set so that "Audyssey Flat" settings can be made when Audyssey Auto Setup is performed.
	Manual : Set when not using the "Manual" equalizer. • Used : Use. • Not Used : Do not use.

Option Setup



Default settings are underlined.

Make various other settings.

Setting items	Setting details
Volume Control Set the volume setting.	Volume Display : Set how volume is displayed. • Relative : Display --dB (Min), in the range -80.5 dB – 18 dB. • Absolute : Display in the range 0 (Min) – 99.  The "Volume Display" setting is applied also to the "Volume Limit" and "Power On Level" display method.
	Volume Limit : Make a setting for maximum volume. • OFF : Do not set a maximum volume. • -20dB (61) / -10dB (71) / 0dB (81)
	Power On Level : Define the volume setting that is active when the power is turned on. • Last : Use the memorized setting from the last session. • --- (0) : Always use the muting on condition when power is turned on. • -80dB – +18dB (1 – 99) : The volume is adjusted to the set level.
	Mute Level : Set the amount of attenuation when muting is on. • Full : The sound is muted entirely. • -40dB : The sound is attenuated by 40 dB down. • -20dB : The sound is attenuated by 20 dB down.
Source Delete Remove from the display input sources that are not used.	BD / DVD / SAT / GAME / AUX1 / USB / TV / CD / AUX2 / TUNER / M-XPort : Select input source that is not used. • ON : Use this source. • Delete : Do not use this source.
	<div style="border: 1px solid black; padding: 2px; text-align: center;">NOTE</div> Input sources set to "Delete" cannot be selected using SOURCE SELECT .
On-Screen Display Make the settings related to displays on the TV screen.	Screensaver : Make screensaver settings. • ON : The screen saver is activated during menu display, iPod or TUNER screen display if no operation is performed for an approximately 3-minute continuous period. When you press $\Delta \nabla \triangleleft \triangleright$, the screensaver is cancelled and the screen before that screen saver started is displayed. • OFF : Screensaver is not activated.
	Text : Display the details of operation when switching surround mode, input mode, etc. • ON : Turn display on. • OFF : Turn display off.
	Master Volume : Display the master volume during adjustment. • Bottom : Display at the bottom. • Top : Display at the top. • OFF : Turn display off.  When the master volume display is hard to see when superimposed on movie subtitles, set to "Top".




Manual Setup

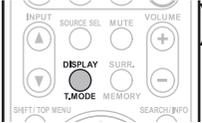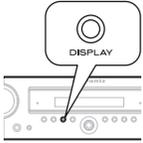Setting items	Setting details
On-Screen Display (Continued)	<p>USB : Set the USB screen display time when the input source is "USB".</p> <ul style="list-style-type: none"> • Always : Show display continuously. • 30sec : Show display for 30 seconds after operation. • 10sec : Show display for 10 seconds after operation. • OFF : Turn display off. <p>TUNER : Set the tuner screen display time when the input source is "TUNER".</p> <ul style="list-style-type: none"> • Always : Show display continuously. • 30sec : Show display for 30 seconds after operation. • 10sec : Show display for 10 seconds after operation. • OFF : Turn display off.
Display Set the display on/off setting.	<p>ON : Display is always on. Display Auto OFF : Display is off except when showing the status display. Display OFF : Display is always off.</p>  <p> This can also be set by pressing DISPLAY on the remote control unit or main unit. Each time DISPLAY is pressed, the setting is changed as shown below.</p>  <p>  ON  Display Auto Off  Display OFF  </p>
Setup Lock Protect settings from inadvertent change.	<p>ON : Turn protection on. OFF : Turn protection off.</p> <p> When canceling the setting, set "Setup Lock" to "OFF".</p> <p>NOTE</p> <p>When "Setup Lock" is set to "ON", the settings listed below can no longer be changed. Also, "SETUP LOCKED!" is displayed if you attempt to operate related settings.</p> <ul style="list-style-type: none"> · Menu operations · M-DAX · MultEQ[®] · Dynamic EQ[®] · Dynamic Volume[®] · Channel Level

Information

Show information about receiver settings, input signals, etc.

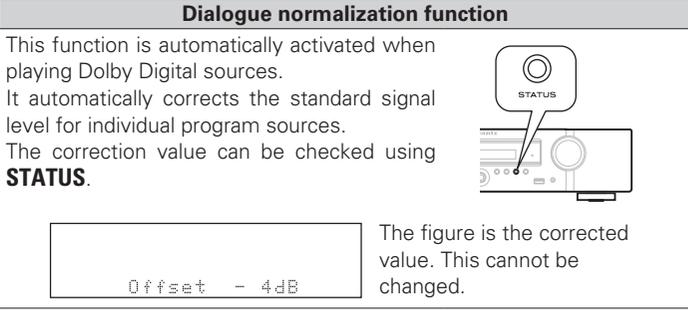Items	Setting details
Status Show information about current settings.	<p>Select Source / Name / Surround Mode / Input Mode / Decode Mode / Video Select / Video Mode / Content Type etc.</p> <p>NOTE</p> <p>The information displayed differs according to the input source.</p>
Audio Input Signal Show information about audio input signals.	<p>Surround Mode : The currently set surround mode. Signal : The input signal type. fs : The input signal's sampling frequency. Format : The number of channels in the input signal (front, surround, LFE). Offset : The dialogue normalization correction value. Flag : This is displayed when inputting signals including a surround back channel. "MATRIX" is displayed with Dolby Digital EX and DTS-ES Matrix signals, "DISCRETE" with DTS-ES Discrete signals.</p> <div style="border: 1px solid black; padding: 5px;"> <p style="text-align: center;">Dialogue normalization function</p> <p>This function is automatically activated when playing Dolby Digital sources. It automatically corrects the standard signal level for individual program sources. The correction value can be checked using STATUS.</p>  <p>The figure is the corrected value. This cannot be changed.</p> </div>
HDMI Information Show information about HDMI input/output signals and monitor.	<p>HDMI Signal Information</p> <ul style="list-style-type: none"> • Resolution / Color Space / Pixel Depth <p>HDMI Monitor Information</p> <ul style="list-style-type: none"> • Interface / Support Resolution
Preset Channel Show information about preset channels.	<p>A / B / C / D / E / F / G A1 - A8 / B1 - B8 / C1 - C8 / D1 - D8 / E1 - E8 / F1 - F8 / G1 - G8</p> <p>TUNER</p>

Simple version

Basic version

Advanced version

Information

Remote control operation buttons



Move the cursor (Up/Down/Left/Right)



Confirm the setting

RETURN




Return to previous menu

Other settings

Remote control settings

- When you connect a remote control receiver unit (purchased separately) to the REMOTE CONTROL IN terminal of this unit, use the following procedure to disable the remote sensor function of this unit.
- The remote sensor function of remote control signals is enabled by default.

SURROUND MODE ENTER

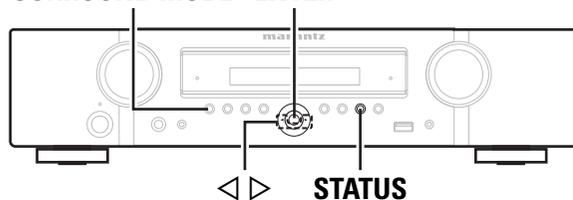

Disabling the sensor function of the remote control

1 To enable the remote signal sensor function, press and hold **SURROUND MODE** and **STATUS** for 3 seconds.

"IR:< ENABLE >" is displayed.

2 Press **◀▶** to select "DISABLE".

3 Press **ENTER**.

The sensor function of the remote control signal of this unit is disabled.

Enabling the remote sensor function

1 To disable the remote signal sensor function, press and hold **SURROUND MODE** and **STATUS** for 3 seconds.

"IR:< DISABLE >" is displayed.

2 Press **◀▶** to select "ENABLE".

3 Press **ENTER**.

The sensor function of the remote control signal of this unit is enabled.

NOTE


If a remote control receiver unit (purchased separately) is not connected, do not perform this setting. If you do, you will not be able to operate this unit using the remote control.

Switching the on-screen display output mode

Set whether the menu is operated by the monitor connected to the VIDEO OUT terminal or the monitor connected to the COMPONENT VIDEO MONITOR OUT terminal.

- The factory setting is "Comp".

ENTER PURE DIRECT

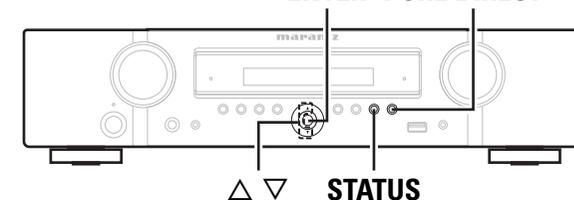

1 Press and hold **STATUS** and **PURE DIRECT** for 3 seconds.

Corresponding to the video signal format settings, "OSD Out: ◀Comp ▶" or "OSD Out: ◀Video ▶" is shown in the display.

2 Press **△▽** to change the settings according to the connection method.

Comp Set when the COMPONENT VIDEO MONITOR OUT connector is connected to a TV.

Video Set when the VIDEO OUT connector is connected to a TV.

3 Press **ENTER** to enter the setting.

NOTE

When operating the on-screen display menu using the monitor connected to the HDMI OUT terminal, either setting may be used without problem.

Operating the connected devices by remote control unit

Registering the supplied preset codes in the remote control unit enables you to operate devices made by other manufacturers.

Operating AV equipment

1 Press the input source select button (page 21).

The operation mode of the remote control unit is switched as shown in the table.

NOTE

Press the input source select buttons once to switch the operation mode of the remote control unit supplied with this unit. Press the input source select buttons twice consecutively to switch the operation mode of the remote control unit and input source of this unit.



Input source select buttons	Input source of this unit	Devices controllable with the remote control unit (Operation mode)
BD *	BD	Device registered on the BD button
DVD *	DVD	Device registered on the DVD button
SAT *	SAT	Device registered on the SAT button
GAME	GAME	Device registered on the GAME button
AUX1	AUX1	Device registered on the AUX1 button
USB	USB	Device registered on the USB button
TV *	TV	Device registered on the TV button
CD *	CD	Device registered on the CD button
TUNE	TUNER	Radio of this unit
M-XP	M-XP	Device registered on the M-XP button

* If a preset code is registered for this button, the remote control unit of this unit can control another devices.

NOTE

If the mode of the remote control unit is set to other than amp-operation mode, press **AMP** to switch the remote control unit to the amp-operation mode to perform the following operations:

- For menu operation by pressing **MENU**
- For setting the channel level of the unit by pressing **CH LVL**
- For performing direct playback
- For switching the MultEQ, Dynamic EQ, and Dynamic Volume settings.
- For using the Video Select function.
- For using the sleep timer function.
- For displaying the Source Select screen.
- For switching the M-DAX function.
- For directly selecting "AUTO" and "STEREO" of the listening modes.

2 Operate this unit or the device whose input source is switched.

- For details, refer to the operating instructions for each device. For operations of iPod and TUNER, see the following pages.
 - iPod (page 22)
 - TUNER (page 25)

Registering preset codes

When preset codes are registered in the included remote control unit, it can then be used to operate any devices you have, such as DVD players or TVs made by different manufacturers.

Buttons used for operating the devices

- ① **SOURCE ON/OFF**
For switching power of each device on or off.
- ② **△▽◀▶, ENTER**
For menu operation of each device.
- ③ **MENU, SETUP, TOP MENU**
For displaying the menu of each device.
- ④ **▶, ■, II, ◀▶, I◀▶, ▶▶▶**
- ⑤ Number button (**0 - 9, +10**)
- ⑥ **PRESET +, PRESET -**
- ⑦ **TV POWER, TV INPUT**
For operating a TV
This button is enabled in any mode.

For details on operation with the remote control unit, see pages 22 to 23, 25, and 57.

Default settings for preset codes

The devices shown below are registered for each input source button as default. Settings can be changed according to the devices to be used.

Input source select buttons	Category	Preset code
BD	Blu-ray Disc player	5000
DVD	DVD player	2000
TV	Television	1000
SAT	Satellite set top box	4000
CD	CD player	3000

NOTE

- No preset codes other than **BD, DVD, TV, SAT** and **CD** can be registered.
- In the factory settings, remote control codes for all Marantz products are registered.

□ Programming with the 4-digit code

- 1 Press and hold down the input source select buttons for the appliance to control, and press **SET** until the **SEND** indicator blinks twice.

The back light flashes.

- 2 Press the 4-digit code for the appliance using the numeric buttons (code table at the end of this book).

When the procedure is successful, the **SEND** indicator blinks twice.

NOTE

If the indicator did not blink twice, then repeat steps 1 and 2 and try entering the same code again.



□ Scanning the code table

- 1 Switch on the appliance to control.

- 2 Press and hold down the input source select buttons for the appliance to control, and press **SET** until the **SEND** indicator blinks twice.

The back light flashes.

- 3 Aim the remote control at the appliance and slowly alternate between pressing **INPUT** ▲ and the input source select buttons for the appliance.

- 4 Stop when the appliance turns off.

- 5 Press **ENTER** once to lock in the code.



□ Checking the code

- 1 Press and hold down the input source select buttons for appliance to control, and press **SET** until the **SEND** indicator blinks twice and back light flashes.

The back light flashes.

- 2 Press **SEARCH/INFO**. The **SEND** indicator blinks twice.

- 3 To view the code for first digit, press **1** once.

Count the number of times the **SEND** indicator blinks (e.g. 3 blinks = 3) and write down the number.

- 4 Then press **2** to check the second digit of the code. Now press **3** and **4** to check the third and fourth digits of the code.

NOTE

If a code digit is "0", the **SEND** indicator does not blink.



□ Resetting the code

- 1 Press and hold down the input source select buttons for appliance to control and press **SET** until the **SEND** indicator blinks twice.

The back light flashes.

- 2 Press the codes below to reset the code.

TV : 1000

DVD : 2000

CD : 3000

SAT : 4000

BD : 5000

The indicator will blink twice.

NOTE

After this procedure, the selected source reset to its initial code.



Operating components

The supplied remote control unit can control a component other than this unit.


1 Switch the input source
(page 21).

2 Operate the component.

• For details, refer to the component's operating instructions.



Blu-ray Disc player / HD-DVD player / DVD player / DVD recorder operation

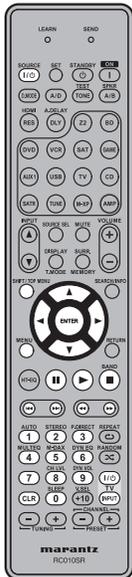

Operation buttons	Function
SOURCE ON/OFF	Power on/standby
MENU	(Popup) Menu
TOP MENU	Top menu
$\Delta \nabla \triangleleft \triangleright$	Cursor operation
ENTER	Enter
$\lll \ggg$	Manual search (fast-reverse/fast-forward)
\blacktriangleright	Playback
$\lll \blacktriangleright \ggg$	Auto search (cue)
II	Pause
\blacksquare	Stop
0-9	Select title, chapter or channel selection
CLR	Clear the inputting
TV POWER	TV power on/standby (Default : Marantz)
TV INPUT	Switch TV input (Default : Marantz)

CD player / CD recorder operation



Operation buttons	Function
SOURCE ON/OFF	Power on/off
$\lll \ggg$	Manual search (fast-reverse/fast-forward)
\blacktriangleright	Playback
$\lll \blacktriangleright \ggg$	Auto search (cue)
II	Pause
\blacksquare	Stop
CLR	Clear the inputting
TV POWER	TV power on/standby (Default : Marantz)
TV INPUT	Switch TV input (Default : Marantz)

Set top box for satellite (SAT) operation



Operation buttons	Function
SOURCE ON/OFF	Power on/standby
PRESET +, -	Switch channels (up/down)
$\Delta \nabla \triangleleft \triangleright$	Cursor operation
ENTER	Enter
0-9	Channel selection
CLR	Clear the inputting
TV POWER	TV power on/standby (Default : Marantz)
TV INPUT	Switch TV input (Default : Marantz)

TV operation



Operation buttons	Function
SOURCE ON/OFF	TV power on/standby (Default : Marantz)
PRESET +, -	Switch channels (up/down)
CLR	Clear the inputting
TV POWER	TV power on/standby (Default : Marantz)
TV INPUT	Switch TV input (Default : Marantz)

Operating learn mode

This remote control unit is capable of learning and storing codes used by other remote controls that you already own.

For codes which are not learned, the remote control unit will transmit either the Marantz preset codes from the initial settings, or remote codes from another manufacturer's AV equipment which is set by the customer.

The receiver sensor for the remote control unit signals is located at the top of the remote control unit.




This remote control unit is capable of learning around 160 codes.

NOTE

The learning procedure does not operate correctly if the batteries have become worn.

□ Learning procedure

- 1 Place the remote control unit so that its infrared signal transmitter is facing the infrared signal receiver on the Marantz remote control unit at a distance of about 5 cm.

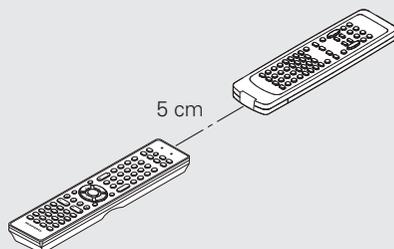

- 2 Press and hold down **SET** and **SOURCE SEL** until the **LEARN** indicator blinks.

- 3 Press input source select buttons to select the input source.



- 4 Select the button to be learned.

LEARN indicator lights up.

NOTE

- The learning function is unavailable for all **SOURCE** and **D.MODE** in any mode.
- The learning function is unavailable for all buttons in **TUNER** mode and **AMP** mode.

- 5 Press and hold the button of the original remote control unit to be learned until the **SEND** indicator blinks twice.

NOTE

- If the **SEND** indicator blinks once, repeat this step.
- If the **LEARN** indicator flashes when the **SEND** indicator is lit, then the button cannot be learned.
- When the memory of the remote control unit is full, the **LEARN** and **SEND** indicators blink once. If you want to learn the code, you need to erase a different learned button.

- 6 Repeat steps 4 and 5 to learn other buttons for the same input source.

- 7 Repeat steps 3 to 6 to learn other input sources.

- 8 When programming of the remote control unit is completed, press **SET**.

The **LEARN** display disappears, and the remote control unit exits learn mode.

NOTE

- When the **SEND** indicator blinks once again, the transmitting code is unavailable for remote control unit, or the transmitting signal has been interrupted by noise.
- If no buttons are pressed for approximately 1 minutes while in the **LEARN** mode, the remote control unit automatically exits from the **LEARN** mode.

□ Erasing programmed codes

Codes can be erased in three ways: by buttons, sources, and by all memory contents.

Erasing the code by buttons


- 1 Press and hold down **SET** and **SOURCE SEL** until the **LEARN** indicator blinks.

- 2 Press input source select buttons to select the input source you want to delete.

- 3 Press and hold down **D.MODE** and press the learned button to be erased twice.

SEND indicator blinks twice and the mode returns to **LEARN** mode.

- 4 To return the normal mode, press **SET**.

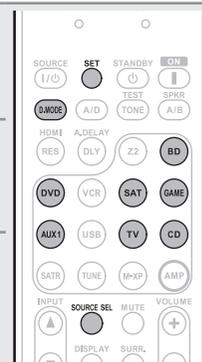

Erasing the code by SOURCE

- 1 Press and hold down **SET** and **SOURCE SEL** until the **LEARN** indicator blinks.


- 2 Press and hold down **D.MODE** and press the learned input source select buttons to be erased twice.

LEARN indicator lights.

- 3 Press **ENTER** to continue erasing.

- The **SEND** indicator blinks twice and the mode returns to **LEARN** mode.
- To cancel the erasing operation, do not press **ENTER**, and simply press any other button.

- 4 To return the normal mode, press **SET**.

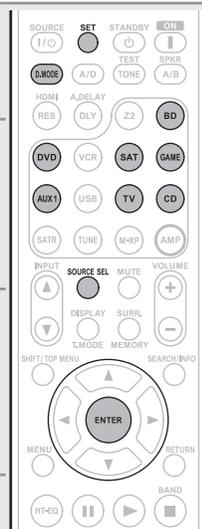

Erasing the all sources

1 Press and hold down **SET** and **SOURCE SEL** until the **LEARN** indicator blinks.

2 Press and hold down **D.MODE** and press **ON** and **STANDBY**. **LEARN** indicator lights.

3 Press **ENTER** to continue erasing.

- The **SEND** indicator blinks twice and the mode returns to **LEARN** mode.
- To cancel the erasing operation, do not press **ENTER** and simply press any other button.

4 To return the normal mode, press **SET**.




Setting the back light

Press the Light button on the side of the remote control, and the buttons on the remote control light for 2 seconds. If the Light button is pressed while the buttons are lit, the buttons remain lit for another 2 seconds.


- Backlight is set on in the factory settings.

 Disabling the backlight

Press and hold both **SET** and **STANDBY** until the **SEND** indicator flashes twice.

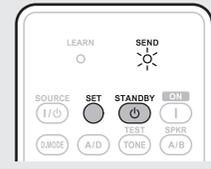
 Turning the backlight on

Press and hold both **SET** and **ON** until the **SEND** indicator flashes twice.

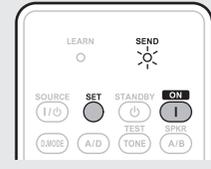

NOTE

Erasing codes will return to the factory preset code, or there will leave empty if the button has no factory preset code.

Information


Here, we list various information related to this unit.
Please refer to this information as needed.

- Part names and functions  page 61
- Other information  page 65
- Troubleshooting  page 72
- Specifications  page 74
- Index  page 75

Part names and functions


Front panel

For buttons not explained here, see the page indicated in parentheses ().

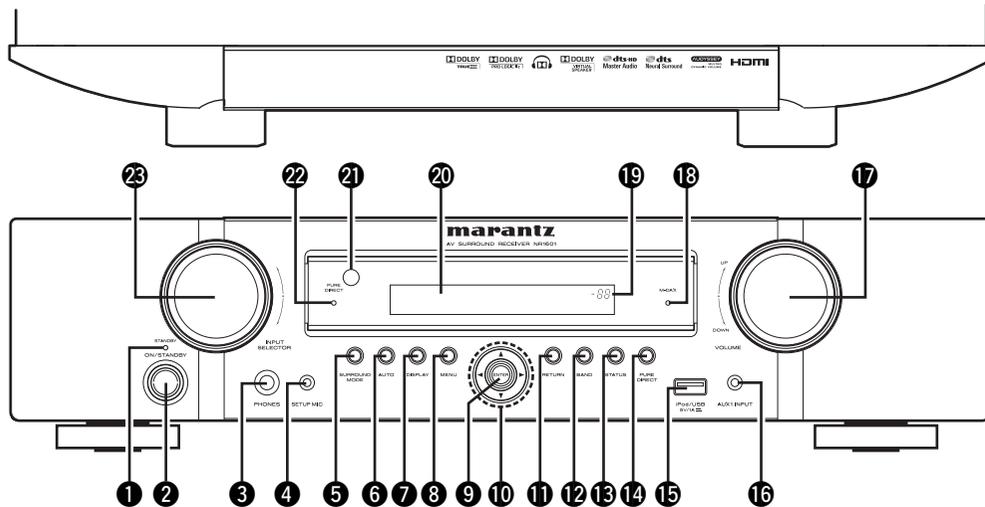

- | | |
|---|---|
| 1 Power indicator (11) | 12 BAND button (24) |
| 2 Power operation button
(ON/STANDBY) (6, 11)
Turns power to this unit on and off (standby). | 13 STATUS button (22, 53, 54) |
| 3 Headphones jack (PHONES)
When the headphones are plugged into this jack, audio will no longer be output from the connected speakers or from the PRE OUT connectors. | 14 PURE DIRECT button (28, 54) |
| NOTE
To prevent hearing loss, do not raise the volume level excessively when using headphones. | 15 iPod/USB port (18) |
| 4 SETUP MIC jack (8, 33) | 16 AUX1 INPUT connector (17) |
| 5 SURROUND MODE button (26) | 17 VOLUME control knob (21) |
| 6 AUTO button (26) | 18 M-DAX indicator (48) |
| 7 DISPLAY button (53) | 19 Master volume indicator |
| 8 MENU button (40) | 20 Display (60) |
| 9 ENTER button (38 – 40) | 21 Remote control sensor (64) |
| 10 Cursor buttons (Δ ▽ ◀ ▶) (38 – 40) | 22 PURE DIRECT indicator (28) |
| 11 RETURN button (38 – 40) | 23 INPUT SELECTOR knob (21) |

Display

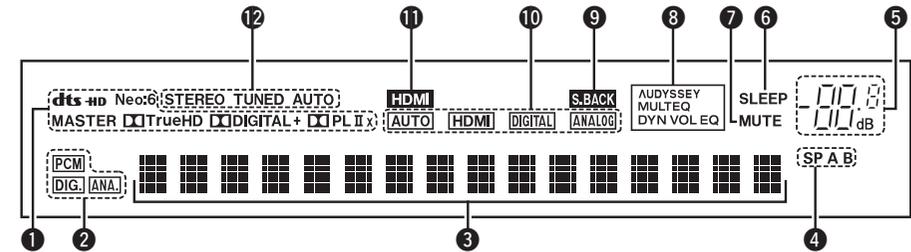


- 1 Decoder indicators**
These light when the respective decoders are operating.
- 2 Input signal indicators**
- 3 Information display**
The input source name, surround mode, setting values and other information are displayed here.
- 4 Front speaker indicator**
This lights when audio signals are being output from the speakers.
- 5 Master volume indicator**
When performing setting operations, displays the menu number.
- 6 Sleep timer indicator**
This lights when the sleep mode is selected (☞ page 36).
- 7 MUTE indicator**
This lights when the mute mode is selected (☞ page 21).
- 8 Audyssey® indicators**
Lighting is as follows, depending on the setting of "Dynamic EQ" (☞ page 47) and "Dynamic Volume" (☞ page 47).

AUDYSSEY MULTEQ DYN VOL	When "Dynamic EQ" and "Dynamic Volume" are "ON".
AUDYSSEY MULTEQ DYN EQ	When "Dynamic EQ" is "ON" and "Dynamic Volume" is "OFF".
AUDYSSEY MULTEQ	When "Dynamic EQ" and "Dynamic Volume" are "OFF".
- 9 Surround back indicator**
This lights when audio signals are being output from the surround back speakers (☞ page 50).
- 10 Input mode indicators**
Set the audio input modes for the different input sources (☞ page 43).
- 11 HDMI indicator**
This lights when playing using HDMI connections.
- 12 Tuner reception mode indicators**
These light according to the reception conditions when the input source is set to "TUNER".
STEREO: In the FM mode, this light when receiving analog stereo broadcasts.
TUNED: Lights when the broadcast is properly tuned in.
AUTO: This light when in the auto tuning mode.

Rear panel

See the page indicated in parentheses ().

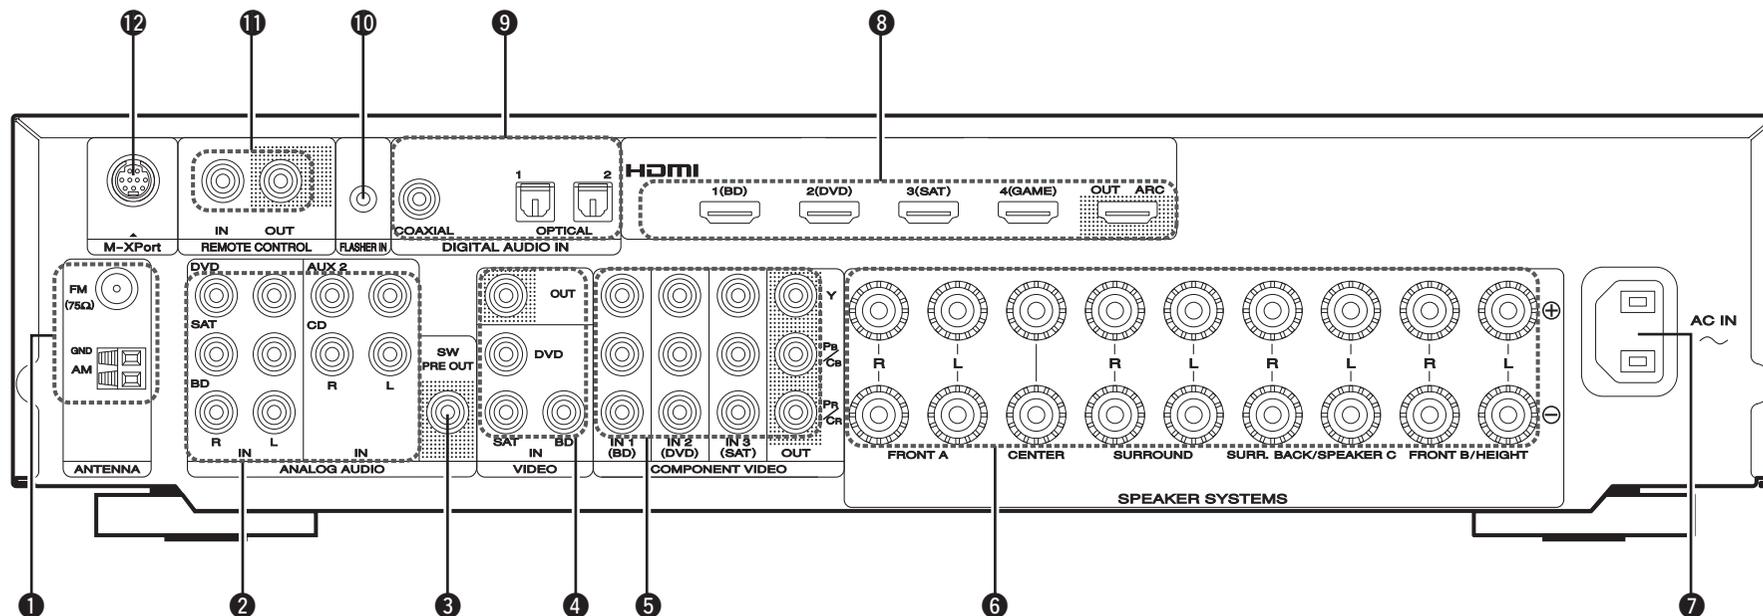


- ① FM/AM antenna terminals (20)
- ② Analog audio connectors (16, 17, 19)
- ③ SW PRE OUT connector (5, 31, 32)
- ④ VIDEO connectors (16, 17)
- ⑤ COMPONENT VIDEO connectors (16, 17)
- ⑥ Speaker terminals (5, 31, 32)
- ⑦ AC inlet (AC IN) (5)
- ⑧ HDMI connectors (15)
- ⑨ Digital audio connectors (16, 17, 19)
- ⑩ FLASHER IN jack
Used when using a control BOX or other such control devices to control this unit.
- ⑪ REMOTE CONTROL connectors (34)
- ⑫ M-XPort connector (20)

NOTE

Do not touch the inner pins of the connectors on the rear panel. Electrostatic discharge may cause permanent damage to the unit.

Remote control unit

For buttons not explained here, see the page indicated in parentheses ().

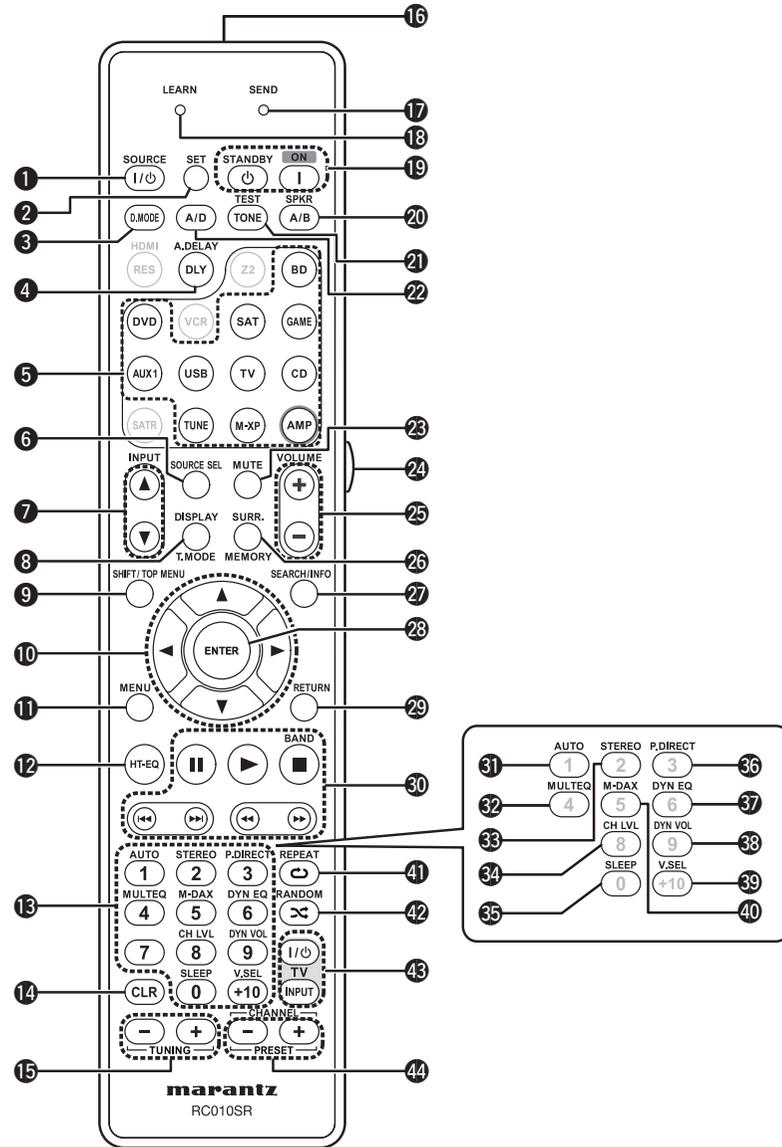

- 1 SOURCE power button (55)
- 2 SET button (56, 58, 59)
- 3 Decode mode button (D.MODE) ... (44, 58, 59)
- 4 Audio delay button (DLY) (48)
- 5 Input source select buttons (21, 55, 56, 58)
- 6 Source select button (SOURCE SEL) (21, 58, 59)
- 7 INPUT buttons (21, 56)
- 8 DISPLAY/Tuner mode (T.MODE) button (53)
- 9 SHIFT/TOP MENU button (24, 39)
- 10 Cursor buttons (Δ ▽ ◀ ▶) (38 – 40)
- 11 MENU button (40)
- 12 HT-EQ button (45)
- 13 Number buttons (24, 57)
- 14 Clear button (CLR) (57)
- 15 TUNING buttons (+, -) (24, 25)
- 16 Remote control signal transmitter (64)
- 17 SEND indicator (59)
- 18 LEARN indicator (58)
- 19 Power buttons (ON, STANDBY) (6, 11)
- 20 Speaker A/B button (SPKR A/B) (51)
- 21 TEST TONE button (51)
- 22 Input mode button (A/D) (43)
- 23 Muting button (MUTE) (11, 21)
- 24 Light button (59)
- 25 Master volume control buttons (VOLUME +, -) (6, 11)
- 26 Surround mode (SURR.)/MEMORY button (24 – 28)
- 27 SEARCH/Information (INFO) button (24, 25, 40, 56)
- 28 ENTER button (38 – 40)
- 29 RETURN button (38 – 40)
- 30 System buttons (22, 23, 57)
 - Pause button (⏸)
 - Play button (▶)
 - Stop button (■)
 - Skip button (⏮, ⏭)
 - Search button (⏪, ⏩)
- FM/AM band switching button (BAND) (24, 25)
- 31 AUTO button (26)
- 32 MULTEQ® button (46, 52)
- 33 STEREO button (28)
- 34 Channel level button (CH LVL) (36)
- 35 SLEEP button (36)
- 36 Pure direct button (P.DIRECT) (28)
- 37 Dynamic EQ® button (DYN EQ) (47)
- 38 Dynamic Volume® button (DYN VOL) (47)
- 39 Video select button (V.SEL) (43)
- 40 M-DAX button (48)
- 41 REPEAT button (22, 23)
- 42 RANDOM button (22, 23)
- 43 TV operation buttons (TV POWER / INPUT) (57)
- 44 CHANNEL/PRESET buttons (+, -) (24, 25, 57)

NOTE
The **HDMI/RES**, **Z2**, **VCR**, and **SATR** buttons cannot be used.

Simple version



Basic version

Advanced version

Information

Inserting the batteries

- ① Remove the rear lid in the direction of the arrow and remove it.
- ② Load the two batteries properly as indicated by the marks in the battery compartment.

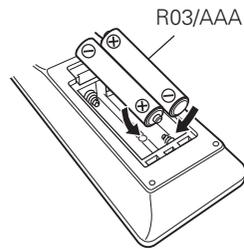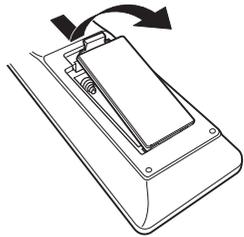


- ③ Put the rear cover back on.

NOTE

- Insert the specified batteries in the remote control unit.
- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit. (The supplied batteries are only for verifying operation.)
- When inserting the batteries, be sure to do so in the proper direction, following the ⊕ and ⊖ marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
 - Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- Used batteries should be disposed of in accordance with the local regulations regarding battery disposal.

Operating range of the remote control unit

Point the remote control unit at the remote sensor when operating it.

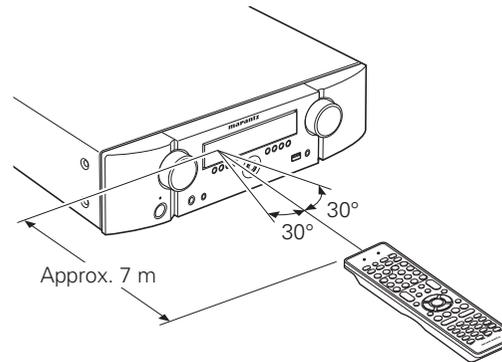

NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

Other information

- ❑ **Trademark information** (👉 page 65)
- ❑ **Surround** (👉 page 66)
- ❑ **Explanation of terms** (👉 page 70)

Trademark information

This product uses the following technologies:

   	<p>Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.</p>		<p>HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.</p>
	<p>Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535; 7,212,872; 7,333,929; 7,392,195; 7,272,567 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, DTS-HD Master Audio, and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.</p>		<p>Manufactured under license from Audyssey Laboratories™. U.S. and foreign patents pending. Audyssey MultEQ® is a registered trademark of Audyssey Laboratories. Audyssey Dynamic EQ® is a registered trademark of Audyssey Laboratories. Audyssey Dynamic Volume® is a trademark of Audyssey Laboratories.</p>
	<p>Manufactured under license from DTS Licensing Limited. DTS and the Symbol are registered trademarks, & DTS Neural Surround and the DTS logos are trademark of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.</p>		<p>"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.</p> <ul style="list-style-type: none"> • Individual users are permitted to use iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch for private copy and playback of non-copyrighted contents and contents whose copy and playback is permitted by law. Copyright infringement is prohibited by law.

Surround

This unit is equipped with a digital signal processing circuit that lets you play program sources in the surround mode to achieve the same sense of presence as in a movie theater.

Surround modes and surround parameters

This table shows the speakers that can be used in each surround mode and the surround parameters adjustable in each surround mode.

Symbols in the table

- This indicates the audio output channels or surround parameters that can be set.
- ◎ This indicates the audio output channels. The output channels depend on the settings of "Speaker Config." (page 49).

Surround mode (page 26)	Channel output						Surround Parameter (page 45)			
	Front L/R	Center	Surround L/R	Surround Back L/R	Front Height L/R	Subwoofer	HT-EQ. *3 (page 45)	DRC *4 (page 45)	D. Comp *5 (page 45)	LFE *6 (page 45)
DIRECT (2channel)	○					◎*2		○	○	
DIRECT (Multi-channel)	○	◎	◎	◎*1	◎*1	◎		○	○	○
STEREO	○					◎		○	○	○
MULTI CH IN	○	◎	◎	◎	◎	◎	○			○
DOLBY PRO LOGIC IIz	○	◎	◎		◎	◎	○	○	○	
DOLBY PRO LOGIC IIx	○	◎	◎	◎		◎	○	○	○	
DOLBY PRO LOGIC II	○	◎	◎			◎	○	○	○	
DTS NEO:6	○	◎	◎	◎		◎	○	○	○	
DOLBY DIGITAL	○	◎	◎	◎	◎	◎	○		○	○
DOLBY DIGITAL Plus	○	◎	◎	◎	◎	◎	○		○	○
DOLBY TrueHD	○	◎	◎	◎	◎	◎	○	○		○
DTS SURROUND	○	◎	◎	◎	◎	◎	○		○	○
DTS 96/24	○	◎	◎	◎	◎	◎	○		○	○
DTS-HD	○	◎	◎	◎	◎	◎	○		○	○
DTS Express	○	◎	◎	◎	◎	◎	○		○	○
MULTI CH STEREO	○	◎	◎	◎	◎	◎			○	○
DOLBY VIRTUAL SPEAKR	○					◎*2			○	○
Neural	○	◎	◎		◎	◎	○	○	○	
Dolby Headphone	○							○	○	○

*1 A signal for each channel contained in an input signal is output as audio.

*2 Only when "Subwoofer Mode" is set to "LFE+Main" (page 50), sound is output from the subwoofer.

*3 For HD Audio whose sampling frequency of an input signal is more than 96kHz, this sound parameter cannot be set.

*4 This item can be selected when a Dolby TrueHD signal is played.

*5 This item can be selected when a Dolby Digital or DTS signal is played.

*6 This item can be selected when a Dolby Digital or DTS signal or DVD-Audio is played.

Surround mode (page 26)	Surround Parameter (page 45)					Tone * 7 (page 46)	Audyssey Settings * 11 (page 46)			M-DAX * 10 (page 48)
	Height Gain (page 46)	Panorama (page 45)	Dimension (page 45)	Center Width (page 45)	Center Image (page 45)		MultEQ® (page 46)	Dynamic EQ® * 8 (page 47)	Dynamic Volume® * 9 (page 47)	
DIRECT (2 channel)										
DIRECT (Multi-channel)										
STEREO						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
MULTI CH IN						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
DOLBY PRO LOGIC IIz	<input type="radio"/>					<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
DOLBY PRO LOGIC IIx		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
DOLBY PRO LOGIC II		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
DTS NEO:6					<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
DOLBY DIGITAL						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
DOLBY DIGITAL Plus						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
DOLBY TrueHD						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
DTS SURROUND						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
DTS 96/24						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
DTS-HD						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
DTS Express						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
MULTI CH STEREO						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
DOLBY VIRTUAL SPEAKER						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Neural						<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Dolby Headphone						<input type="radio"/>				<input type="radio"/>

- * 7 This item cannot be set when "Dynamic EQ" (page 47) is set to "ON".
- * 8 This item cannot be set when "MultEQ" (page 46) is set to "OFF" or "Manual".
- * 9 This item cannot be set when "Dynamic EQ" (page 47) is set to "OFF".
- * 10 This item can be set when the input signal is analog, PCM 48 kHz or 44.1 kHz.
- * 11 For HD Audio whose sampling frequency of an input signal is more than 96 kHz, this sound parameter cannot be set.

Types of input signals, and corresponding surround modes

This table shows the input signal that can be played in each surround mode. Check the audio signal of the input source then select the surround mode.

Symbols in the table

○ This indicates the selectable surround mode.

Surround mode (☞ page 26)	NOTE	Input signal types and formats														
		ANALOG	PCM		DTS-HD		DTS					DOLBY		DOLBY DIGITAL		
			LINEAR PCM (multi ch)	LINEAR PCM (2ch)	DTS-HD Master Audio	DTS-HD High Resolution Audio	DTS EXPRESS	DTS ES DSCRT (With Flag)	DTS ES MTRX (With Flag)	DTS (5.1ch)	DTS 96/24	DOLBY TrueHD	DOLBY DIGITAL Plus	DOLBY DIGITAL EX (With Flag)	DOLBY DIGITAL EX (With no Flag)	DOLBY DIGITAL (5.1/5/4ch)
DTS SURROUND																
DTS-HD MSTR					○											
DTS-HD HI RES						○										
DTS ES DSCRT6.1	* 1							○								
DTS ES MTRX6.1	* 1							○	○							
DTS SURROUND								○	○	○						
DTS 96/24											○					
DTS (-HD) + PLIIx MOVIE	* 2				○	○	○	○	○	○	○					
DTS (-HD) + PLIIx MUSIC	* 1				○	○	○	○	○	○	○					
DTS (-HD) + PLIIz	* 3				○	○	○	○	○	○	○					
DTS EXPRESS								○								
DTS (-HD) + NEO:6	* 1				○	○			○	○	○					
DTS NEO:6 CINEMA		○		○												○
DTS NEO:6 MUSIC		○		○												○
DOLBY SURROUND																
DOLBY TrueHD												○				
DOLBY DIGITAL+													○			
DOLBY DIGITAL EX	* 1													○	○	○
DOLBY (D+) (HD) +EX	* 1											○	○			
DOLBY DIGITAL														○	○	○
DOLBY (D) (D+) (HD) +PLIIx MOVIE	* 2											○	○	○	○	○
DOLBY (D) (D+) (HD) +PLIIx MUSIC	* 1											○	○	○	○	○
DOLBY (D) (D+) (HD) +PLIIz	* 4											○	○	○	○	○
DOLBY PRO LOGIC IIx MOVIE	* 1	○		○												○
DOLBY PRO LOGIC IIx MUSIC	* 1	○		○												○
DOLBY PRO LOGIC IIx GAME	* 1	○		○												○
DOLBY PRO LOGIC IIz	* 3	○		○												○
DOLBY PRO LOGIC II MOVIE		○		○												○
DOLBY PRO LOGIC II MUSIC		○		○												○
DOLBY PRO LOGIC II GAME		○		○												○

* 1 If "Speaker Config." - "S.Back" (☞ page 50) is set to "None", this surround mode cannot be selected.
 * 2 If "Speaker Config." - "S.Back" (☞ page 50) is set to "1sp" or "None", this surround mode cannot be selected.
 * 3 If "Speaker Config." - "Front Height" (☞ page 50) is set to "None", this surround mode cannot be selected.

Surround mode (🔍 page 26)	NOTE	Input signal types and formats															
		ANALOG	PCM		DTS-HD		DTS					DOLBY		DOLBY DIGITAL			
			LINEAR PCM (multi ch)	LINEAR PCM (2ch)	DTS-HD Master Audio	DTS-HD High Resolution Audio	DTS EXPRESS	DTS ES DSCRT (With Flag)	DTS ES MTRX (With Flag)	DTS (5.1ch)	DTS 96/24	DOLBY TrueHD	DOLBY DIGITAL Plus	DOLBY DIGITAL EX (With Flag)	DOLBY DIGITAL EX (With no Flag)	DOLBY DIGITAL (5.1/5/4ch)	DOLBY DIGITAL (2ch)
MULTI CH IN																	
MULTI CH IN			○														
MULTI CH IN + PLIIx MOVIE	* 2		○														
MULTI CH IN + PLIIx MUSIC	* 1		○														
MULTI CH IN + PLIIz	* 3		○														
MULTI CH IN + Dolby EX	* 1		○														
MULTI CH IN 7.1			○														
DIRECT		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
MULTI CH STEREO		○	○	○				○	○	○	○			○	○	○	○
DOLBY VIRTUAL SPEAKER		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
NEURAL		○		○													
DOLBY HEADPHONE		○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

- * 1 If "Speaker Config." - "S.Back" (🔍 page 50) is set to "None", this surround mode cannot be selected.
- * 2 If "Speaker Config." - "S.Back" (🔍 page 50) is set to "1sp" or "None", this surround mode cannot be selected.
- * 3 If "Speaker Config." - "Front Height" (🔍 page 50) is set to "None", this surround mode cannot be selected.

Explanation of terms

A

A2DP

A2DP is one profile of Bluetooth defined for in-car devices or AV devices that use wireless communication instead of a cable.

Adobe RGB color / Adobe YCC601 color

Like x.v.Color, each of these color spaces defines a palette of available colors that is larger than the traditional RGB color model.

Audyssey Dynamic EQ®

Audyssey Dynamic EQ solves the problem of deteriorating sound quality as volume is decreased by taking into account human perception and room acoustics. Audyssey Dynamic EQ works in tandem with Audyssey MultEQ® to provide well-balanced sound for every listener at any volume level.

Audyssey Dynamic Volume®

Audyssey Dynamic Volume solves the problem of large variations in volume level between television programs, commercials, and between the soft and loud passages of movies. Audyssey Dynamic EQ is integrated into Dynamic Volume so that as the playback volume is adjusted automatically, the perceived bass response, tonal balance, surround impression, and dialog clarity remain the same.

Audyssey MultEQ®

Audyssey MultEQ is a room equalization solution that calibrates any audio system so that it can achieve optimum performance for every listener in a large listening area. Based on several room measurements, MultEQ calculates an equalization solution that corrects for both time and frequency response problems in the listening area and also performs a fully automated surround system setup.

Auto Lip Sync

If you connect the receiver to a TV that supports the Auto Lip Sync function, it can automatically correct delay between the audio and video.

B

Bluetooth

Bluetooth is a short-distance wireless communication technology used for connecting handheld devices several meters apart. This enables notebook computers, PDAs, mobile phones, etc. to connect without a cable for transmitting audio and data.

D

Deep Color

This technology allows expression of more number of colors than the conventional 8 bits and can reproduce colors close to natural ones without color streak.

Dolby Digital

Dolby Digital is a multi-channel digital signal format developed by Dolby Laboratories.

A total of 5.1 channels are played: 3 front channels ("FL", "FR" and "C"), 2 surround channels ("SL" and "SR") and the "LFE" channel for low frequencies.

Because of this, there is no crosstalk between channels and a realistic sound field with a "three-dimensional" feeling (sense of distance, movement and positioning) is achieved.

A realistic, powerful sense of presence is achieved when playing movie sources in AV rooms as well.

Dolby Digital EX

Dolby Digital EX is a 6.1-channel surround format proposed by Dolby Laboratories that allows users to enjoy in their homes the "DOLBY DIGITAL SURROUND EX" audio format jointly developed by Dolby Laboratories and Lucas Films.

The 6.1 channels of sound, including surround back channels, provide improved sound positioning and expression of space.

Dolby Digital Plus

Dolby Digital Plus is an improved Dolby Digital signal format that is compatible with up to 7.1 channels of discrete digital sound and also improves sound quality thanks to extra data bit rate performance. It is upwardly compatible with conventional Dolby Digital, so it offers greater flexibility in response to the source signal and the conditions of the playback equipment.

Dolby Headphone

The Dolby Headphone technology provides a surround sound listening experience over headphones.

When listening to multichannel content such as DVD movies over headphones, the listening experience is fundamentally different than listening to speakers. Since the headphone speaker drivers are covering the pinna of the ear, the listening experience differs greatly from traditional speaker playback. Dolby utilizes patented headphone perspective curves to solve this problem and provides a non-fatiguing, immersive, home theater listening experience. Dolby Headphone also delivers exceptional 3D audio from stereo material.

Dolby TrueHD

Dolby TrueHD is a high definition audio technology developed by Dolby Laboratories, using lossless coding technology to faithfully reproduce the sound of the studio master.

This format provides the facility to support up to 8 audio channels with a sampling frequency of 96kHz/24bit resolution and up to 6 audio channels with a sampling frequency of 192kHz/24bit resolution. Dolby TrueHD is adopted for applications that put very high importance on sound quality.

Dolby Pro Logic II

Dolby Pro Logic II is a matrix decoding technology developed by Dolby Laboratories.

Regular music such as that on CDs is encoded into 5 channels to achieve an excellent surround effect. The surround channel signals are converted into stereo and full band signals (with a frequency response of 20 Hz to 20 kHz or greater) to create a "three-dimensional" sound image offering a rich sense of presence for all stereo sources.

Dolby Pro Logic IIx

Dolby Pro Logic IIx is a further improved version of the Dolby Pro Logic II matrix decoding technology. Audio signals recorded in 2 channels are decoded to achieve a natural sound with up to 7.1 channels. There are three modes: "Music" suited for playing music, "Movie" suited for playing movies, and "Game" which is optimized for playing games.

Dolby Pro Logic IIz

Dolby Pro Logic IIz introduces a new dimension to Home Entertainment through the addition of a pair of front height channels. Compatible with stereo, 5.1-channel and 7.1-channel content, Dolby Pro Logic IIz provides enhanced spaciousness, depth and dimension to movies, concert video and video game playback while maintaining the full integrity of the source mix.

Dolby Pro Logic IIz identifies and decodes spatial cues that occur naturally in all content, directing this information to the front height channels, complementing the performance of left and right surround sound speakers. Content that is encoded with Dolby Pro Logic IIz height channel information can be even more revealing, with perceptually discrete height channel information bringing an exciting new dimension to home entertainment.

Dolby Pro Logic IIz, with front height channels is also an ideal alternative for households that cannot support the placement of back surround speakers of a typical 7.1-channel system but may have bookshelf space available to support the addition of height speakers.

Dolby Virtual Speaker

Dolby Virtual Speaker is a technology certified by Dolby Laboratories that creates a virtualized surround sound experience from two speakers using a multichannel Dolby Digital source. Additionally, Dolby Virtual Speaker can simulate the surround sound effect produced by Dolby Pro Logic or Dolby Pro Logic II.

Dolby Virtual Speaker retains all the original Multichannel audio information and provides the listener with the sensation of being surrounded by additional speakers.

Downmix

This function converts the number of channels of surround audio to less number of channels and plays back.

DTS

This is an abbreviation of Digital Theater System, which is a digital audio system developed by DTS. When playing back audio by connecting this system with a device such as DTS amplifier, accurate sound field position and realistic sound effect as if you are in a movie theater can be obtained.

DTS 96/24

DTS 96/24 is a digital audio format enabling high sound quality playback in 5.1 channels with a sampling frequency of 96 kHz and 24 bit quantization on DVD-Video.

DTS Digital Surround

DTS Digital Surround is the standard digital surround format of DTS, Inc., compatible with a sampling frequency of 44.1 or 48 kHz and up to 5.1 channels of digital discrete surround sound.

DTS-ES™ Discrete 6.1

DTS-ES™ Discrete 6.1 is a 6.1-channel discrete digital audio format adding a surround back (SB) channel to the DTS digital surround sound. Decoding of conventional 5.1-channel audio signals is also possible according to the decoder.

DTS-ES™ Matrix 6.1

DTS-ES™ Matrix 6.1 is a 6.1-channel discrete digital audio format inserting a surround back (SB) channel to the DTS digital surround sound through matrix encoding. Decoding of conventional 5.1-channel audio signals is also possible according to the decoder.

DTS Express

DTS Express is an audio format supporting low bit rates (max. 5.1 channels, 24 to 256 kbps).

DTS-HD

This audio technology provides higher sound quality and enhanced functionality than the conventional DTS and is adopted as an optional audio for Blu-ray Disc. This technology supports multi-channel, high data transfer speed, high sampling frequency, and lossless audio playback. Maximum 7.1-channels are supported in Blu-ray Disc.

DTS-HD High Resolution Audio

DTS-HD High Resolution Audio is an improved version of the conventional DTS, DTS-ES and DTS 96/24 signals formats, compatible with sampling frequencies of 96 or 48 kHz and up to 7.1 channels of discrete digital sound. High data bit rate performance provides high quality sound. This format is fully compatible with conventional products, including conventional DTS digital surround 5.1-channel data.

DTS-HD Master Audio

DTS-HD Master Audio is a lossless audio format created by Digital Theater System (DTS). This format provides the facility to support up to 8 audio channels with a sampling frequency of 96kHz/24bit resolution and up to 6 audio channels with a sampling frequency of 192kHz/24bit resolution.

DTS Neural Surround

DTS Neural Surround has been chosen as the surround sound format for XM Satellite Radio's "XM HD Surround", TV sports broadcasting, 7.1 games, Music Direct Internet streaming as well as leading FM/HD radio stations. It delivers the rich envelopment and discrete image detail of surround sound by unmasking the audio details, typically lost by other playback modes. Audiences will experience the deep ambience and subtle details of movies, music and games.

DTS NEO:6™ Surround

DTS NEO:6™ is a matrix decoding technology for achieving 6.1-channel surround playback with 2-channel sources. It includes "DTS NEO:6 Cinema" suited for playing movies and "DTS NEO:6 Music" suited for playing music.

Dynamic range

The difference between the maximum undistorted sound level and the minimum discernible level above the noise emitted by the device.

H**HDCP**

When transmitting digital signals between devices, this copyright protection technology encrypts the signals to prevent content from being copied without authorization.

HDMI

This is an abbreviation of High-Definition Multimedia Interface, which is an AV digital interface that can be connected to a TV or amplifier. Video signal and audio signal can be connected using 1 cable.

L**LFE**

This is an abbreviation of Low Frequency Effect, which is an output channel that emphasizes low frequency effect sound. Surround audio is intensified by outputting 20 Hz to 120 Hz deep bass.

M**MP3 (MPEG Audio layer 3)**

This is an internationally standardized audio data compression scheme, using the "MPEG-1" video compression standard. It compresses the data volume to about one eleventh its original size while maintaining sound quality equivalent to a music CD.

MPEG (Moving Picture Experts Group), MPEG-2, MPEG-4

These are the names for digital compression format standards used for the encoding of video and audio. Video standards include "MPEG-1 Video", "MPEG-2 Video", "MPEG-4 Visual", "MPEG-4 AVC". Audio standards include "MPEG-1 Audio", "MPEG-2 Audio", "MPEG-4 AAC".

P**Pairing**

Pairing is an operation required for settings to connect two Bluetooth devices. Pairing enables Bluetooth devices to access each other.

Protection Circuit

This is a function to prevent damage to components within the power supply when an abnormality such as an overload, excess voltage occurs or temperature for any reason.

In this unit, the power indicator blinks and the unit enters standby mode when an abnormality occurs.

S**Sampling frequency**

Sampling involves taking a reading of a sound wave (analog signal) at regular intervals and expressing the height of the wave at each reading in digitized format (producing a digital signal).

The number of readings taken in one second is called the "sampling frequency". The larger the value, the closer the reproduced sound is to the original.

Speaker impedance

This is an AC resistance value, indicated in Ω (ohms). Greater power can be obtained with this value smaller.

sYCC601 color

Like x.v.Color, each of these color spaces defines a palette of available colors that is larger than the traditional RGB color model.

W**WAV (Wave)**

WAV is a standard audio format of Windows. The file size tends to increase, but sound near the original sound can be maintained.

WMA (Windows Media Audio)

This is audio compression technology developed by Microsoft Corporation.

WMA data can be encoded using Windows Media® Player Ver.7, 7.1, Windows Media® Player for Windows® XP and Windows Media® Player 9 Series.

To encode WMA files, only use applications authorized by Microsoft Corporation. If you use an unauthorized application, the file may not work properly.

X**x.v.Color**

This function lets HDTVs display colors more accurately. It enables display with natural, vivid colors. "x.v.Color" is a Sony registered trademark.

Troubleshooting

If a problem should arise, first check the following:

1. Are the connections correct?

2. Is the set being operated as described in the user guide?

3. Are the other components operating properly?

If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.

In this case, disconnect the power immediately and contact your store of purchase.

[General]

Symptom	Cause/Solution	Page
Power does not turn on.	<ul style="list-style-type: none"> Check whether the power plug is correctly inserted into the power outlet. The protection circuit is active. Disconnect the power plug from the electric outlet, wait 5 to 10 seconds and then insert it back into the outlet. 	5 4, 71
Display is off.	<ul style="list-style-type: none"> Set "Display" on the menu to something other than "OFF". 	53
The power indicator is blinking red in intervals of approximately 2 seconds.	<ul style="list-style-type: none"> The temperature inside the unit has risen. Please turn off power once, and re-apply the power after the temperature has fallen sufficiently. Please re-install this unit in a place having good ventilation. 	– –
The power indicator is blinking red in intervals of approximately 0.5 seconds.	<ul style="list-style-type: none"> Please use speakers which have the specified impedance. The speaker cable has shorted (is touching). Firmly twist the core wire in the speaker cable, and then re-connect it to the speaker terminal. 	4 4
After turning on the power, the power indicator is blinking red in intervals of approximately 0.5 seconds.	<ul style="list-style-type: none"> This unit amplifier circuit has failed. Turn off the power and please contact the Marantz service adviser. 	–
Set does not operate properly.	<ul style="list-style-type: none"> Reset the microprocessor. 	74

[Video]

Symptom	Cause/Solution	Page
No picture appears.	<ul style="list-style-type: none"> Check the TV connection. Set the TV input correctly. 	5 6
The on-screen display is not shown. Or noise occurs.	<ul style="list-style-type: none"> Set the on-screen display output mode to match your TV and connection method. 	54

[Audio]

Symptom	Cause/Solution	Page
Audio is not output.	<ul style="list-style-type: none"> Check the connections for all devices. Check the speaker connections. Check whether the audio device power is turned on. Adjust the master volume. Cancel the mute mode. Select a suitable input source. Select a suitable input mode. Disconnect the headphones. No sound is output from the speakers or the PRE OUT connectors when headphones are connected. 	5, 14 – 20 5, 31, 32 – 21 21 21 43 60
No sound is produced from surround speaker.	<ul style="list-style-type: none"> Check if the surround speakers are connected to the SURROUND terminals. 	–
No sound is produced from surround back speaker.	<ul style="list-style-type: none"> Set "Amp Assign" on the menu to "Normal". Set "Speaker Config." – "S.Back" on the menu to something other than "None". Set the surround mode to something other than "STEREO". 	49 50 26
No sound is produced from front height speaker.	<ul style="list-style-type: none"> Set "Amp Assign" on the menu to "Normal". Set "Speaker Config." – "Surround" on the menu to something other than "None". 	49 50
No sound is produced from subwoofer.	<ul style="list-style-type: none"> Check the subwoofer connections. Turn on the subwoofer's power. Set "Speaker Config." – "Subwoofer" on the menu to "Yes". If "Front" and "Center" for "Speaker Config." are set to "Large", and "Subwoofer Mode" is set to "LFE", no sound may be output from the subwoofers, depending on the input signal or selected surround mode. 	5, 31, 32 6 49 49, 50
DTS sound is not output.	<ul style="list-style-type: none"> Set "Decode Mode" on the menu to "Auto" or "DTS". 	44
Dolby TrueHD, DTS-HD, Dolby Digital Plus audio is not output.	<ul style="list-style-type: none"> Make HDMI connections. 	14

[HDMI]

Symptom	Cause/Solution	Page
No audio is output with HDMI connection.	• Check the connection of the HDMI connectors.	14
	• When outputting HDMI audio from the speakers, set "HDMI Audio Out" on the menu to "Amp".	51
	• When outputting HDMI audio from a TV, set "HDMI Audio Out" on the menu to "TV".	51
No video is output with HDMI connection.	• Check the connection of the HDMI connectors.	14
	• Set the input source to match the connected HDMI connector.	14, 21
	• Check whether the TV is compatible with copyright protection (HDCP). If connected to a device not compatible with HDCP, video will not be output correctly.	14
When the following operations are performed on devices compatible with HDMI control, the same operations occur on this unit. • Power ON/OFF • Switching audio output devices • Adjust volume • Switch input source	• Set "HDMI Control" on the menu to "OFF". To operate power only for each device, set "Power Off Control" to "OFF".	35, 51

[Radio]

Symptom	Cause/Solution	Page
Reception fails, or there is a lot of noise or distortion.	• Change the antenna orientation or position.	20
	• Separate the AM loop antenna from the unit.	20
	• Use an FM outdoor antenna.	20
	• Separate the antenna from other connection cables.	20

[iPod]

Symptom	Cause/Solution	Page
iPod cannot be played.	• Check the iPod connections.	18
	• Switch the input source to "USB".	21
	• Incompatible iPod types cannot be played back.	18
"Connection Error" is displayed.	• Unable to communicate properly. Turn off the power to this unit, disconnect the iPod and then reconnect it.	-
"Not Support" is displayed.	• The iPod connected to the unit is not compatible. Please make sure the iPod you are connecting is compatible.	18
	• The software version of the connected iPod is an old one. Please update to the latest version.	-
"Connection Error" is displayed.	• The iPod is not responding. Turn off the power to this unit, disconnect the iPod and then reconnect it.	-

[USB memory device]

Symptom	Cause/Solution	Page
When a USB memory device is connected, "USB" is not displayed on the menu.	• The set cannot recognize a USB memory device. Check the connection.	18
	• A USB memory device not conforming to mass storage class is connected. Connect a USB memory device conforming to mass storage class.	-
	• A USB memory device cannot be connected via a USB hub.	18
Files on a USB memory device cannot be played.	• Set the USB memory device format to "FAT16" or "FAT32". For details, refer to the USB memory device's operating instructions.	-
	• If the USB memory device is divided into multiple partitions, only files stored in the top partition can be played.	-
	• The file is recorded in an incompatible format. Please record it in a compatible format.	-
	• This unit cannot play back files covered by copyright protection.	-
The file names are not displayed properly ("...", etc.).	• Characters that cannot be displayed on this unit are replaced by "." (period).	22
The sound quality is poor or there is noise during playback.	• The file being played back has a low bit rate.	-
"Connection Error" is displayed.	• Unable to communicate properly. Turn off the power to this unit, unplug the USB memory device and then plug it back in.	-
	• The USB memory device is not responding. Turn off the power to this unit, unplug the USB memory device and then plug it back in.	-
"Overcurrent" is displayed.	• The USB memory device is consuming too much power. When using a USB portable hard disk that can be powered by an AC adapter, connect its AC adapter.	-

[M-XPort]

Symptom	Cause/Solution	Page
Audio is not output when a wireless receiver (RX101 is connected).	• Check that the Bluetooth device and Wireless receiver (RX101) are correctly paired.	-

[Remote control unit]

Symptom	Cause/Solution	Page
The set cannot be operated with the remote control unit.	• Batteries are worn out. Replace with new batteries.	64
	• Operate the remote control unit within a distance of about 7 m from this unit and at an angle of within 30°.	64
	• Remove any obstacle between this unit and the remote control unit.	64
	• Insert the batteries in the proper direction, checking the ⊕ and ⊖ marks.	64
	• The set's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.). Move the set to a place in which the remote control sensor will not be exposed to strong light.	64

Resetting the microprocessor


Perform this procedure if the display is abnormal or if operations cannot be performed.

When the microprocessor is reset, all the settings are reset to their default values.

Various setting details can be saved and reset on this device. If setting details are saved before returning to the default values, after returning to the default settings, setting details can be returned to the same values as before returning to the defaults.



To return all of the settings to the default values, perform steps 2 to 4 without performing step 1.

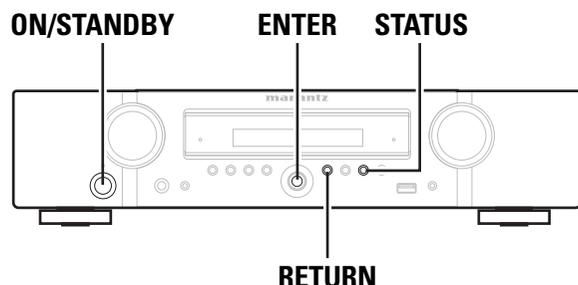

1 When the power is ON, press and hold **STATUS** and **ENTER** for more than 3 seconds. After "MEMORY SAVING" is shown on the display, "COMPLETE" is shown to inform you that the settings have been saved.

2 Turn off the power using **ON/STANDBY**.

3 Press **ON/STANDBY** while simultaneously pressing **ENTER** and **RETURN**.

4 Once the display starts flashing at intervals of about 1 second, release the two buttons.

5 Press and hold **STATUS** and **ENTER** for more than 3 seconds. After "MEMORY LOAD" is shown on the display, "COMPLETE" is shown to inform you that the settings have returned to those saved in step 1.



If in step 4 the display does not flash at intervals of about 1 second, start over from step 2.

Specifications

Audio section

Power amplifier

Rated output:

Front:

50 W + 50 W (8 Ω, 20 Hz – 20 kHz with 0.08 % T.H.D.)

75 W + 75 W (6 Ω, 1 kHz with 10 % T.H.D.)

Center:

50 W (8 Ω, 20 Hz – 20 kHz with 0.08 % T.H.D.)

75 W (6 Ω, 1 kHz with 10 % T.H.D.)

Surround:

50 W + 50 W (8 Ω, 20 Hz – 20 kHz with 0.08 % T.H.D.)

75 W + 75 W (6 Ω, 1 kHz with 10 % T.H.D.)

Surround Back:

50 W + 50 W (8 Ω, 20 Hz – 20 kHz with 0.08 % T.H.D.)

75 W + 75 W (6 Ω, 1 kHz with 10 % T.H.D.)

6 – 8 Ω

Output connectors:

Analog

Input sensitivity/Input impedance:

130 mV/50 kΩ

Frequency response:

10 Hz – 100 kHz — ±3 dB (Source Direct mode)

S/N:

98 dB (IHF-A weighted, Source Direct mode)

Video section

Standard video connectors

Input/output level and impedance:

1 Vp-p, 75 Ω

Frequency response:

5 Hz – 10 MHz — +1, -3 dB

Color component video connector

Input/output level and impedance:

Y (brightness) signal — 1 Vp-p, 75 Ω

P_B / C_B signal — 0.7 Vp-p, 75 Ω

P_R / C_R signal — 0.7 Vp-p, 75 Ω

Frequency response:

5 Hz – 60 MHz — +0, -3 dB

Tuner section

[FM]

[AM]

(Note: μV at 75 Ω, 0 dBf = 1 × 10⁻¹⁵ W)

Receiving Range:

87.5 MHz – 107.9 MHz

520 kHz – 1710 kHz

Usable Sensitivity:

1.2 μV (12.8 dBf)

18 μV

50 dB Quieting Sensitivity:

MONO 2.8 μV (20.2 dBf)

S/N (IHF-A):

MONO 70 dB

STEREO 67 dB

Total harmonic Distortion (at 1 kHz):

MONO 0.7 %

STEREO 1.0 %

General

Power supply:

AC 120 V, 60 Hz

Power consumption:

250 W

0.2 W (Standby)

3 W (CEC standby)

Maximum external dimensions:

440 (W) x 105 (H) x 367 (D) mm

Weight:

9.0 kg

Remote control unit (RC010SR)

Batteries:

R03/AAA Type (two batteries)

For purposes of improvement, specifications and design are subject to change without notice.

Index

Numerics

2.1-channel	30, 32
3D	14
5.1-channel	4
6.1-channel	30, 31
7.1-channel	30, 31

A

A2DP	20, 70
Accessories	1
Adjust CH	48
Adobe RGB color / Adobe YCC601 color	70
AM loop antenna	20
Amp Assign	49
ARC	15
Audio Adjust	45
Audio cable	5, 16, 17, 19
Audio Delay	48
Audio Setup	52
Audyssey Auto Setup	6, 33
Audyssey Dynamic EQ	47, 70
Audyssey Dynamic Volume	47, 70
Audyssey MultEQ	46, 61, 70
Audyssey Settings	46
Auto Lip Sync	51, 70
Auto Preset	41
Auto Setup	6, 33

B

Base Curve Copy	48
Bass	46
Bass Setting	50
Bi-amp	32
Bluetooth	20, 70

C

Cable	
Audio cable	5, 16, 17, 19
Coaxial digital cable	17
Component video cable	16, 17
HDMI cable	5, 15
Optical cable	16, 19
Speaker cable	5
Stereo mini plug cable	17
Video cable	16, 17
Center Image	45
Center Width	45
Channel Level	51
Characters	39
Coaxial digital cable	17

Component video cable	16, 17
Condensation	2
Connection	
Antenna	20
Blu-ray Disc player	15, 16
Cable TV	17
CD player	19
DVD player	15, 16
Game console	15
HDMI	14
iPod	18
Portable audio player	17
Power cord	5
Remote control jacks	34
Satellite tuner	17
Set-top box	15, 17
Speaker	4, 31
TV	5, 15, 16
USB memory device	18
Wireless receiver	20
Crossover Frequency	51

D

D.Comp	45
Decode Mode	44
Deep Color	14, 70
Dimension	45
Direct mode	22
Display	53, 61
Distance	50
Dolby	
Dolby Digital	27, 70
Dolby Digital EX	27, 70
Dolby Digital Plus	27, 70
Dolby Headphone	28, 70
Dolby Pro Logic II	70
Dolby Pro Logic IIx	70
Dolby Pro Logic IIz	30, 70
Dolby TrueHD	27, 70
Dolby Virtual Speaker	28, 70
Downmix	70
DRC	45
DTS	27, 70
DTS 96/24	27, 70
DTS-ES Discrete 6.1	27, 70
DTS-ES Matrix 6.1	27, 70
DTS-HD	27, 71
DTS-HD High Resolution Audio	71
DTS-HD Master Audio	71
DTS Digital Surround	70
DTS Express	70
DTS NEO:6™ Surround	26, 71
DTS Neural Surround	26, 71

Dynamic EQ	47
Dynamic range	71
Dynamic Volume	47

E

EQ Customize	52
Error messages (Auto Setup)	10

F

FM indoor antenna	20
Front A/B (connection)	32
Front Height	50
Front height speaker	30, 31
Front Panel	61
Front Speaker Setup	51

H

HDCP	14, 71
HDMI	14, 71
HDMI 1.4a	14, 15
HDMI Audio Out	51
HDMI cable	5, 15
HDMI Control	35, 51
HDMI Setup	51
Headphones	61
Height Gain	46
HT-EQ	45

I

Information	53
Audio Input Signal	53
HDMI Information	53
Preset Channel	53
Status	53
Input Assign	42
Input Mode	43
Input Setup	40
Input signal	27, 68

L

Learn mode	58
LFE	45, 71
Listening mode	26
Listening position	7

M

Manual EQ	48
Manual Setup	49
Master volume display	52
M-DAX	48
Menu map	37
MP3	71

MPEG	71
MPEG-4 AAC	71
MultEQ	46
Mute Level	52
M-XPort	20

O

On-Screen Display	52
Output mode	54
Optical cable	16, 19
Option Setup	52
Display	53
On-Screen Display	52
Setup Lock	53
Source Delete	52
Volume Control	52

P

Pairing	71
Panorama	45
Parameter Check	10
Playback	
Blu-ray Disc player	22
CD player	22
Direct	28
DVD player	22
FM/AM broadcasts	24
iPod	22
MP3	23
MPEG-4 AAC	23
Standard	26
Stereo	28
USB memory device	23
WMA	23
Playback Mode	44
Power Off Control	52
Power On Level	52
Preset codes	55
Preset Name	42
Preset Skip	41
Presetting radio stations	24
Protection circuit	71

R

Rear panel	62
Reference Level Offset	47
Remote control unit	55, 63
Inserting the batteries	64
Operating AV equipment	55
Operating components	57
Registering Preset Codes	55
Remote mode	22

Rename 44
 Repeat 44
 Resetting the microprocessor 74

S

Sampling frequency 71
 S.Back 50
 Screensaver 52
 Selecting the input source 21
 Setup Lock 53
 Shuffle 44
 Sleep timer 36
 Source Delete 52
 Source Level 44
 Speaker
 Connect 4, 31
 Install 4, 30
 Set up 6, 33
 Speaker cable 5
 Speaker Config. 49
 Speaker impedance 4, 71
 Speaker Setup 49
 Standby Source 51
 Stereo mini plug cable 17
 Subwoofer setting 7
 Surround back speaker 30, 31
 Surround Mode 26, 66
 Surround Parameter 45
 sYCC601 color 71

T

Tone 46
 Tone Control 46
 Trademark 65
 Treble 46
 Turn off power (standby) 11
 Turn on power 6

V

Video 43
 Video cable 16, 17
 Video conversion 13
 Video Mode 43
 Video Select 43
 Volume Control 52
 Volume Limit 52

W

WAV 71
 WMA 71

X

x.v.Color 71

Device select : BD

Blu-ray Disc Player

D	Denon	5034, 5035, 5036
H	Hitachi	5031, 5032, 5033
I	Integra	5013
J	JWC	5014, 5015, 5017, 5018, 5019, 5020
L	LG	5010, 5011
M	Marantz	5000, 5026, 5027
	Mitsubishi	5024, 5025
O	Onkyo	5013
P	Panasonic	5001, 5002, 5003
	Philips	5004
	Pioneer	5005
R	RCA	5012
S	Samsung	5005
	Sharp	5028, 5029, 5030
	Sony	5007, 5008, 5009, 5016
T	Toshiba	5012
Y	Yamaha	5021, 5022, 5023

Device select : DVD

DVD Player

A	Aiwa	2036, 2037
	Apex	2012, 2017, 2018, 2019, 2021, 2034
B	BOSE	2038, 2039, 2063
D	Denon	2047, 2048
F	Funai	2049
G	GE	2009, 2020, 2029, 2033
H	Harman Kardon	2061
	Hitachi	2008, 2012, 2031
J	JVC	2006, 2010, 2040, 2041, 2042, 2043
K	Kenwood	2053, 2054
	Koss	2058
M	Magnavox	2007, 2011, 2023, 2025
	Marantz	2025, 2065
	Marantz (Blu-ray)	2064
	Mitsubishi	2011, 0215
O	Onkyo	2062
	Oritron	2009, 2030
P	Panasonic	2003, 2015, 2016, 2055
	Philips	2007, 2011, 2058
	Pioneer	2002, 2014, 2056
	Proscan	2009, 2020, 2032
R	RCA	2005, 2009, 2020, 2035, 2057
S	Sampo	2041

	Samsung	2008, 2012, 2022, 2024, 2027
	Sanyo	2050, 2052
	Sharp	2044, 2045
	Sherwood	2051
	Sony	2001, 2013, 2059
T	Toshiba	2004, 2008, 2026, 2028
Y	Yamaha	2046, 2060
Z	Zenith	2010

Device select : SAT

Satellite Receiver

A	Alphastar	4027
	Amstrad	4046, 4047, 4050
	Atsky	4048
B	B Sky B	4021, 4045, 4046
C	Chaparral	4039
D	DIRECTV	4001, 4016, 4044
	DISH Network	4030
	Drake	4026
E	EchoStar	4007, 4017, 4018, 4019, 4020, 4062, 4063, 4064
	Eurosky	4047, 4056
	Express Vu	4017
F	Foxtel	4051
	Freesat	4056
	Fujitsu	4025
G	GE	4002, 4008, 4009
	General Instruments	4036, 4037
	Gradiente	4044, 4057
H	Hitachi	4001, 4015
	Hughes	4001, 4016
	Humax	4049, 4050, 4051, 4052, 4053
J	Janeil	4025
	JVC	4017
M	Mitsubishi	4001
N	Nokia	4058, 4059, 4060, 4061
O	Optima	4048
P	Panasonic	4004, 4010
	Philips	4031, 4035, 4044, 4057
	Proscan	4002, 4008, 4009, 4011
R	Radio Shack	4036, 4037
	RCA	4002, 4008, 4009, 4029
	Realistic	4040
	Rural Cable	4036
S	Samsung	4022, 4027, 4042, 4043, 4050, 4054, 4055
	Schneider	4041, 4043
	SKY	4044, 4045, 4057
	Skyplus	4048

	Skysat	4041, 4047, 4056
	Sony	4003, 4012, 4014, 4065, 4066, 4067
	Star Choice	4032
	Star Trak	4024
	STS	4038
	SuperDish	4028
T	Teac	4049
	Thomson	4046, 4056
	Toshiba	4001, 4034
U	Uniden	4005, 4006, 4013
	Universum	4056
V	Video Pall	4025
Z	Zenith	4023, 4025, 4033

Device select : TV

Television

A	Acer	1141
	Admiral	1002, 1009, 1089
	Aiko	1059
	Aiwa	1117, 1118
	Akai	1001
	Amtron	1023
	Anam	1113
	Anam National	1023, 1069, 1092
	AOC	1003, 1024, 1049, 1127
	Audiovox	1023
B	Bell & Howell	1009, 1025
	Benq	1104, 1142
	Broksonic	1003, 1097, 1098, 1113
C	Celebrity	1001
	Citizen	1003, 1013, 1023, 1026, 1059, 1063
	Colortyme	1003, 1043
	Contec	1113
	Contec/Cony	1023, 1045, 1047
	Craig	1020, 1022, 1023, 1113
	Crown	1023, 1067
	Curtis Mathes	1003, 1013, 1025, 1026, 1062, 1103, 1110
D	Daewoo	1003, 1013, 1024, 1035, 1036, 1059, 1084, 1101
	Daytron	1003, 1013, 1016
	Dimensia	1103, 1110
	Dumont	1003, 1010, 1153
E	Electroband	1001
	Electrohome	1001, 1003, 1069, 1133
	Emerson	1003, 1013, 1015, 1020, 1021, 1022, 1023, 1025, 1038, 1044, 1045, 1048, 1055, 1061, 1094, 1096, 1099, 1101, 1113
	Envision	1003

F	Fisher	1025, 1051, 1091, 1160
	Fujitsu	1038, 1124, 1125, 1155
	Funai	1023, 1038, 1113
G	Gateway	1150
	GE	1003, 1018, 1022, 1046, 1054, 1069, 1085, 1103, 1110, 1113, 1133, 1136, 1153
	Goldstar	1003, 1013, 1024, 1030, 1045, 1080, 1100, 1112, 1154
H	Hallmark	1003
	Hisense	1116
	Hitachi	1003, 1012, 1031, 1032, 1037, 1041, 1045, 1047, 1065, 1068, 1082, 1088, 1094, 1139, 1140, 1145, 1159
I	Infinity	1067
J	Janeil	1134
	JBL	1067
	JC Penney	1003, 1013, 1018, 1019, 1024, 1026, 1046, 1047, 1054, 1063, 1083, 1085, 1100, 1103, 1110, 1112, 1133, 1154
	Jensen	1003
	JVC	1028, 1029, 1045, 1047, 1050, 1060, 1065
K	Kawasho	1001, 1003
	Kenwood	1003
	Kloss Novabeam	1023, 1056, 1057, 1134
	KTV	1013, 1023, 1033, 1034, 1073, 1099, 1113
L	LG	1024, 1030
M	M.Wards	1002, 1009, 1038
	Magnavox	1003, 1052, 1053, 1056, 1057, 1063, 1067, 1081, 1106
	Marantz	1003, 1031, 1067, 1122
	Mitsubishi	1003, 1024, 1051, 1115, 1122, 1133
	Motorola	1014, 1069
N	NEC	1003, 1012, 1024, 1043, 1069
	NET-TV	1137, 1150
O	Orion	1020, 1096
P	Panasonic	1017, 1067, 1069, 1095, 1111
	Philips	1003, 1011, 1045, 1052, 1054, 1056, 1057, 1058, 1063, 1067, 1069, 1106
	Pioneer	1003, 1018, 1037, 1070, 1071, 1094, 1145, 1147, 1149
	PlasmSync	1135
	Portland	1003, 1013, 1024, 1059
	Price Club	1026
	Prism	1018
	Proscan	1004, 1005, 1006, 1007, 1008, 1085, 1103, 1110
	Proton	1003, 1045

Q	Quasar	1010, 1069, 1073, 1111, 1153
R	Radio Shack	1003, 1013, 1015, 1023, 1024, 1025, 1045, 1100, 1103, 1110, 1113
	RCA	1003, 1004, 1005, 1006, 1007, 1008, 1014, 1024, 1049, 1069, 1075, 1079, 1085, 1087, 1088, 1093, 1094, 1101, 1103, 1110, 1113, 1153
	Realistic	1013, 1015, 1023, 1025, 1045, 1100, 1103, 1110
	Runco	1010, 1153
S	Sampo	1150
	Samsung	1003, 1013, 1024, 1026, 1040, 1045, 1062, 1078, 1083, 1090, 1100, 1105, 1114, 1120, 1121, 1146, 1148, 1157
	Sansui	1119
	Sanyo	1003, 1025, 1051, 1072, 1077, 1091, 1156, 1157, 1158
	Sharp	1003, 1013, 1014, 1015, 1045, 1055, 1064, 1066, 1076, 1089, 1123
	Signature	1009
	Sony	1001, 1102, 1108
	Soundesign	1003, 1023, 1038, 1063, 1113
	Starlite	1023
	Supre-Macy	1134
	Sylvania	1003, 1039, 1042, 1052, 1053, 1056, 1057, 1063, 1067, 1089, 1113
	Symphonic	1023, 1039, 1044
T	Tandy	1014
	Tatung	1069
	Technics	1018
	Techwood	1003, 1018
	Teknika	1003, 1009, 1013, 1023, 1024, 1026, 1038, 1045, 1047, 1059, 1063, 1111, 1113
	Telecaption	1074
	Toshiba	1003, 1019, 1025, 1026, 1042, 1074, 1098, 1107, 1111, 1135, 1136
	Totevision	1013
U	Universal	1046, 1054
V	Video Concepts	1113
	Viewsonic	1006, 1022, 1109, 1128, 1129, 1130, 1131, 1138, 1143, 1145, 1150
	Wards	1003, 1009, 1015, 1024, 1038, 1044, 1046, 1052, 1054, 1056, 1057, 1067, 1086, 1103, 1110
	White Westinghouse	1001, 1101
Y	Yamaha	1003, 1024
Z	Zenith	1003, 1009, 1010, 1132, 1144, 1153

Device select : CD

CD Player

A	AIWA	3001, 3002, 3003
	AKAI	3004, 3005, 3006
	AUDIO	3007
	AUDIO LABS	3008
C	CALIFORNIA	3008
	CARVER	3010, 3011, 3009
	CASIO	3012, 3020
	CURTIS	3020, 3012
D	DENON	3013
E	EMERSON	3014
F	FISHER	3011, 3015, 3016, 3017, 3018
G	GE	3019
	GENEXXA	3014, 3021, 3020
H	HARMON	3022, 3023, 3051
	HITACHI	3020
I	INKEL	3024
J	JC PENNEY	3012, 3020, 3025
	JVC	3026, 3027
K	KARDON	3022, 3051, 3023
	KRELL	3010
L	LUXMAN	3035, 3036, 3037, 3038
	LX I	3012, 3020, 3014
M	MAGNAVOX	3010, 3039, 3040
	MARANTZ	3010, 3041, 3042, 3043
	MATHES	3012, 3020
	MCS	3012, 3020
	MGA	3023
	MISSION	3010
	MITSUBISHI	3023, 3044
N	NAD	3034, 3045
	NAKAMICHI	3046, 3047, 3048
	NEC MCS	3025
	NIKKO	3007, 3016
O	ONKYO	3049, 3050, 3051, 3052, 3055, 3102, 3103
	OPTIMUS	3011, 3014, 3020, 3028, 3053, 3054, 3056, 3057, 3058, 3059
P	PANASONIC	3008, 3060, 3061
	PHILIPS	3009, 3010, 3010, 3040
	PIONEER	3020, 3021, 3062, 3063, 3064
Q	QUASAR	3008
R	RCA	3011, 3014, 3065, 3066, 3067, 3068, 3069
	REALISTIC	3011, 3014, 3020, 3042, 3054, 3057
	ROTEL	3010
	RS ORIGINAL	3070
S	SAE	3010, 3083

SAMSUNG	3071	
SANSUI	3014, 3068, 3072, 3073	
SANYO	3011, 3018, 3074, 3075, 3076	
SCOTT	3014	
SEARS	3012, 3014, 3020, 3028, 3042	
SHARP	3028, 3042, 3077	
SHERWOOD	3042, 3056, 3070, 3078, 3024	
SHURE	3025	
SONY	3039, 3079, 3080, 3081, 3082, 3097, 3098, 3099, 3100, 3101	
SYLVANIA	3010	
SYMPHONIC	3083	
T	TEAC	3016, 3042, 3057, 3083, 3084, 3085, 3086
	TECHNICA	3007, 3008, 3061, 3087, 3088
	THETA DIGITAL	3040
	TOSHIBA	3045
V	VICTOR	3026
Y	YAMAHA	3007, 3089, 3090, 3091, 3092
Z	ZENITH	3016, 3093, 3094, 3095, 3096



www.marantz.com

You can find your nearest authorized distributor or dealer on our website.

marantz[®] is a registered trademark.